



# Disassembling Polaroid a520 LCD Screen

Replacing the LCD screen.

Written By: Dani



## INTRODUCTION

How to replace the LCD screen if it is broken or cracked.

### TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [64 Bit Driver Kit](#) (1)

## Step 1 — Disassembling Polaroid a520 Battery



- Locate the battery cover on the bottom of the camera.

## Step 2



- Place your thumb on the battery cover and push towards the arrow. The cover will release and pop open.

## Step 3



- Remove the batteries from the camera.

## Step 4 — Disassembling Polaroid a520 Casing



- Unscrew and remove four (3mm) screws on the right side of the camera. This will release the front and back casings.

## Step 5




- Use your nail or a flat object to pry up the edge of the front casing. Push the casing up and back.
- Repeat this step for the back casing.

## Step 6 — Disassembling Polaroid a520 LCD Screen



- Locate the black plastic strip under the screen above the white plastic strip.

## Step 7

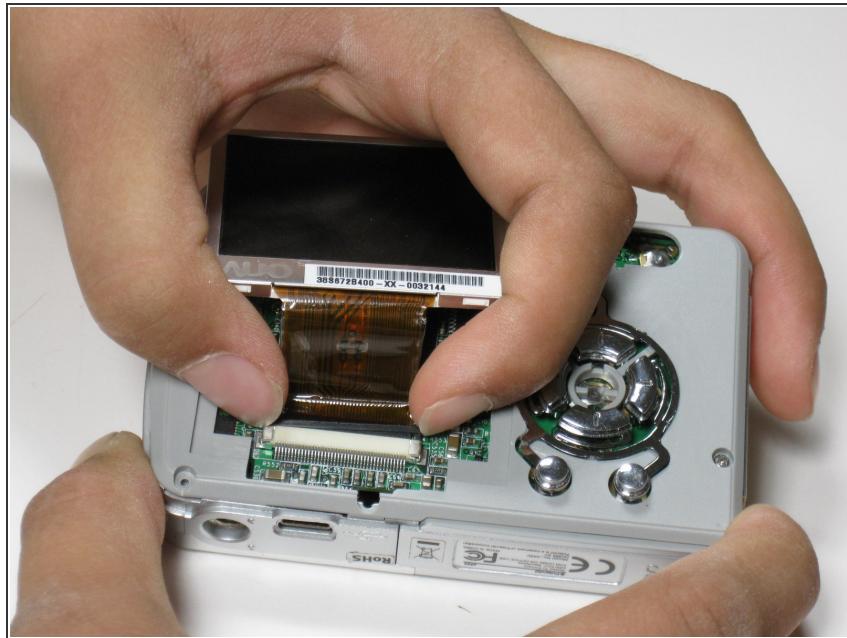

- Pull up both sides of the black piece up about a mm.
- ⚠ The black plastic piece is not meant to come all the way off, just enough to release the screen.
- Once the piece is lifted carefully slide the screen out of the slot.

To reassemble your device, follow these instructions in reverse order.