



Disassembling RCA CC310 Left Cover

Remove the left cover of an RCA CC310 camcorder.

Written By: Ashley Katchadourian



INTRODUCTION

This guide will instruct you to take the left cover off of the camcorder.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Disassembling RCA CC310 Left Cover




- Remove the six 7.9mm Phillips #0 screws on the back and bottom.
- Remove the one 3.8mm Phillips #0 screw on the bottom.
- Remove the two 7.5mm Phillips #0 screws on the back and bottom.

Step 2




- Remove 5.8mm Phillips #1 screw from the side button panel.
- Slide the viewfinder all the way to the right and remove the 7.9mm Phillips #0 screw.

Step 3

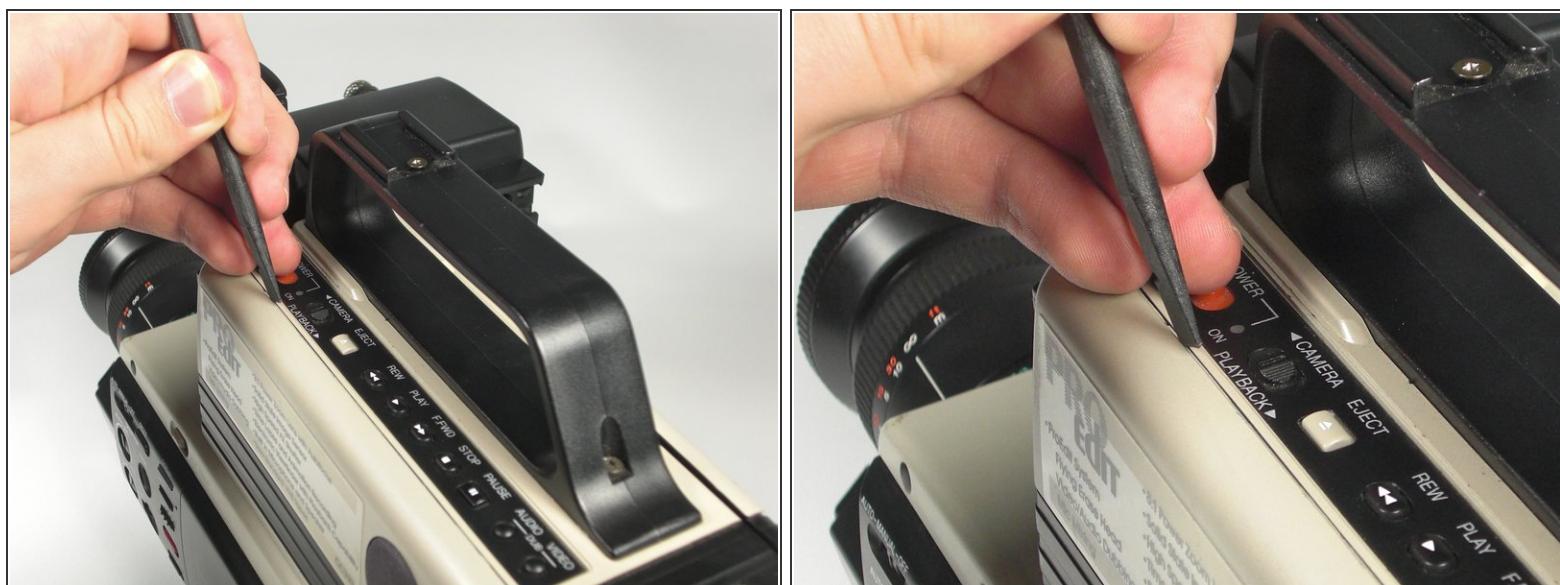

- Pry along the seam on the top side near the buttons with a spudger.

Step 4

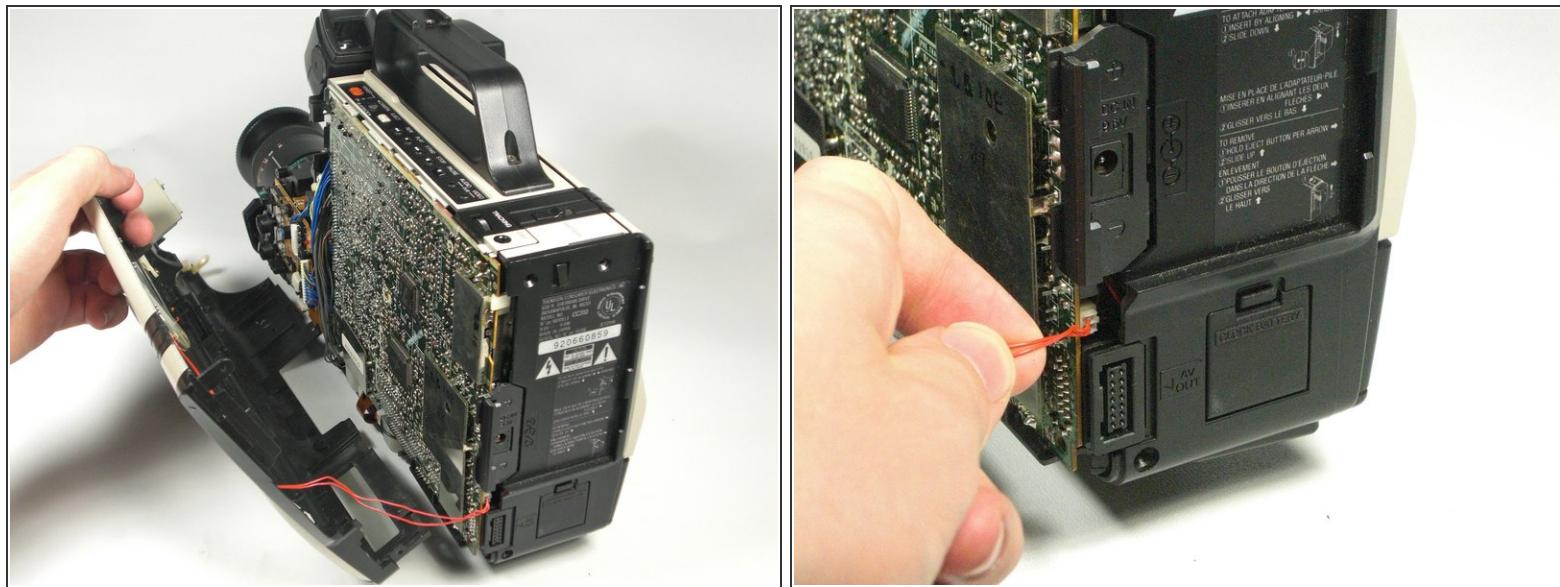

- Pull the left panel away from the rest of the camcorder.
- Unplug the red speaker cable located at the rear of the device.

⚠ Be careful to not pull too hard. The speaker cable is still connected to the panel and it can rip.

To reassemble your device, follow these instructions in reverse order.