



# Disassembling Samsung HMX-W300

How to disassemble the camera.

Written By: Robert



## INTRODUCTION

Shows how to open up the camera without damaging interior content.

### TOOLS:

- [1.5mm Hex Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

## Step 1 — Remove wristband



- To remove the wristband of the device, grab the middle loop and pull. Pull the band through as shown in the picture.

## Step 2 — Front case screw removal




- Remove all four Hex screws with a Hex 1.5 mm screwdriver.

### Step 3 — Remove HDMI screw



- To remove the HDMI screw, open the HDMI door on the side. Remove the screw using a Phillip size 00.


### Step 4 — Open front case.

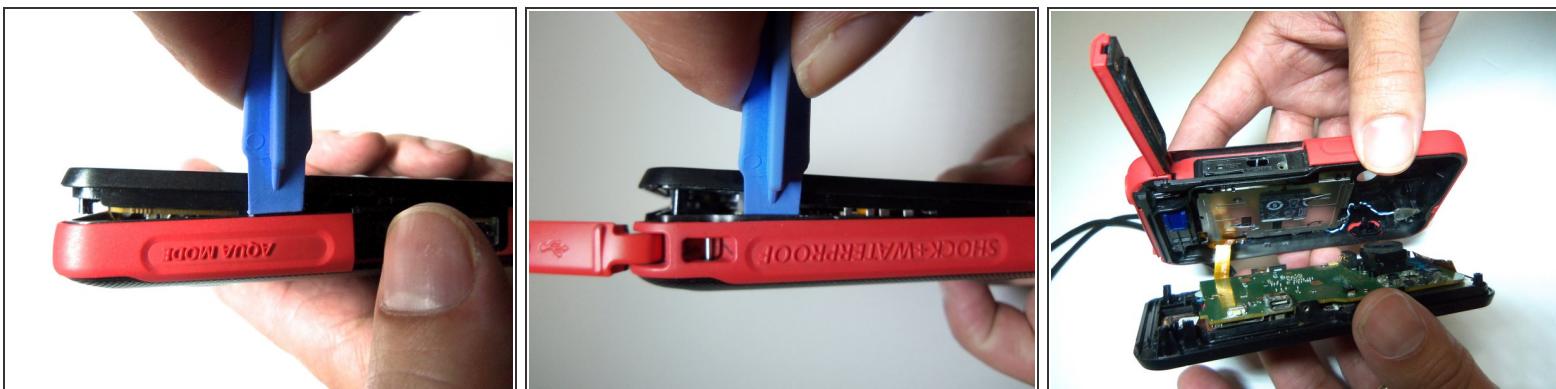

- As shown in the picture, use the plastic opening tool on both sides on the device. Pry apart both parts.

**⚠** Do not pry apart the device too hard. There is a wire that attaches the front case with the rear case.

## Step 5 — Unplug wire.

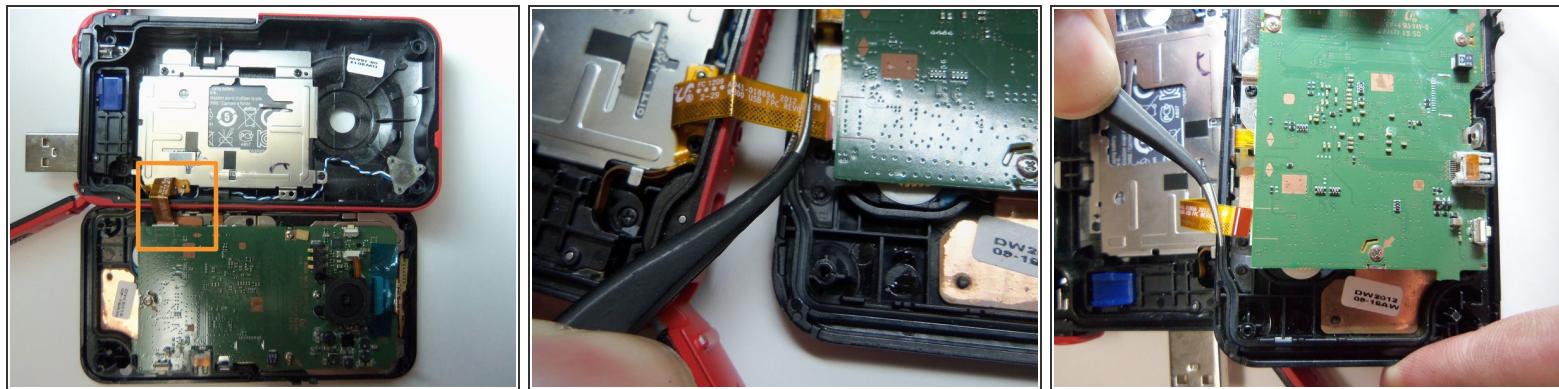

- Pull the wire ribbon out with a pair of tweezers.

To reassemble your device, follow these instructions in reverse order.