



# Disassembling Samsung TFT Color YP-T7J

## Removing the Front Cover

This guide will show you how to take off the front cover of your MP3 player. Removing the front cover will allow access to the screen, buttons, and central processing chip.

Written By: Jason Farr



This document was generated on 2019-10-20 03:23:51 PM (MST).

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — The Back Cover



- Remove the 2 screws on the back cover using a Phillips head #0 screwdriver.

## Step 2



- Remove the screw on each side of the device using a Phillips head screwdriver.

## Step 3



- Using the plastic opening kit, place the prying end of the kit into the opening created by removing the screws.
- Gently pry open the back cover. Insert the plastic opening tool in between the cover joints.

## Step 4 — The Front Cover




- Using the philips screwdriver, remove the two screws on the mother board.

## Step 5




- Place the pry tool in-between the front cover and mother board.
- Gently separate the front cover.

## Step 6

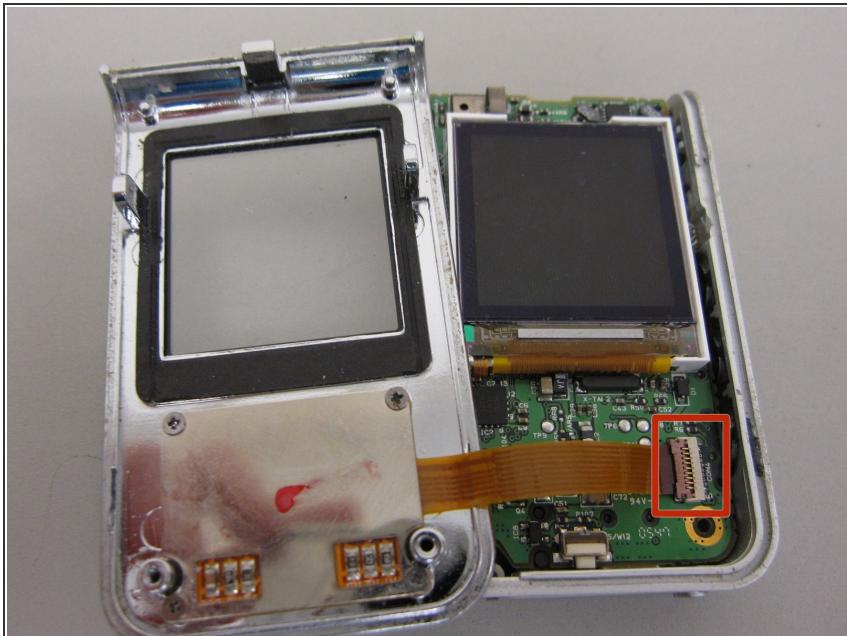

- After opening the front cover you will see an electric ribbon connecting the buttons to the mother board.

## Step 7

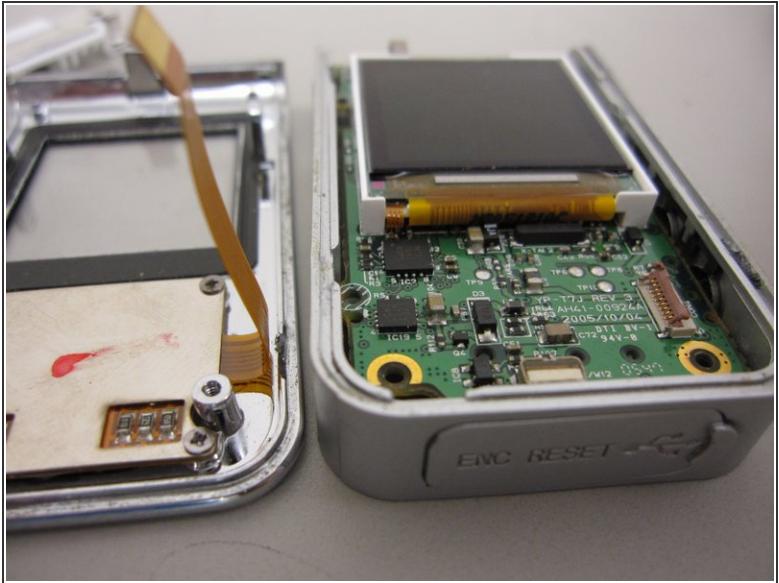

**⚠ CAUTION:** Do not rip the electric ribbon from the mother board.

- Carefully flip up the plastic lip that holds the electric ribbon to the board.

To reassemble your device, follow these instructions in reverse order.