



Disassembling Sanyo SCP-8100 Back Panel

This guide removes the back panel, leading to the speaker or keypad.

Written By: Yemane



Sprint® DUAL-BAND SPRINT PHONE™
sanyo

Model No.
SCP-8100(S)

For information,
call 1-888-211-4PCS

FCC ID AEZSCP-81H

Made in MALAYSIA

ESN DEC: 04501330519

ESN HEX: 2D144D57 32



 **TOOLS:**


- Y1 Tri-point Screwdriver (1)
- iFixit Opening Tools (1)
- Push Pin (1)

Step 1 — Battery



- Push and hold the button on the back toward the direction of the arrow to unlock the battery.
- Lift and remove the battery from the back of the phone.

Step 2 — Back Panel

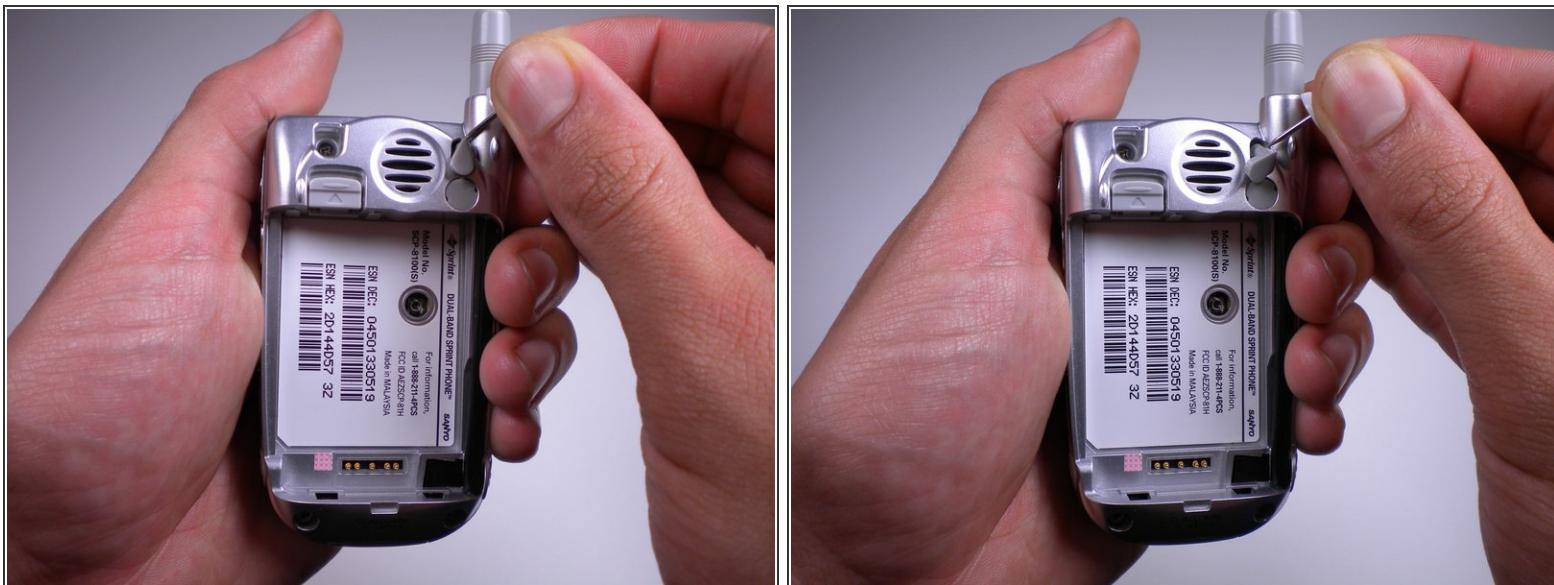

- Using a push pin, pull out the plug on the back, located under the antenna.

⚠ You may try to use a spudger or opening tool, however, you may damage the plug because those tools are too thick.

Step 3



- Unscrew the four 6mm long screws with a Tri-Wing Y1 screwdriver.

Step 4



- Use a plastic opening tool to pry the back panel along the edges.
- (i)* You may need to apply some force when prying.

Step 5



- While removing the back panel, take out the rubber cover on each side.

To reassemble your device, follow these instructions in reverse order.