



Disassembling Skil 88 Front Housing

Open the front housing to access the major parts of the drill.

Written By: Matt




INTRODUCTION

The front housing includes the motor, the chuck, and the gears. There's a good chance that whatever needs to be replaced will be found in here.

TOOLS:

- Flathead Screwdriver (1)

Step 1 — Disassembling Skil 88 Front Housing

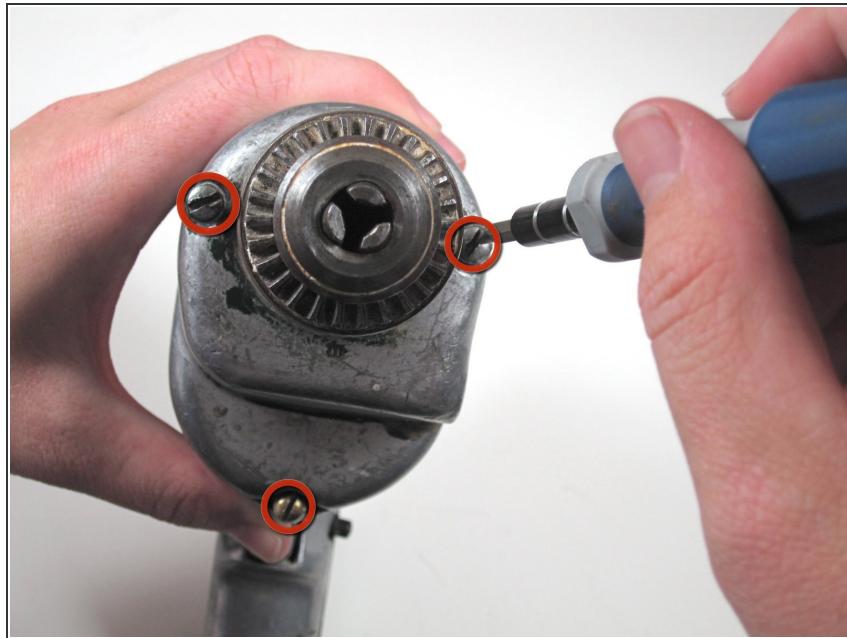

- On the front of the drill, remove the three 2" flathead screws connecting the front housing to the rear housing.

Step 2



- Pull the front housing apart from the rear.

⚠ The motor and gears might fall out when you are pulling it apart.

To reassemble your device, follow these instructions in reverse order.