



Disassembling Sony CCD-TR81 Battery

Taking out the battery on your Sony CCD-TR81.

Written By: Kevin



INTRODUCTION

This guide shows you how to remove the battery or the power cord from the Sony CCD-TR81. It is useful for when the battery fails, or when the power cord breaks. This guide is also a necessary prerequisite to make any other repairs to the camera, as having the power connected to the camera while making repairs could create a shock risk.

Step 1 — Disassembling Sony CCD-TR81 Battery



- Lift viewfinder to access battery pack.

Step 2



- Press the battery release button.
- While pushing the battery button, slide the battery to the left.

Step 3



- Pull the battery pack out of the video camera.

To reassemble your device, follow these instructions in reverse order.