



Disassembling Sony Cyber-shot DSC-T1

Removing Front Cover

This guide contains instructions on how to safely remove the front cover from your camera to access the internal parts.

Written By: iDeleted



This document was generated on 2019-09-22 03:20:37 AM (MST).


INTRODUCTION

Removing the front cover is a necessary first step in disassembling the camera in order to repair or replace any internal parts.

TOOLS:


- **Phillips #00 Screwdriver (1)**

Step 1 — Battery

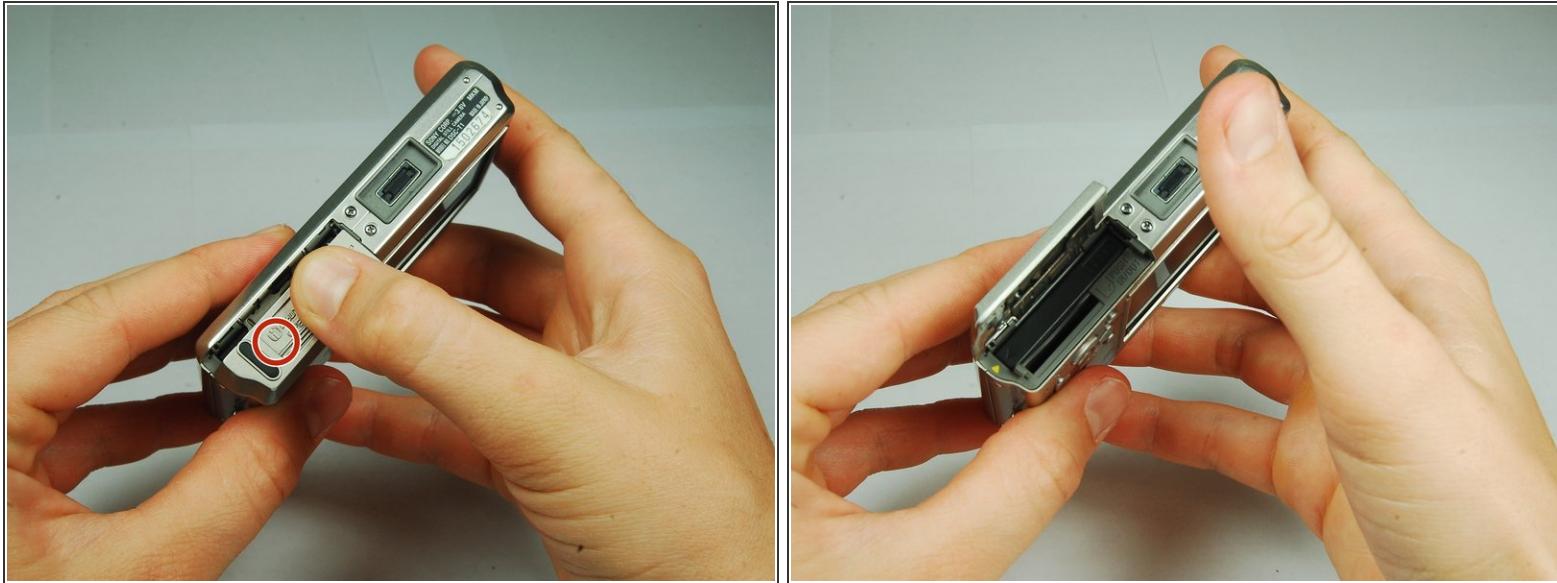

- Locate the battery door at the bottom of the camera.
- Press down on the door and slide it back. The door will pop open.

Step 2

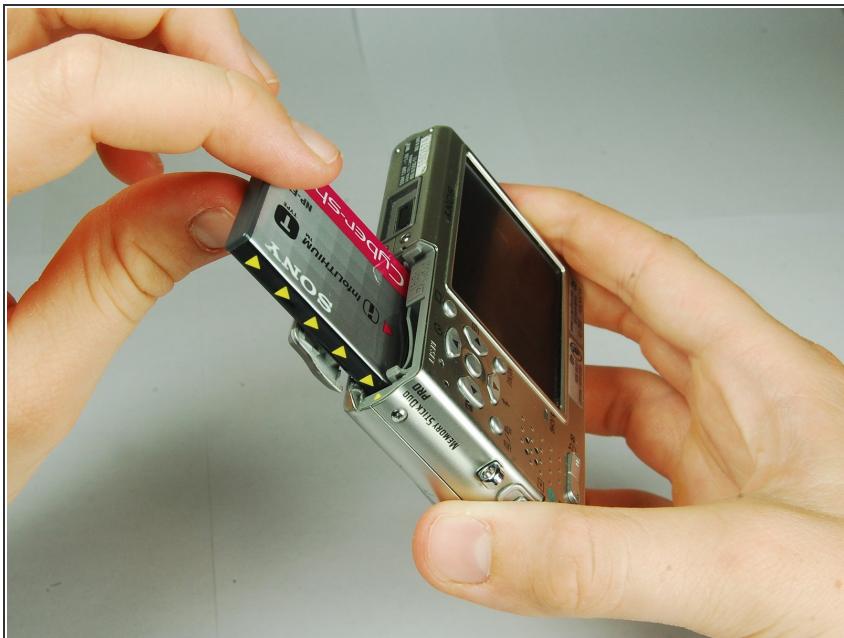

- Remove the battery from the door that you opened in the previous step.


Step 3 — Disassembling Sony Cyber-shot DSC-T1 Removing Front Cover



ⓘ There are two screws on the left and right sides of the camera, and two screws on the bottom.

- Use a PH00 screwdriver and remove the six 2.9mm screws.

Step 4

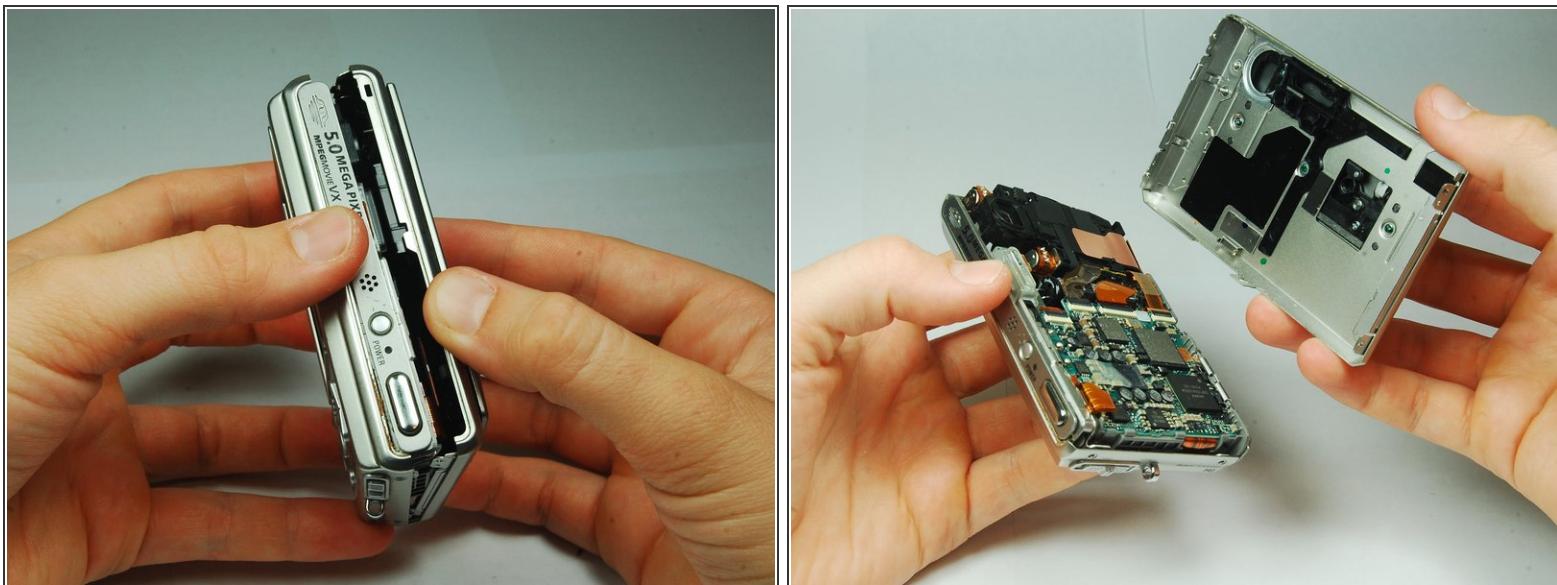

- Use hands to gently pry the front casing away from the camera.

To reassemble your device, follow these instructions in reverse order.