



# Disassembling TomTom One XL Back Panel

Remove the TOMTOM XL back panel to get to other components such as the speaker, battery, LCD Screen, and Power/Reset Button.

Written By: DeVhan



## INTRODUCTION

This guide will show you how to partially disassemble the TomTom One XL.

### TOOLS:

- [T8 Torx Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

## Step 1 — Back Panel



- Remove the 4 .4mm screws on the back of the device.

## Step 2




- Using the palate knife tool, pry the back from the LCD screen. Apply a moderate pressure to separate them.

*(i)* You can rotate TOMTOM XL to make prying back off easier.


**!** Be careful not to injure the two wires connecting the pieces.

## Step 3

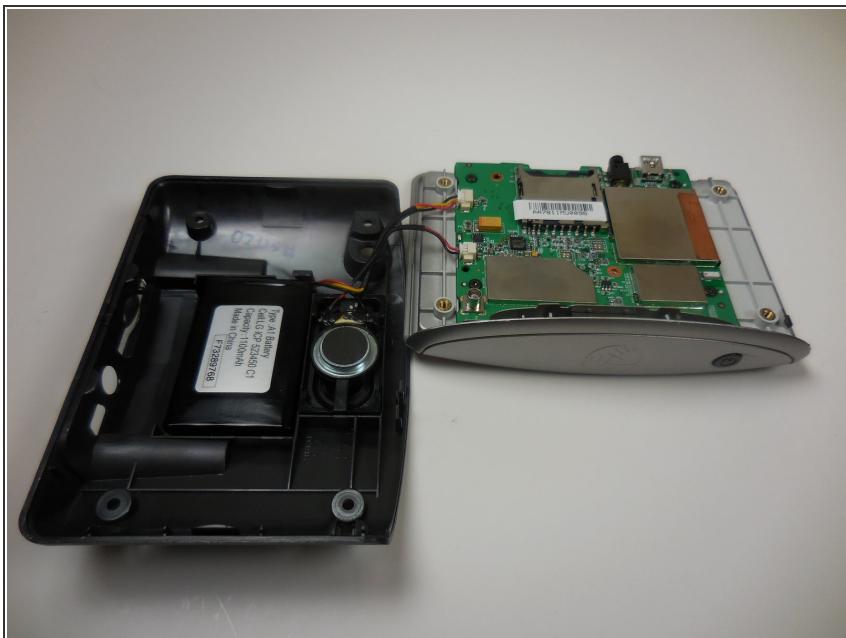

- After prying both halves apart, they will be connected by two wires.
- Carefully set the two halves next to each other making sure not to stress or damage the wires.

## Step 4

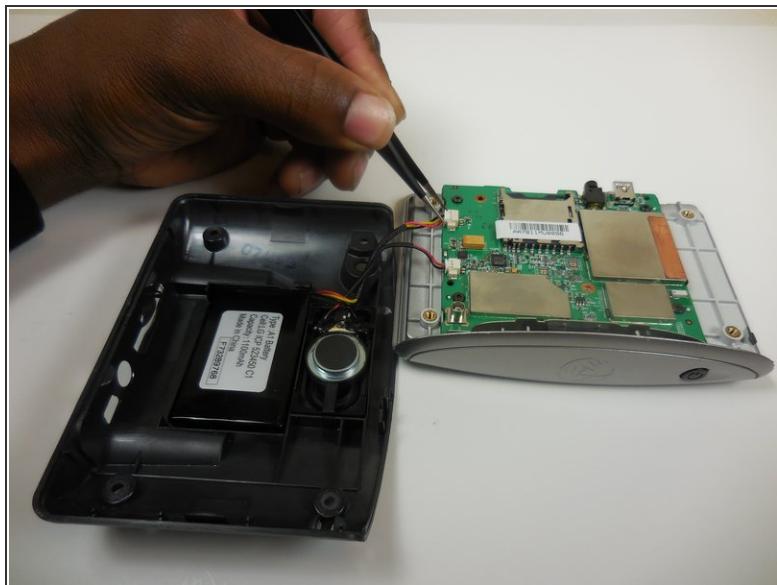

- Using the tweezers separate the wires connecting the battery and speaker to the mother board.

**⚠** Be gentle while pulling the wires out, the plugs are easily injured.

To reassemble your device, follow these instructions in reverse order.