



# Disassembling UPS OVISLINK TRACITE CUBE or CUBO All

Opening the Ovislink Tracite 800 CUBO UPS to change the battery or it's fuse.

Written By: pldestin



## INTRODUCTION

Opening the Ovislink Tracite 800 CUBO UPS to change the battery or it's fuse.

Easy to do when you know how... but no public guide or manual from it's constructor...

First of all... SET THE UPS OFF and UNPLUG IT from main.

### TOOLS:

- Phillips #00 Screwdriver (1)


## Step 1 — Unscrew the front panel



**⚠** Before you begin, be sure to shut off the UPS and unplug it. You do not want the UPS to kick in while you're performing the procedure.


- Remove the screws (2) under the device

## Step 2 — Open the front pannel

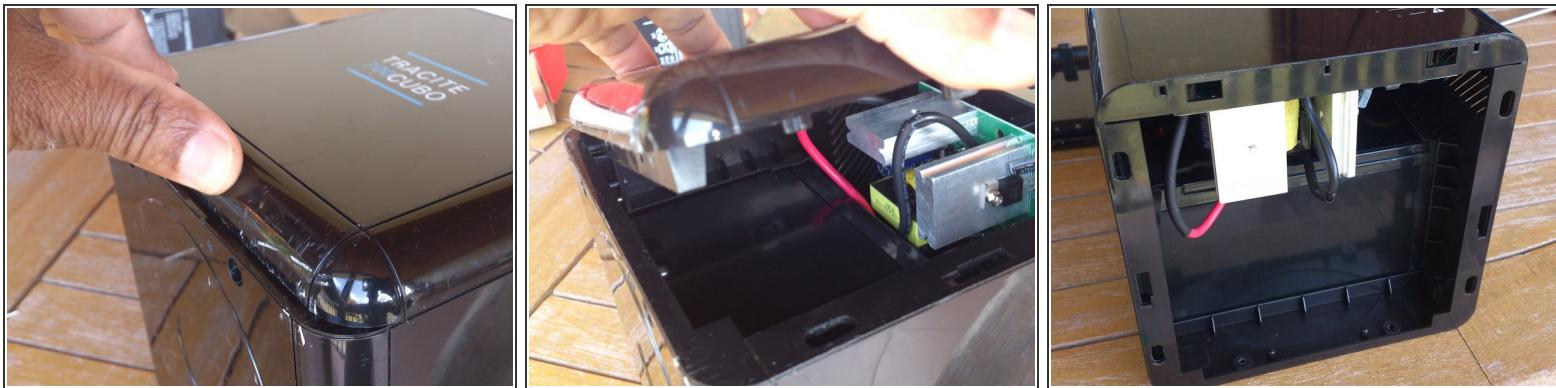


- Slide the front pannel up

## Step 3 — Remove the Bottom pannel

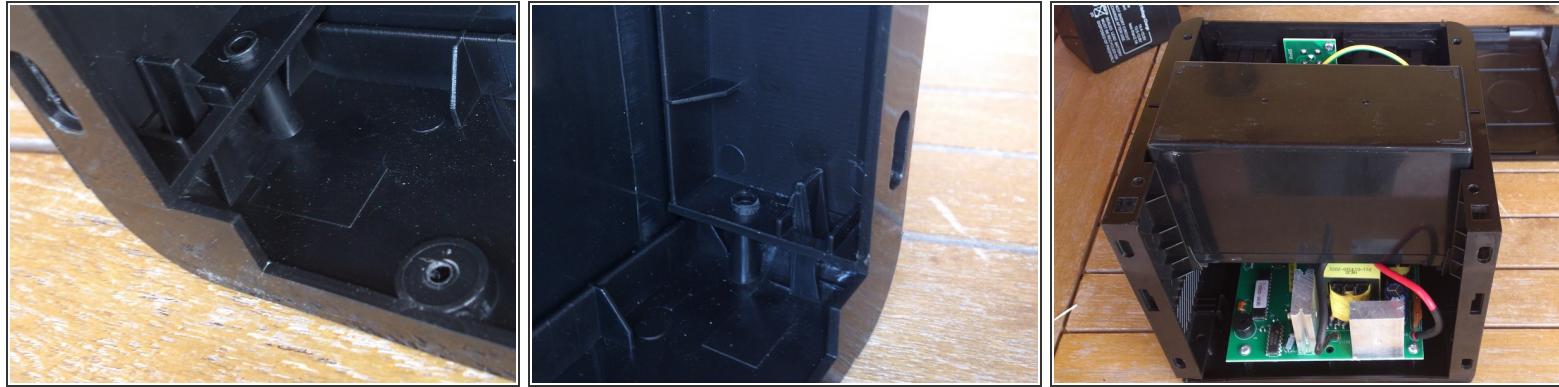




- Remove left/right clips. And remove the bottom pannel

## Step 4 — Remove the Battery

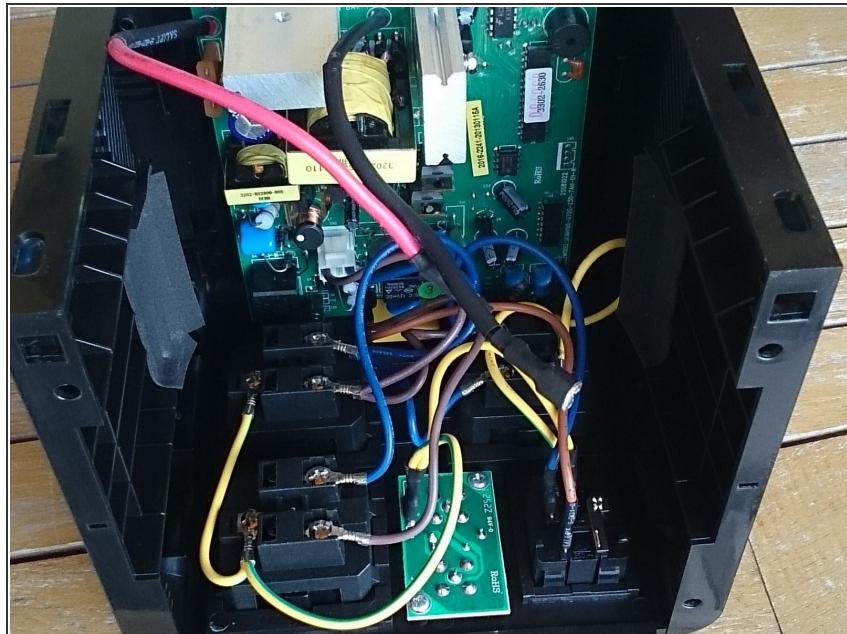



- Be careful

## Step 5 — Remove the left side

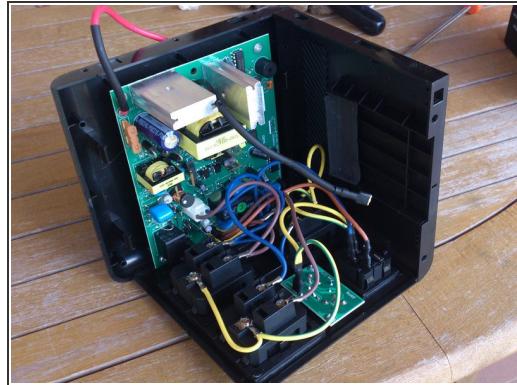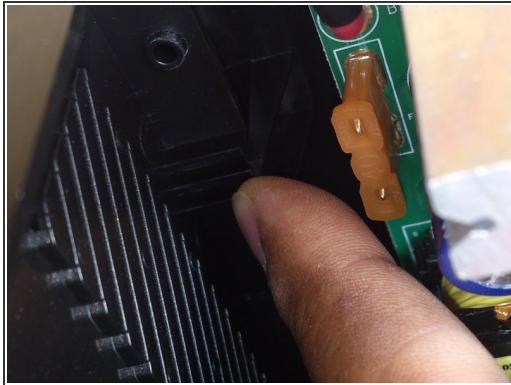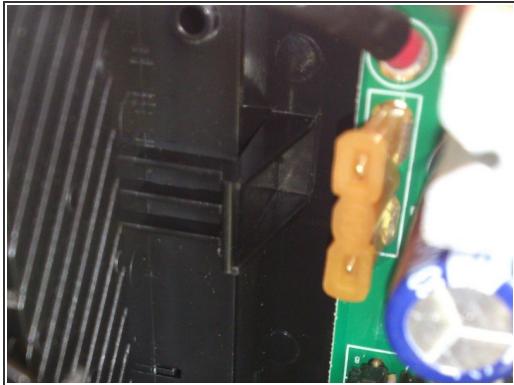

- Unclip the left pannel

## Step 6 — Remove the right side

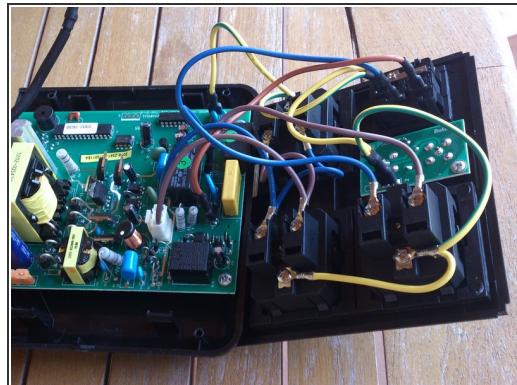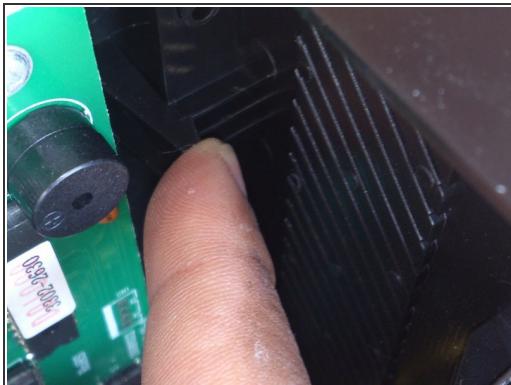

- Unclip the right pannel

## Step 7 — Remove the rear pannel



- Caution when plugging the rear pannel...
- -blue for neutral.
- -yellow/green for earth
- -brown for phase

To reassemble your device, follow these instructions in reverse order.