



# Disassembling Vaio FS series VGRFS640 BackPlate

The back plate protects the internal components, however in order to fix many of them it is first necessary to remove it.

Written By: shamaz



This document was generated on 2019-09-18 02:41:21 PM (MST).

## INTRODUCTION

This guide will teach the user how to remove the back plate, which is necessary to access any of the internal components of the laptop.

### TOOLS:


- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — BackPlate



- Flip laptop over so that "Service TAG" is shown at the top left corner.

## Step 2

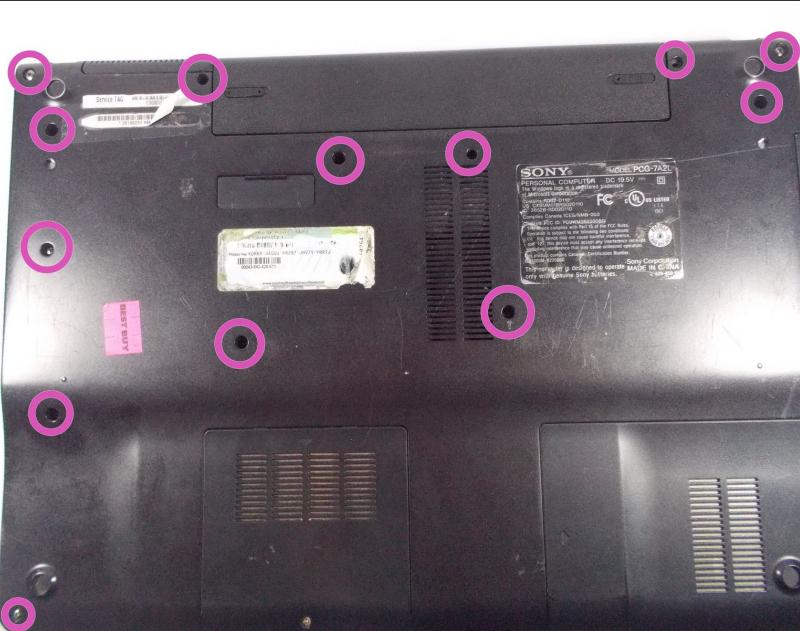

- Remove highlighted screws from back of laptop.

## Step 3




- Remove screws from panels at bottom right hand side.

## Step 4



- Remove two panels at bottom right hand corner by sliding in direction of arrows shown

## Step 5

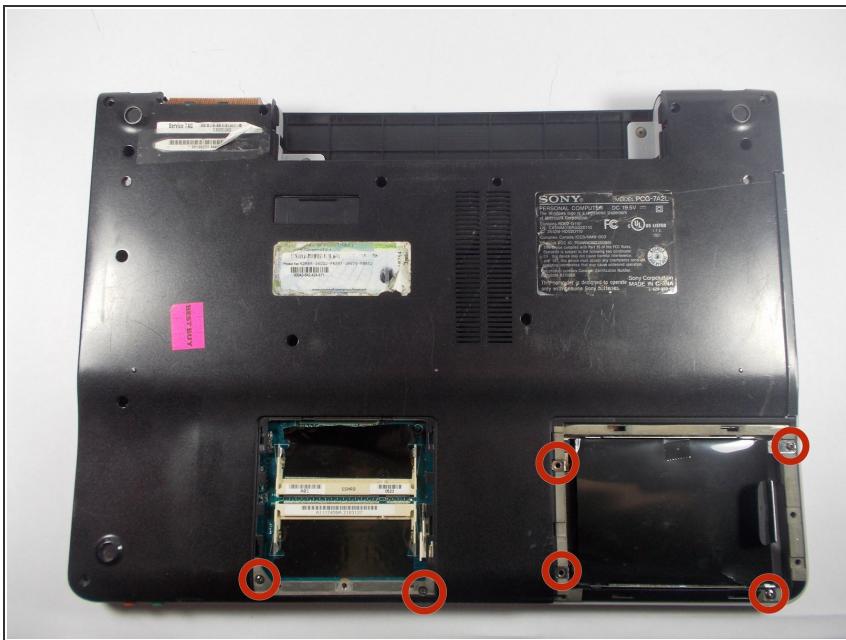

- Remove screws underneath removed panels.

## Step 6



- Remove Hard drive from computer.

## Step 7



- Remove battery by pressing inwards on both tabs.

## Step 8



- Remove cover at top left of laptop by pulling outwards.

## Step 9



- Remove backplate of laptop by pulling outward.

**To reassemble your device, follow these instructions in reverse order.**