




Disassembling Western Digital Essentials HD LED Light conducting plastic pieces

Only prerequisite guide for disassembling Western Digital Essentials HD

Written By: Gaetan

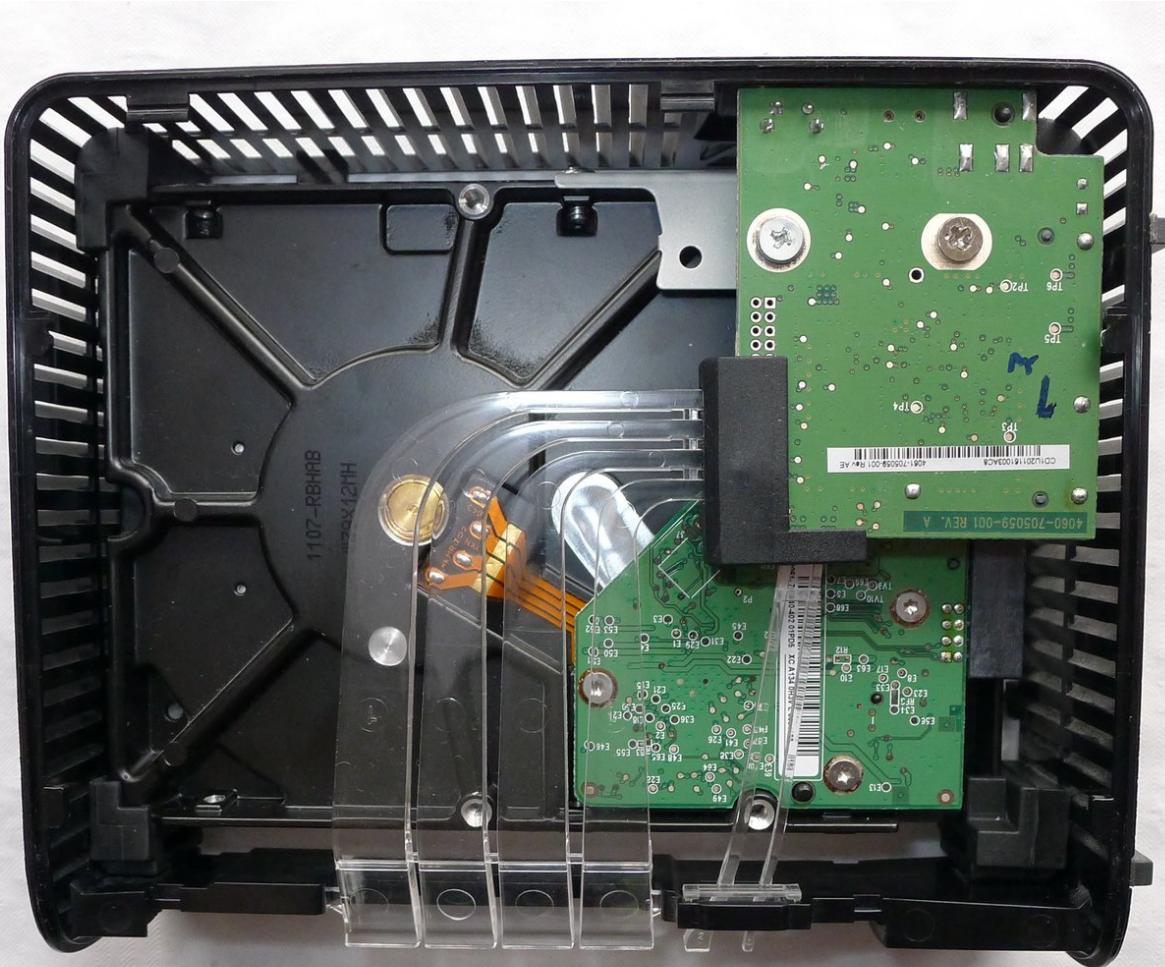

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)

Step 1 — Case



- Use a large plastic opening tool along the rear panel:
 - There are 4 clips to release.

Step 2




- Slide the cover along the plastic frame.

Step 3 — LED Light conducting plastic pieces



- Slide off the largest plastic pieces.

Step 4

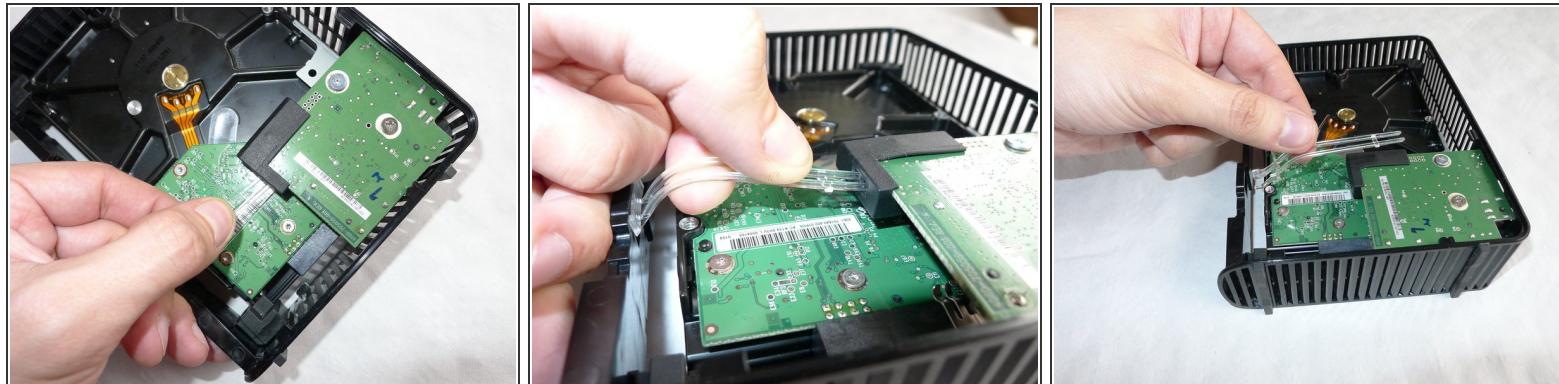

- Bend the second small plastic piece to release it from the rubber piece.
- Now you can slide it out.

To reassemble your device, follow these instructions in reverse order.