



Disassembling of HP 625 Laptop Teardown Guide

Repair is Noble, With Hp 625 Teardown.

Written By: samuel



INTRODUCTION

On This Segment of Hp 625 Teardown, You Will Learn How To Disassemble and Build More Skills Towards Your Endeavour.

TOOLS:

- Anti-Static Wrist Strap (1)

Step 1 — Teardown Guide




- **Overview of Hp 625.**

Step 2




- **Front View of Hp 625.**

Step 3

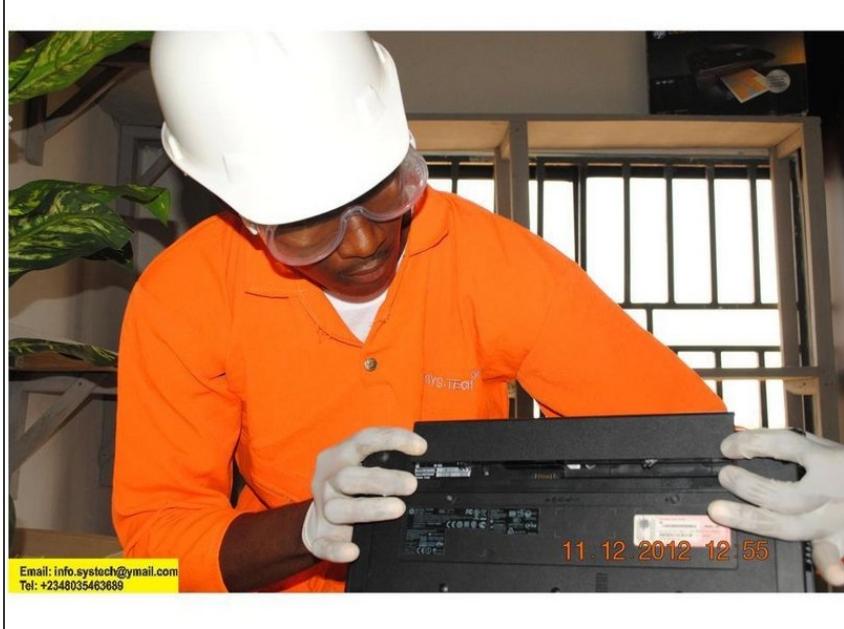

- **Removal of Hp 625 Battery.**

Step 4

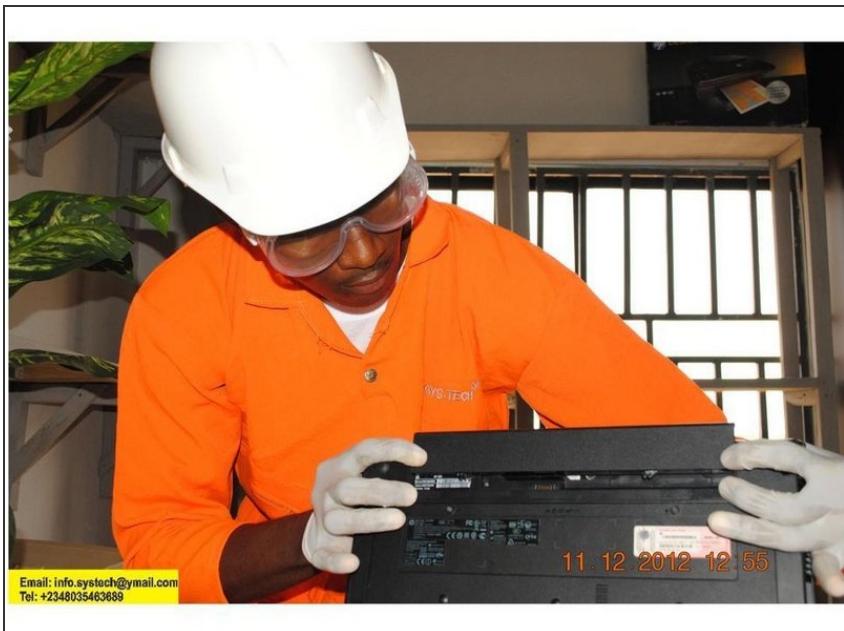

- **Removing of Hp 625 Battery.**

Step 5



- **Hp 625 Battery Removed.**

Step 6



- **Unscrewing Hp 625 Service Door (4 Screws).**

Step 7



- **Removing Hp 625 Service Door.**

Step 8



- **Hp 625 Service Door Removed.**

Step 9



- **Unscrewing Hp 625 HDD, (3 Screws).**

Step 10



- **Removing of Hp 625 HDD, (Gently Slide).**

Step 11




- **Hp 625 HDD Removed.**

Step 12



- **Unscrewing of Hp 625 DVD Drive, (1 Screw)**

Step 13

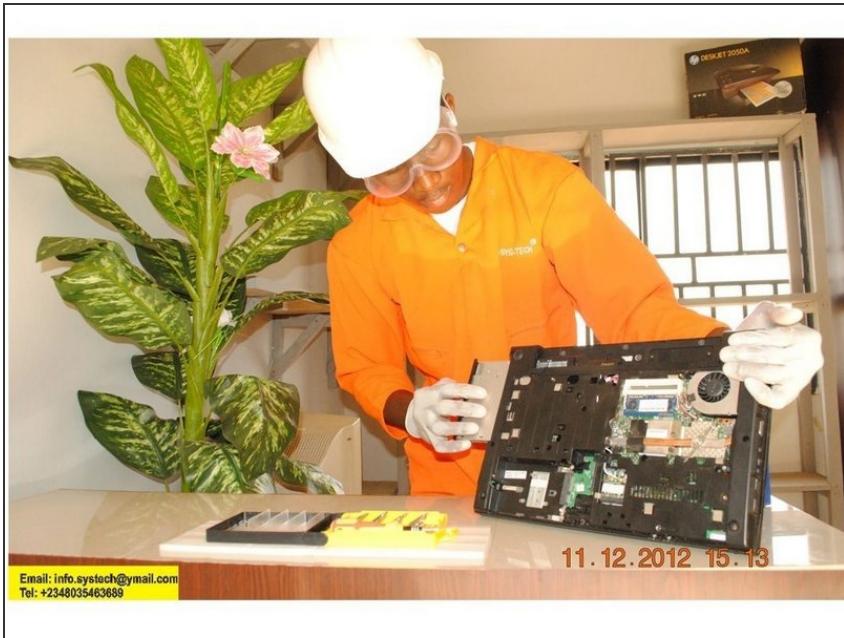

- **Removing of Hp 625 DVD Drive, (Carefully Slid).**

Step 14



- **Hp 625 DVD Drive Removed.**

Step 15



- **Removing of Hp 625 DDR3 RAM, (Together With Two Hands Expand The Clips a little).**

Step 16



- **Hp 625 DDR3 RAM Removed, (Be sure not to Touch The Gold Plated Pinouts).**

Step 17



- **Unscrewing of Hp 625 Keyboard, (6 Screws Noted By Keyboard icon).**

Step 18




- **Removing of Hp 625 Keyboard Flex Cable, (Gently Release The Locking Mechanism).**

Step 19



- **Hp 625 Keyboard Removed.**

Step 20

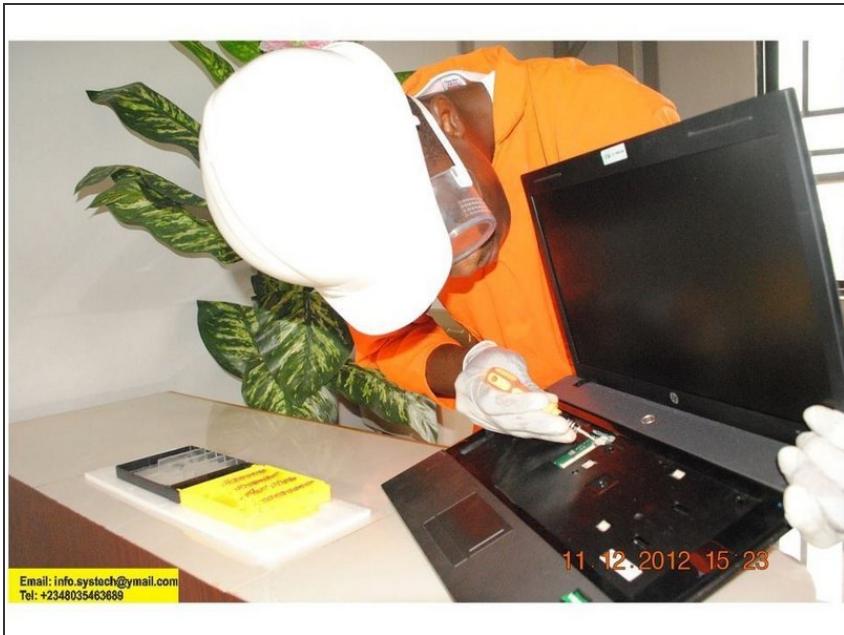

- **Disconnecting of Hp 625 Power Flex Cable From Connector, (Fairly Unlock The Locking Mechanism).**

Step 21



- **Hp 625 Power Flex Cable Disconnected.**

Step 22



- **Unlocking of Hp 625 Palm Rest, Through The HDD Bay.**

Step 23



- **Disconnecting Touch Pad Flex Cable and Removing of Hp 625 Palm Rest.**

Step 24



- **Hp 625 Palm Rest Removed.**

Step 25



- **Unscrewing of Hp 625 System Casein, (16 or More Additional Screws Verify Very Well For Additional Screws Needed To Be Unscrewed Before Removing The Casein).**

Step 26



- **Removing of Hp 625 Front Casein, (Firmly Pry the Casein, Starting from Any Edge).**

Step 27




- **Hp 625 Front Casein Removed.**

Step 28




- **Unscrewing of Hp 625 Thermal Fan, (1 Screw).**

Step 29

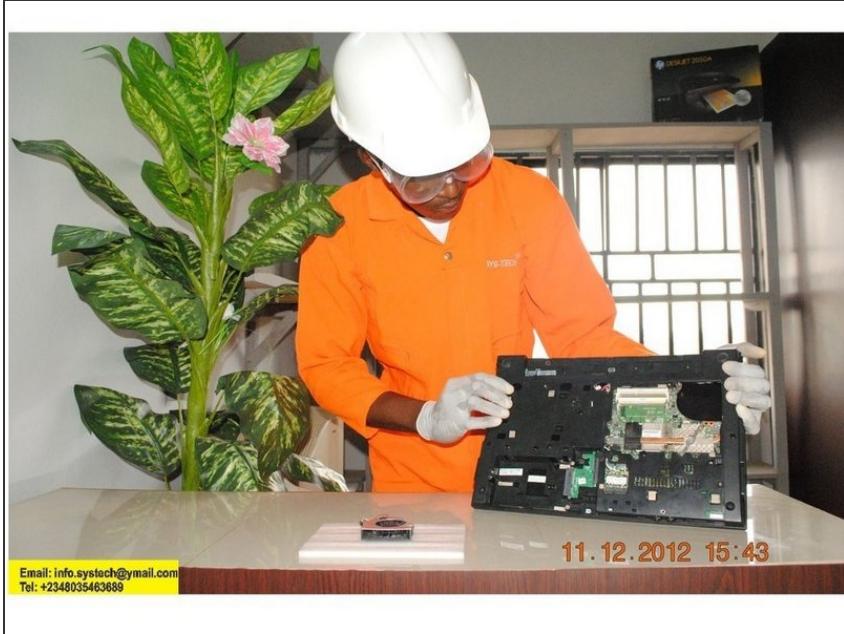

- **Hp 625 Thermal Fan Removed.**

Step 30

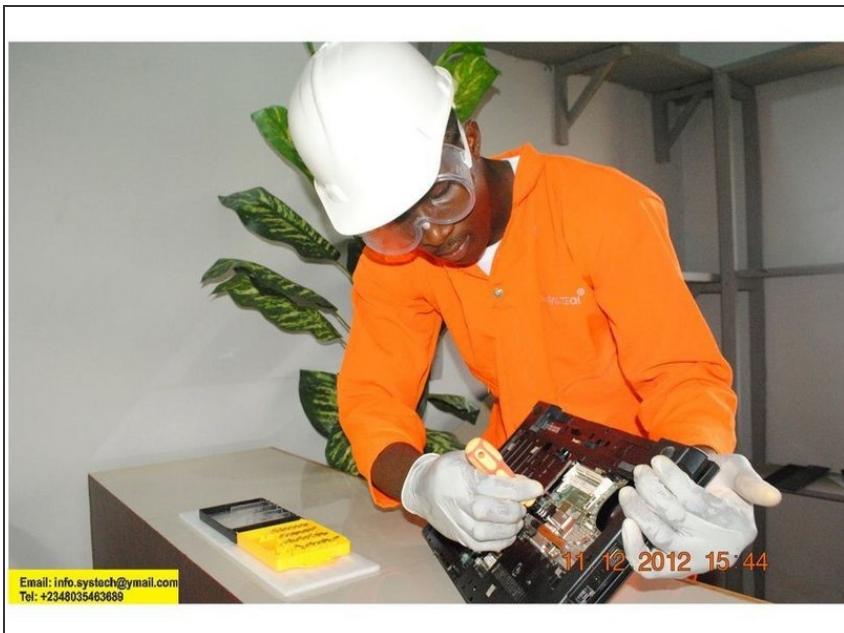

- **Unscrewing of Hp 625 Thermal Conductive Heatsink, (6 Screws).**

Step 31



- **Hp 625 Thermal Conductive Heatsink Removed.**

Step 32



- **Unlocking of Hp 625 AMD Processor From Socket, (Anti-Clockwise).**

Step 33



- **Hp 625 AMD Processor Removed.**

Step 34



- **Disconnecting of Hp 625 Wi-Fi Cables From Wireless Card.**

Step 35



- **Hp 625 Wi-Fi Cables Disconnected.**

Step 36



- **Disconnecting of Hp 625 HDD Card From Motherboard.**

Step 37




- **Disconnecting All Cables of Hp 625 Connected To Motherboard.**

Step 38



- **Unscrewing Hp 625 Motherboard.**

Step 39

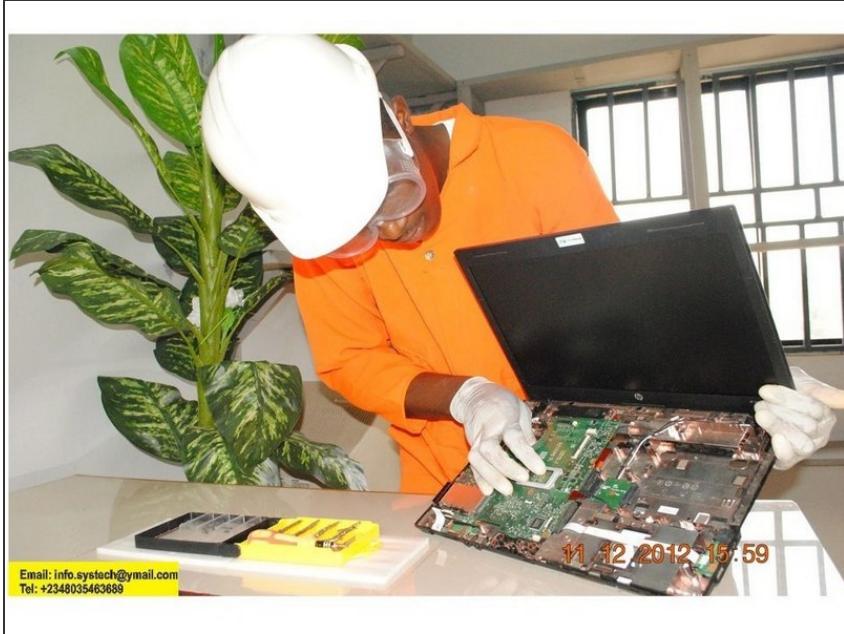


- **Removing of Hp 625 Motherboard.**

Step 40




- **Hp 625 Motherboard Removed.**

Step 41

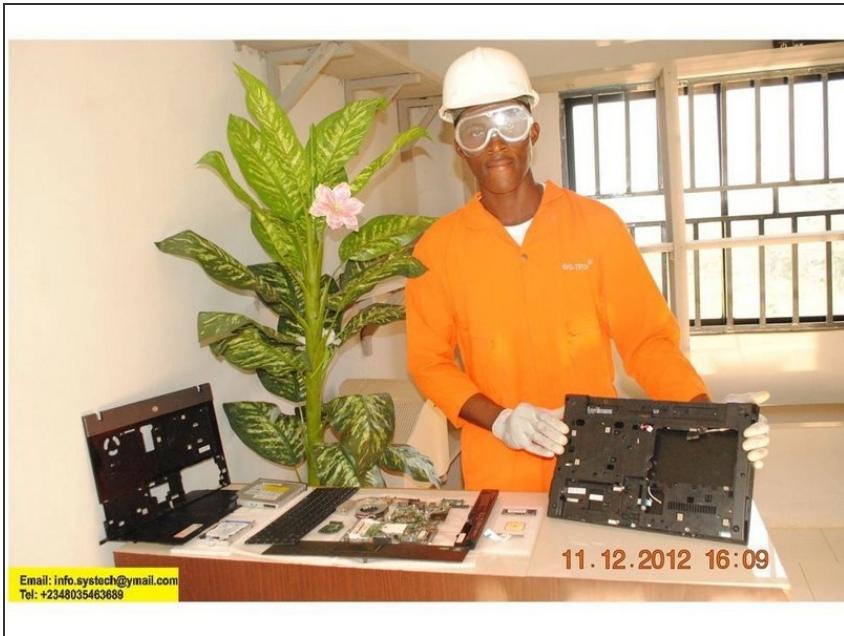

- **Complete Disassembled Parts and Components of Hp 625.**

Step 42

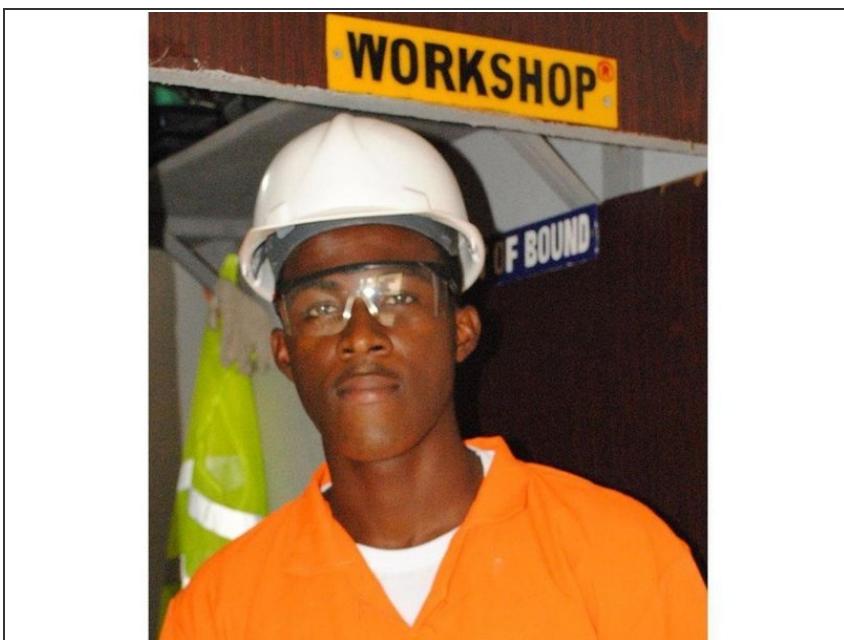

- **'Reparatur ist edel**

To reassemble your device, follow these instructions in reverse order.