



Disassembly Guide for Frame

Eco X Gear.

Written By: James Lipsett



INTRODUCTION

This is only a prerequisite guide.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)
- [Small Needle Nose Pliers \(1\)](#)

Step 1 — Frame



- Disconnect any power source and/or turn off device.

Step 2



- Remove the 15 rubber plugs from the cavities using needle nose pliers.

Step 3



- Use a phillips head screwdriver to remove the fifteen 6.4mm screws.

Step 4



- Carefully separate the two sections of the frame.

⚠️ Wires still connect the two sections. Be cautious to avoid damaging the wires, terminals, and electronics.

To reassemble your device, follow these instructions in reverse order.