



Disconnect the Battery

Disconnect the battery in your Nook Tablet.

Written By: Holly Lowe



INTRODUCTION

Use this guide to disconnect the battery in the Nook Tablet. It is important to disconnect power before working on the Nook's internal components.

TOOLS:


- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)

Step 1 — Back Cover



- Flip the Nook over.

Step 2

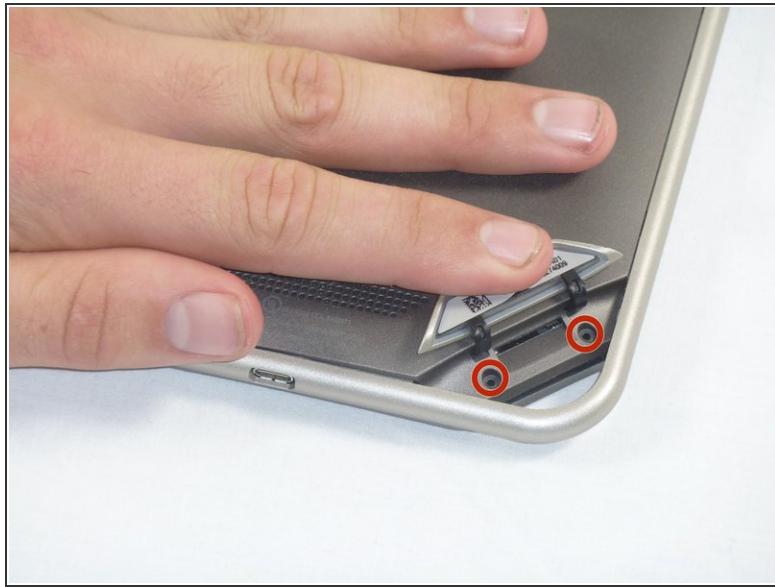

- Lift the flap that reads "Nook" to reveal the tape that is underneath. Remove the memory card if one is present.
- Remove the tape covering the round holes to reveal two T5 Torx screws.
- Remove the two T5 Torx screws securing the back cover.

This document was generated on 2019-10-03 02:58:35 PM (MST).

Step 3



- Insert the flat end of a spudger between the front panel and the rear assembly.
- *(i)* Though these photos show a screwdriver, use a spudger or plastic opening tool in order to prevent damage to the device.
- Use a spudger to lift the the back panel from the rest of the Nook.

Step 4



- Slide the spudger around the edges of the Nook to loosen the back panel.


This document was generated on 2019-10-03 02:58:35 PM (MST).

Step 5



- Pull the back panel off the Nook.

Step 6 — Disconnect the Battery

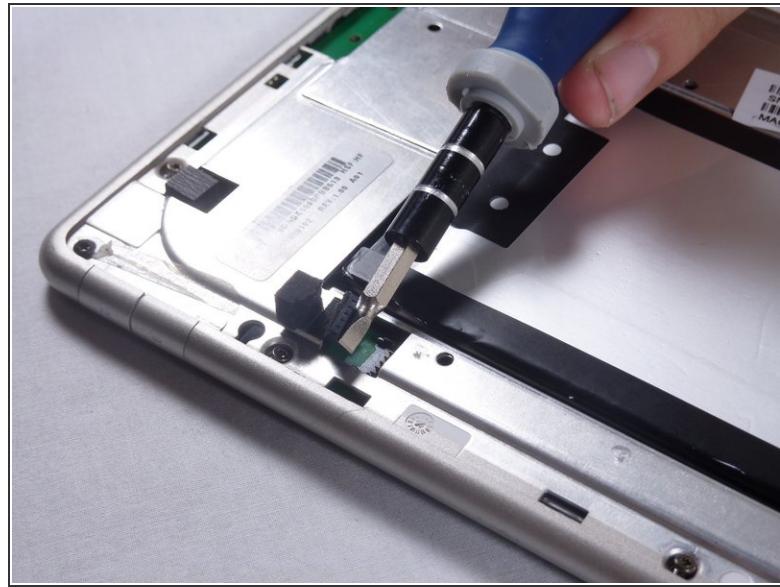

- Lift up the foam pad at the corner of the battery to reveal the battery connector.
- Use a spudger or plastic opening tool to disconnect the battery cable from the motherboard.

⚠ These photos show a screwdriver, but we recommend using a nonconductive tool like a spudger to prevent a potential short.

To reassemble your device, follow these instructions in reverse order.