




# Drift HD 720 Speaker Replacement

Replacing the speaker can fix any playback scratchiness or static noise in your video. While this will likely not affect an exported video, it can be annoying when trying to see playback on the device.

Written By: Hector Rodriquez

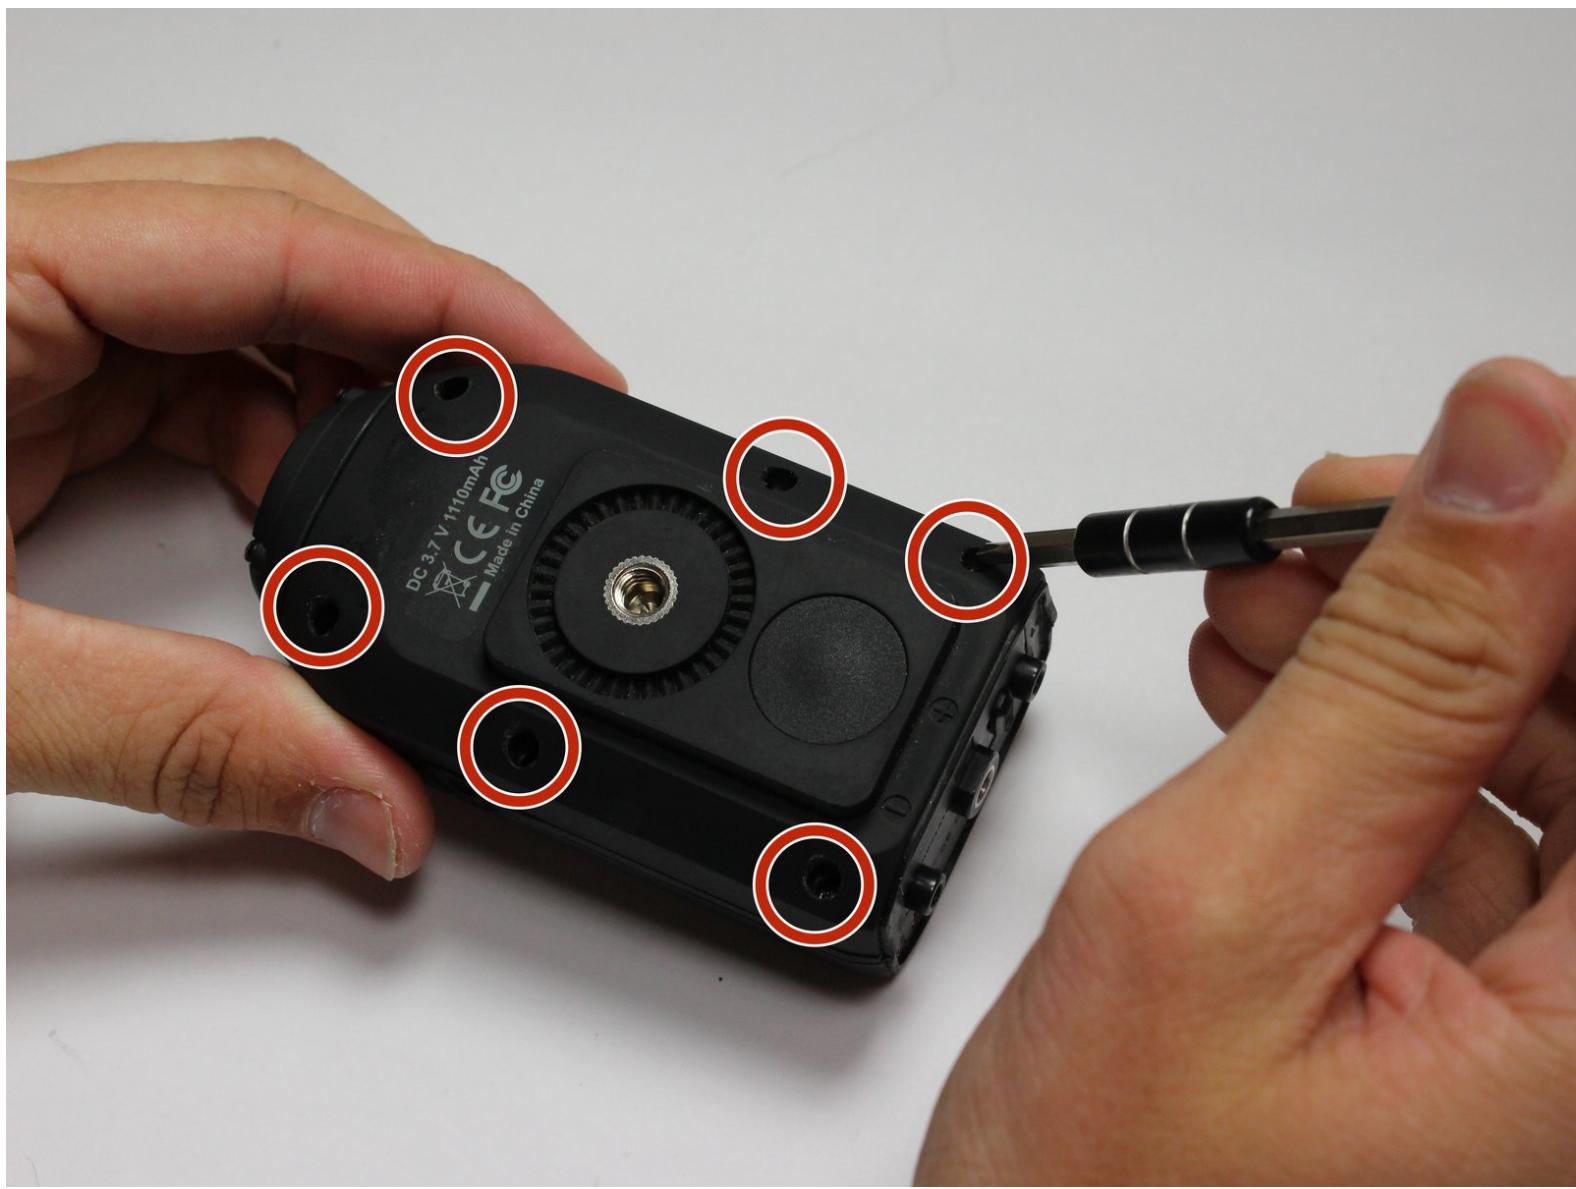

## INTRODUCTION

If your playback sounds scratchy and not up to par, try replacing the speaker of your device with this guide.

### TOOLS:

- [JIS #0 Screwdriver](#) (1)
- [Soldering Iron](#) (1)

## Step 1 — Battery




- Unscrew the back plate counterclockwise until it comes off.

## Step 2



- Push the black battery tab next to the battery to get the battery out.
- Remove the battery.

## Step 3 — Speaker

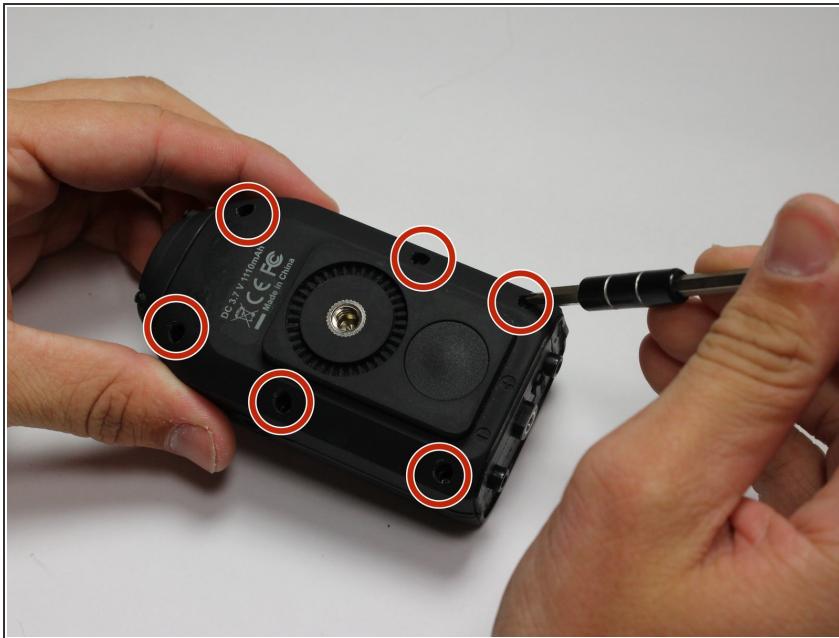

- Remove six 8mm long Philips head screws with the J0 Philips head from the outer case.

## Step 4




- Remove the back case from the camera body.

## Step 5



- Carefully remove the battery housing from the camera body.

## Step 6

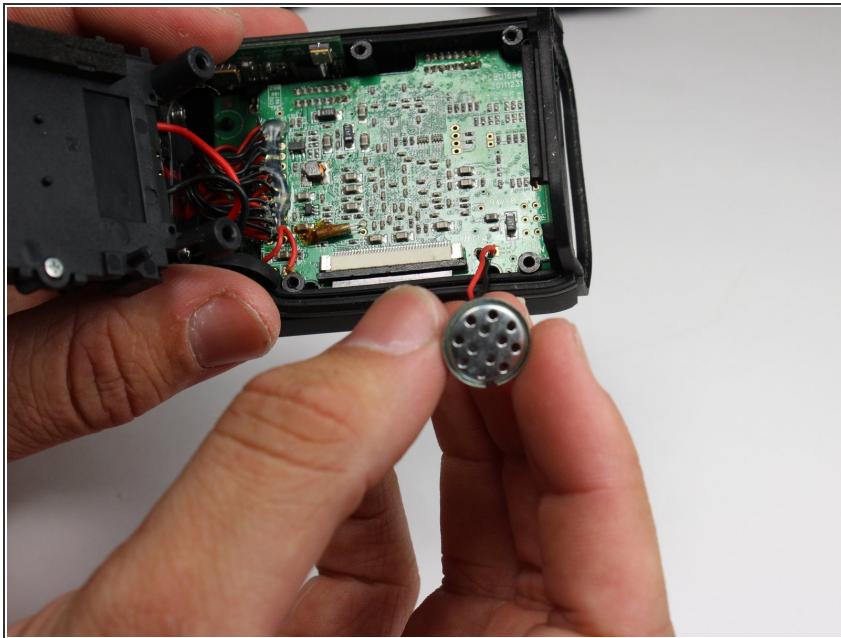

- Remove the wires connecting the speaker to the motherboard from the motherboard, and solder the wires connecting the new speaker to the motherboard in the same locations as the wires that were removed.

To reassemble your device, follow these instructions in reverse order.