


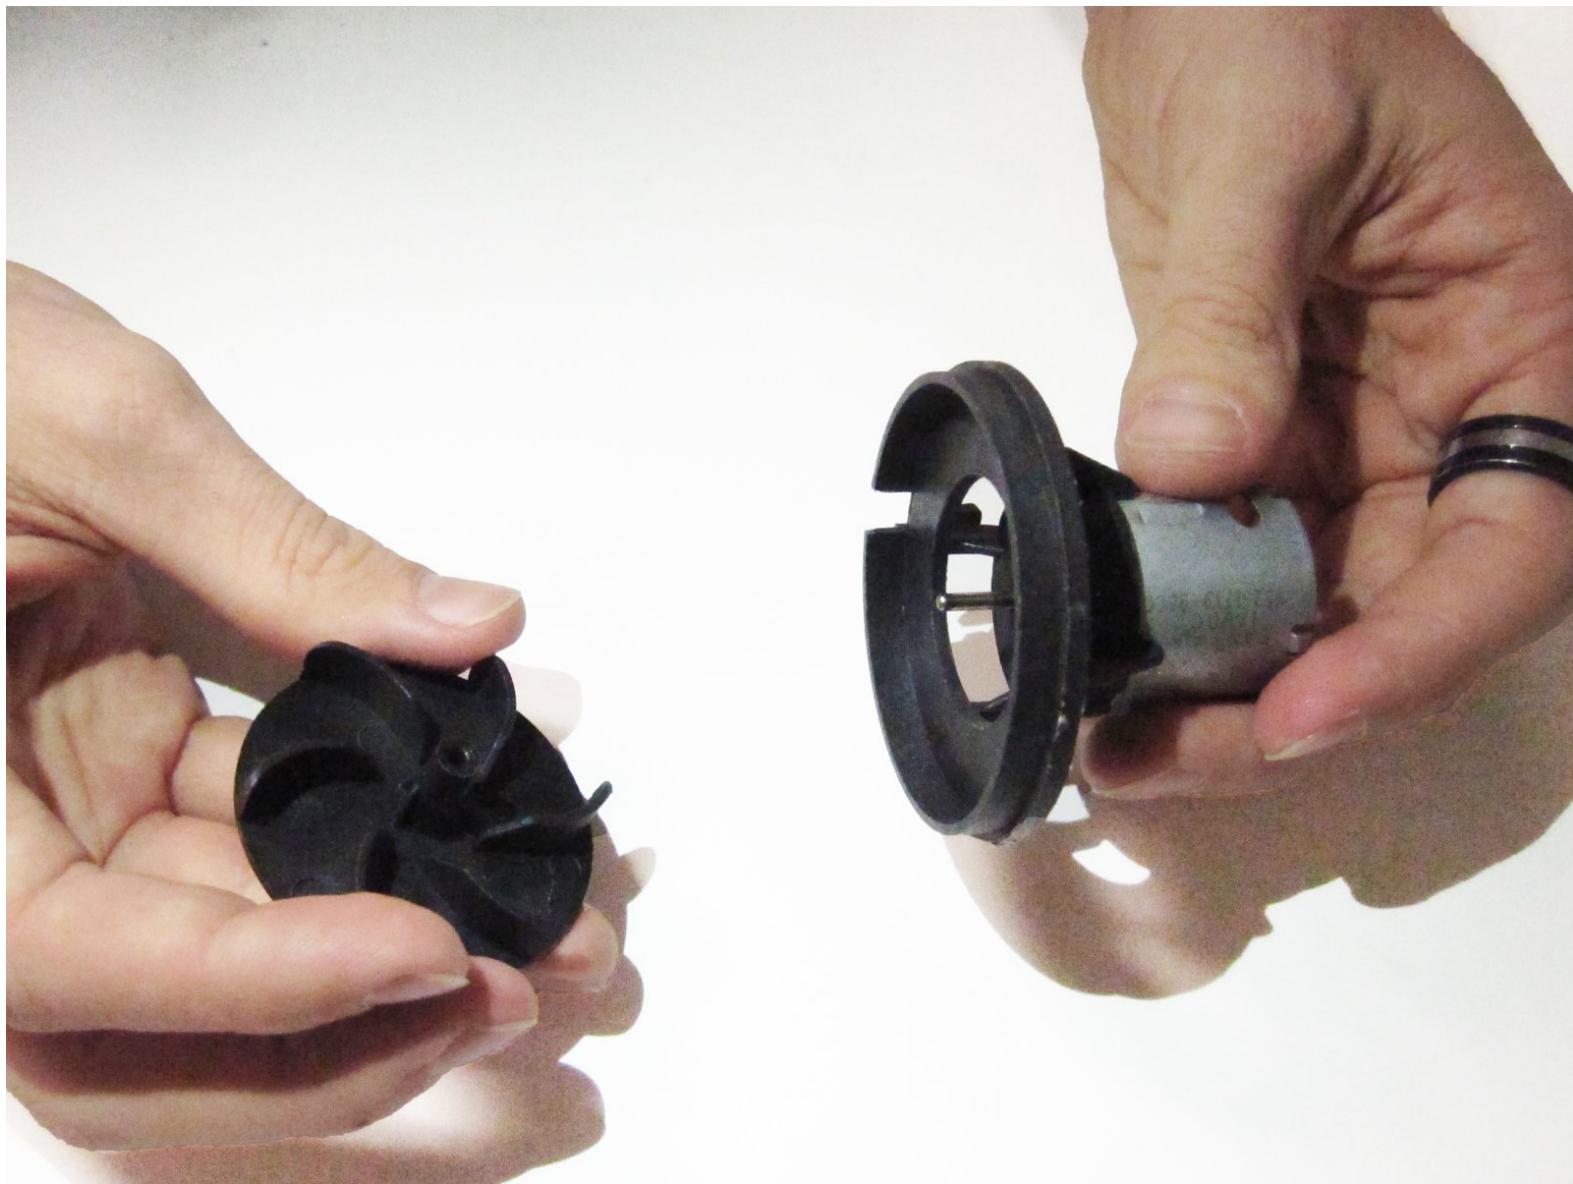

Drill Master Heat Gun Fan Replacement

The internal fan keeps your machine from overheating. A faulty fan can also cause smoking. To remedy these problems, use this guide to replace your fan.

Written By: Mikayla Kim



INTRODUCTION

The internal fan keeps your machine from overheating. A faulty fan can also cause smoking. To remedy these problems, use this guide to replace your fan.

TOOLS:

- Phillips #0 Screwdriver (1)
- Small Pointed Metal Spudger (1)

Step 1 — Fan



⚠ Be sure the heat gun is unplugged before starting this process.

- Remove the seven 14mm screws from the side of the drill using the PH#0 screwdriver.
- **i** You will need a screwdriver extension.

Step 2



- Remove the 8mm screw from underside of barrel using the PH#0 screwdriver.
- **i** Don't try to open the casing just yet.

Step 3




- Remove the barrel casing on either end by twisting and pulling each side off.

Step 4




- Remove the top casing to reveal inside of drill. You might have to tug a little harder for this one.

Step 5

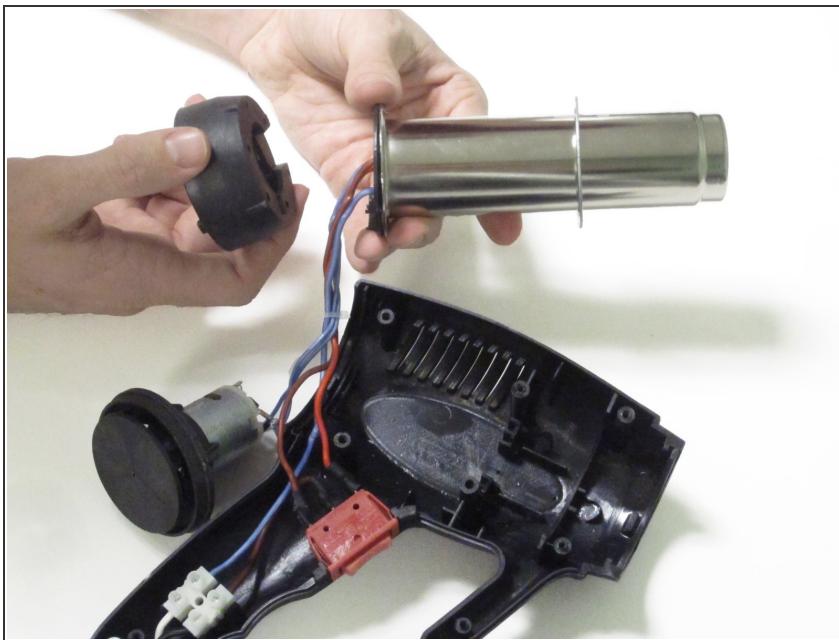

- Remove the metal casing and fan cover from the fan unit.


Step 6

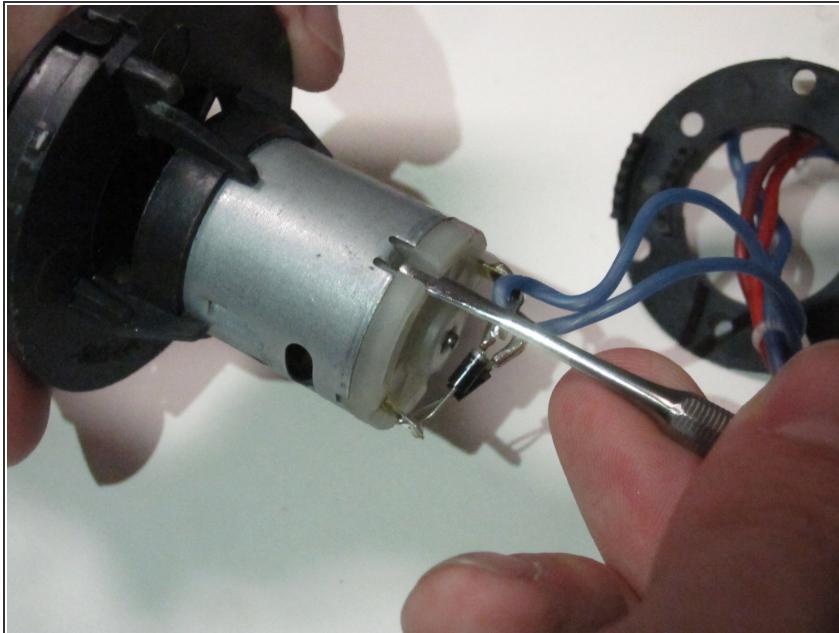

- Bend the metal prongs backward that connect the fan motor to the plastic cap.

(i) Bending the brackets too far back can cause the brackets to break.


Step 7

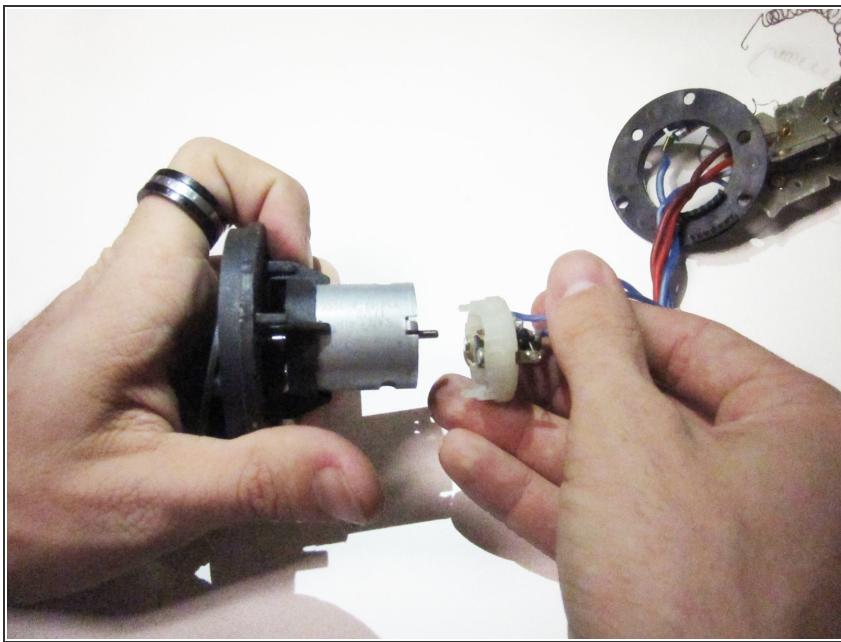

- Remove the plastic cap from the motor,

(i) This will allow you to work only with the motor and fan.

Step 8

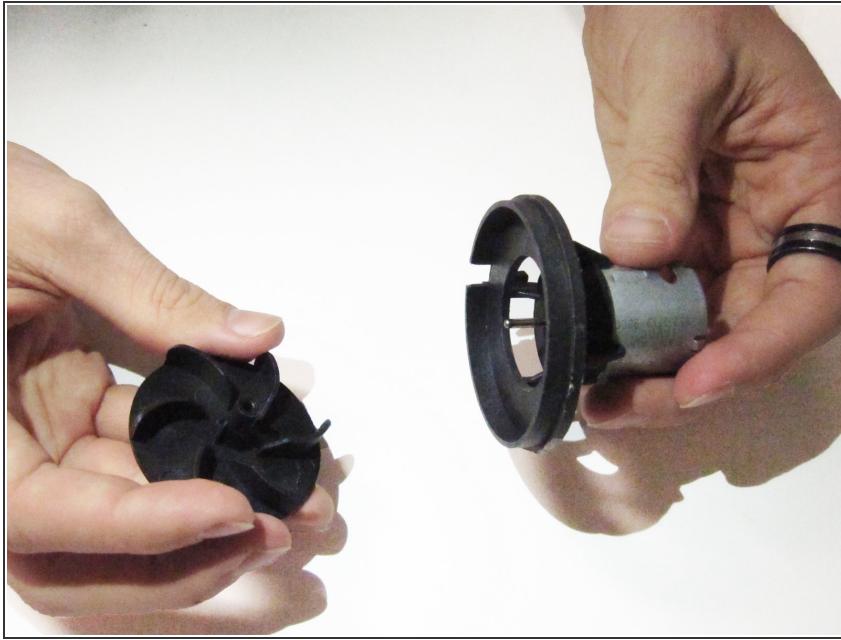

- Remove the fan by pulling it from the motor rod and replace.

To reassemble your device, follow these instructions in reverse order.