




# Drobo FS DRDS2-A Power Switch Replacement

Replacing the Power Switch on the Drobo FS DRDS2-A

Written By: Rye Cassan

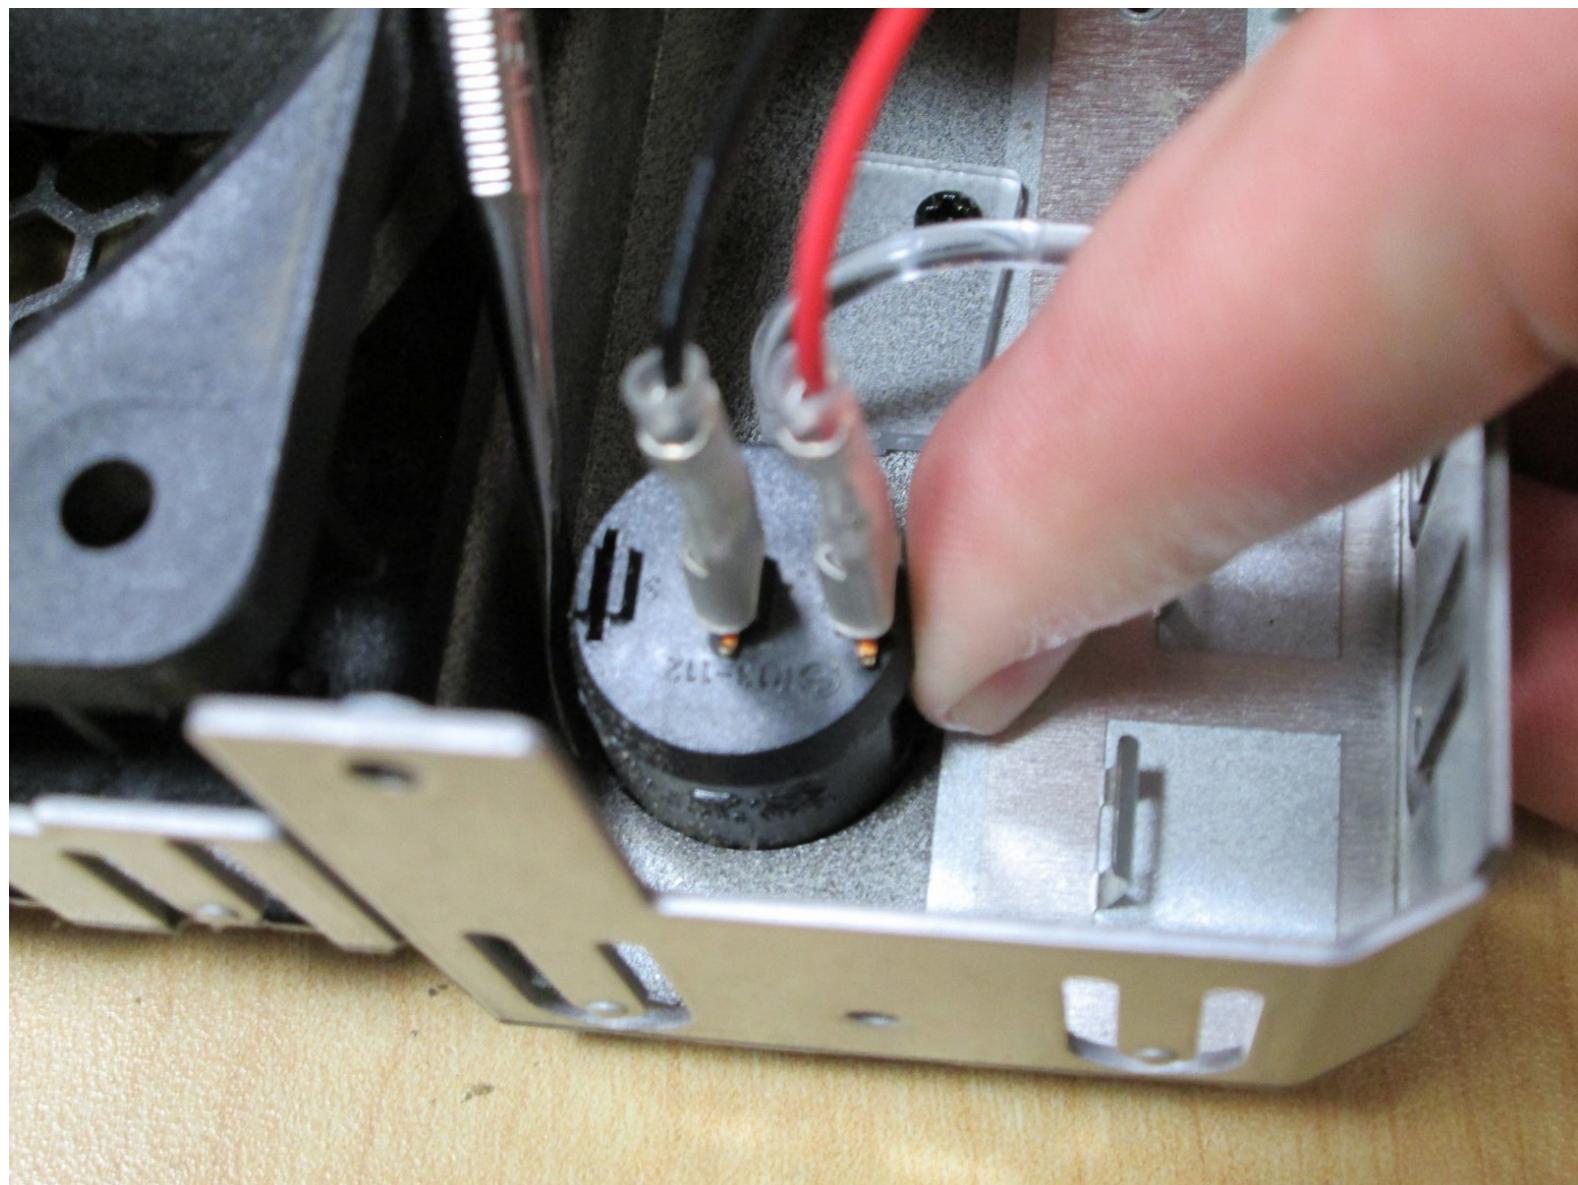

# INTRODUCTION

How to replace the Power Switch

## TOOLS:

- [Phillips Screwdriver](#) (1)
- [Spudger](#) (1)

## PARTS:

- [Replacement Power Switch](#) (1)

## Step 1 — Case



- To start getting the case off remove the front panel so it's out of the way.

## Step 2



- Next remove the screws from the feet of the case with a phillips head screwdriver.

## Step 3




- To remove the case, place the Drobo on its back and slide the case off.

## Step 4 — Power Switch




- Press tabs to release back cover and lift off

## Step 5

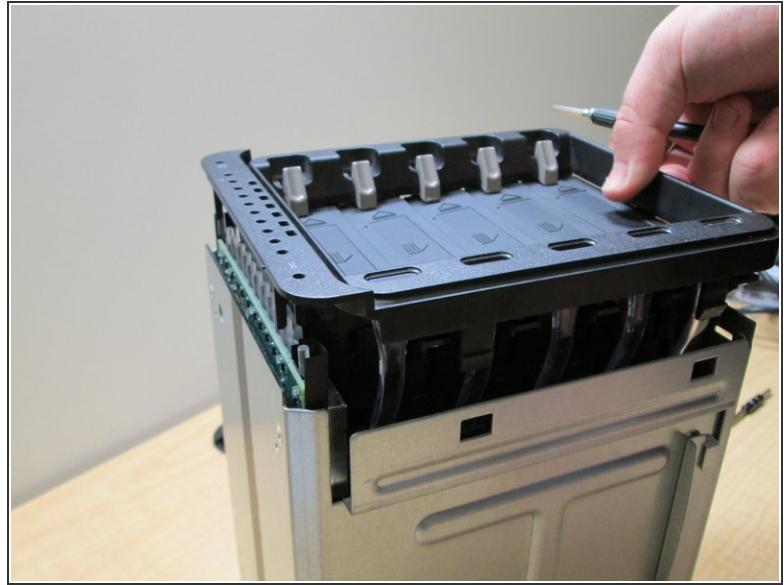


- Push tabs in and carefully pull out the front facer and drive shelves

## Step 6

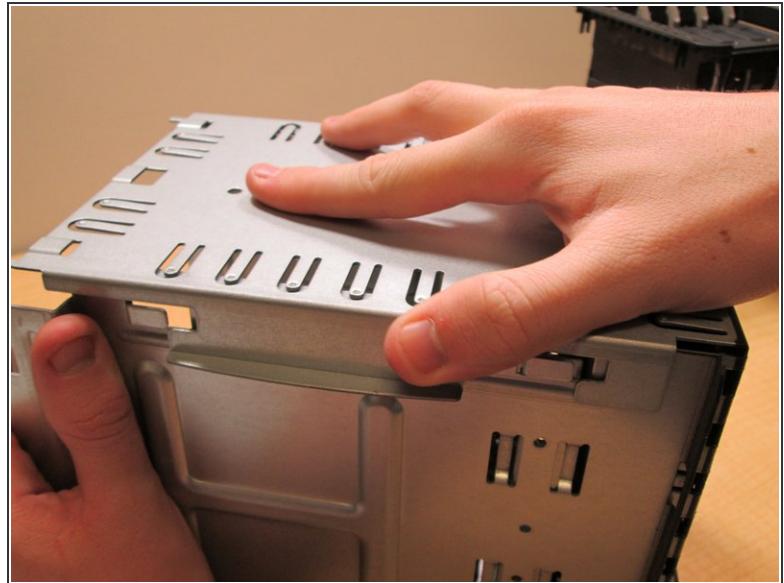


- Unscrew the back face by removing the screw on the back sides, then slide top face apart from the others

## Step 7

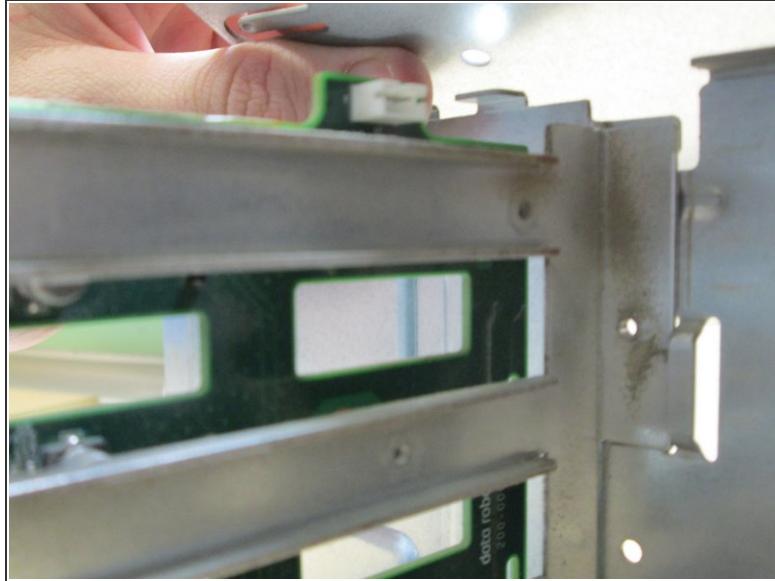


- Carefully unplug the Power Switch and Fan wires.

## Step 8

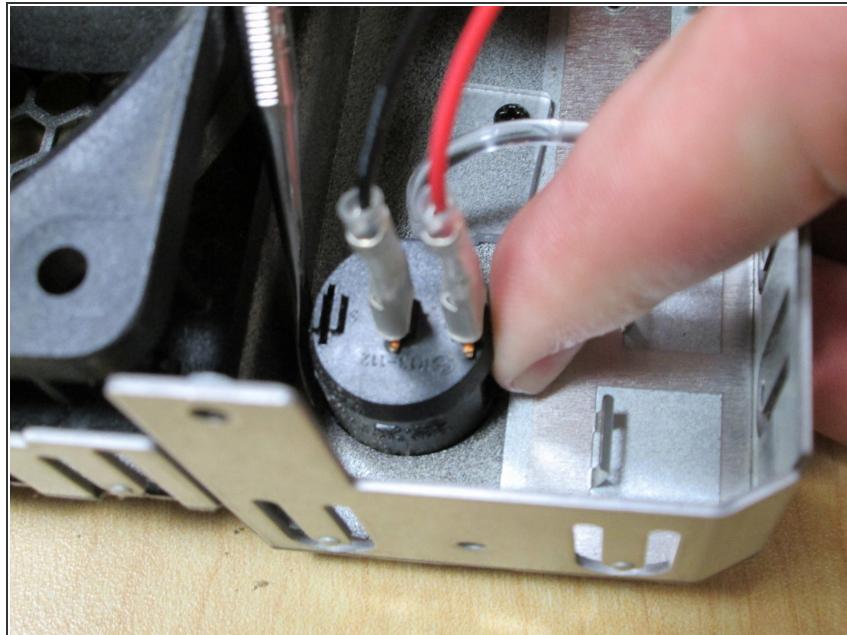

- Press tabs on Power Switch to release the Power Switch and Push out.
- A Spudger like object is helpful for pushing in the tabs if the fan is not removed also

## Step 9

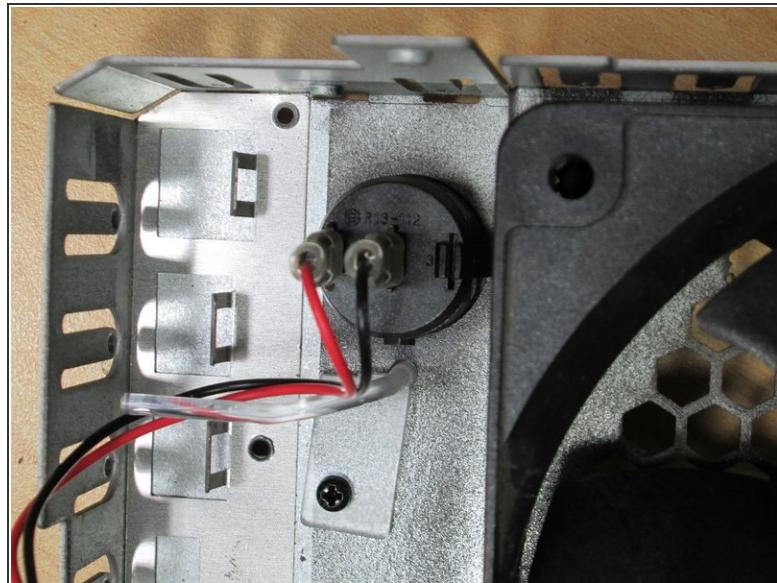

- Finally pull the old switch out and pop the new one in.

To reassemble your device, follow these instructions in reverse order.