



Dynex DX-WBRDVD1 Optical Drive Replacement

Dynex DX-WBRDVD1 Optical Drive Replacement. Optical drive removal.

Written By: Harrison Williams



INTRODUCTION

The discdrive is found next to the motherboard and power board inside the device. This guide will take you through the steps of removing the discdrive for replacement.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

PARTS:

- [Optical Disk Drive](#) (1)

Step 1 — Top Cover

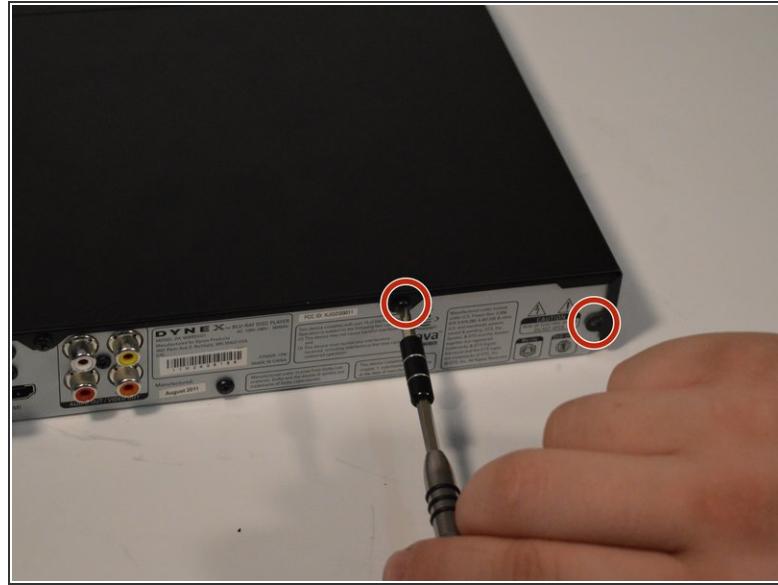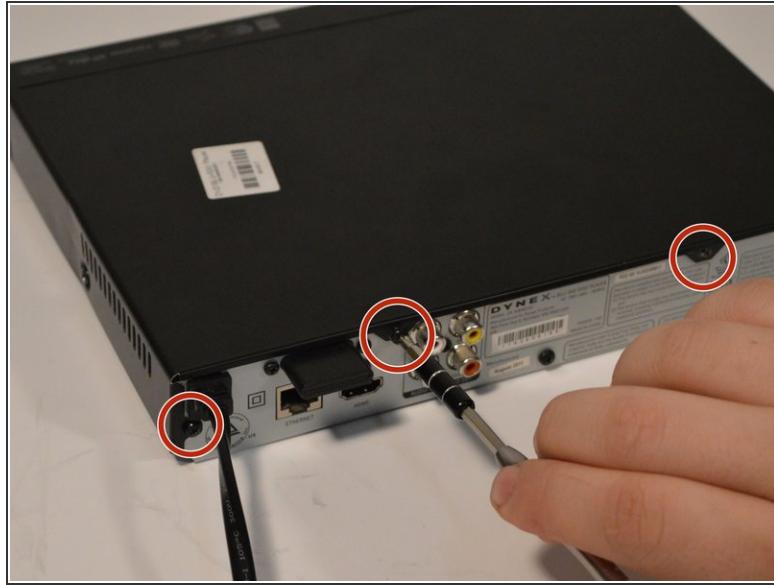

- Use a Phillips #1 screwdriver to remove the four 5mm screws that connect the black outer shell to the silver back of the device.


Step 2



- Use a Phillips #1 screwdriver to remove the two 5mm screws on the left and right side panels.

ⓘ There is one screw on each side that secures the cover to the body of the device.



Step 3

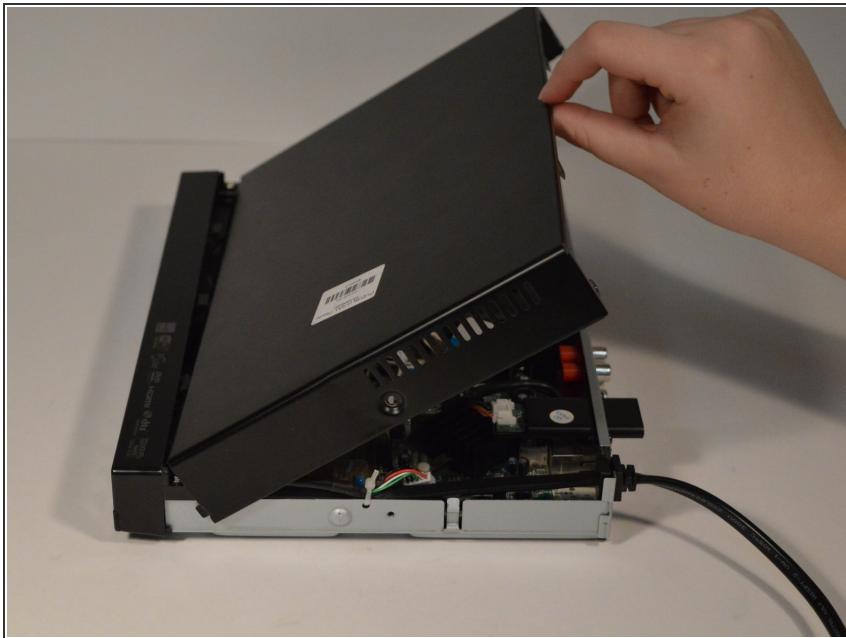

- Lift the black cover to a 45 degree angle from the rear of the device and pull away from the device.



Check that the power cord is not preventing the device from opening or closing.

Step 4 — Optical Drive

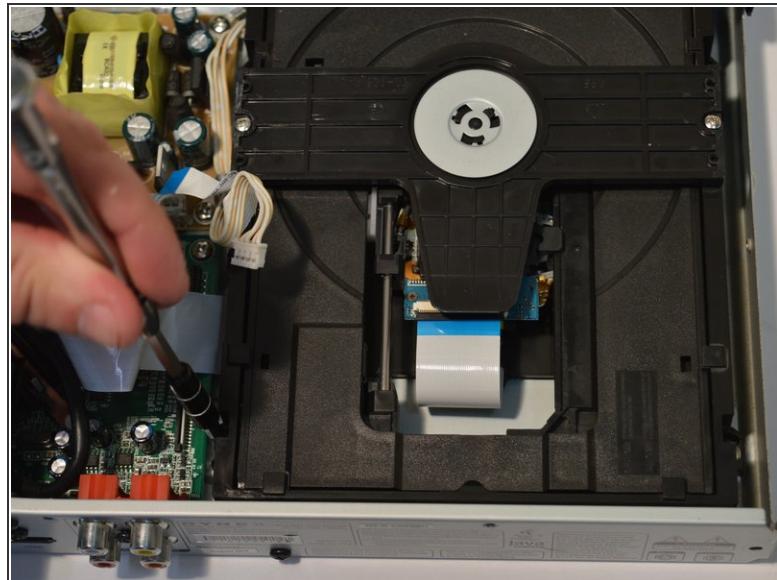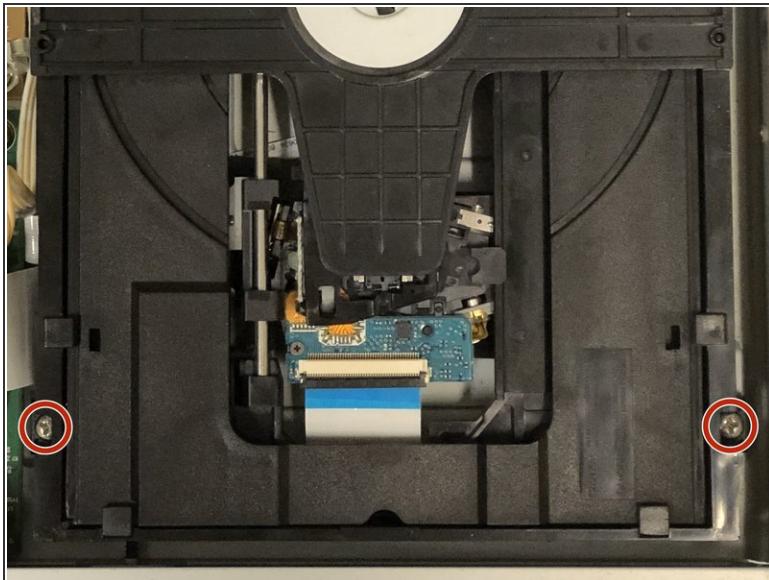



- Use a Phillips #1 screwdriver to remove the two screws that secure the Optical Drive.

Step 5

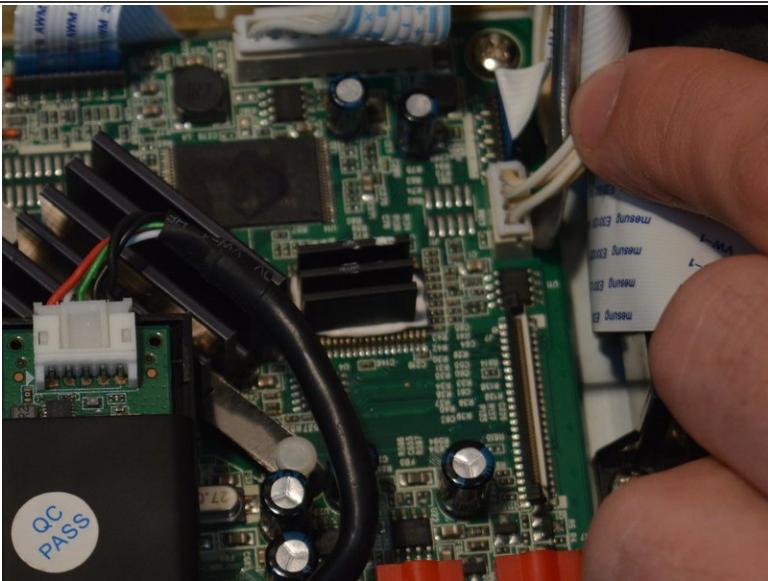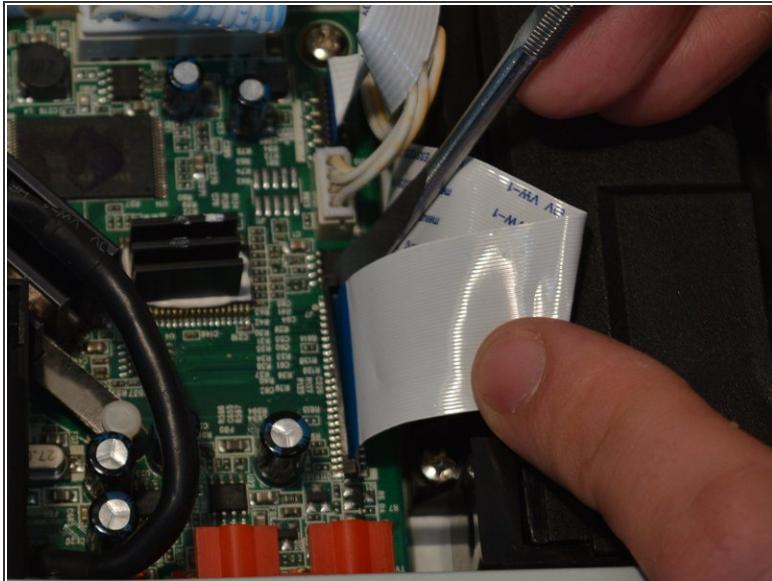

- Detach the tape wires from the motherboard and power board.

Step 6

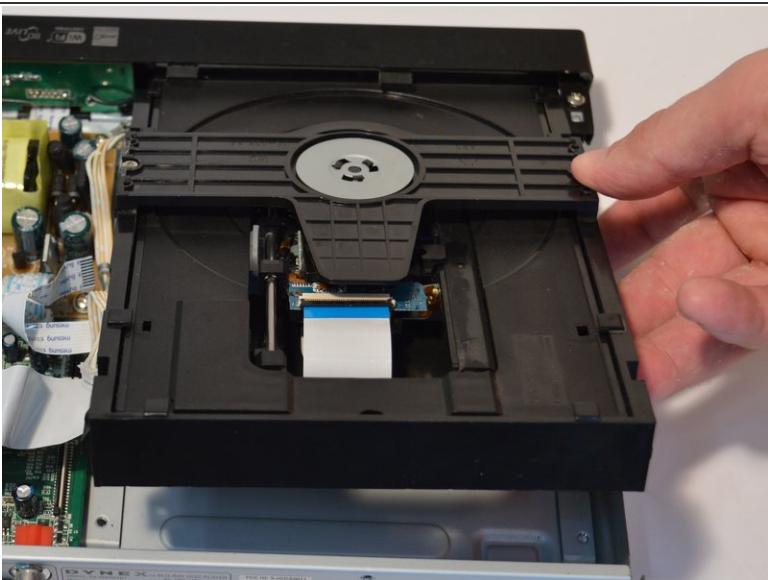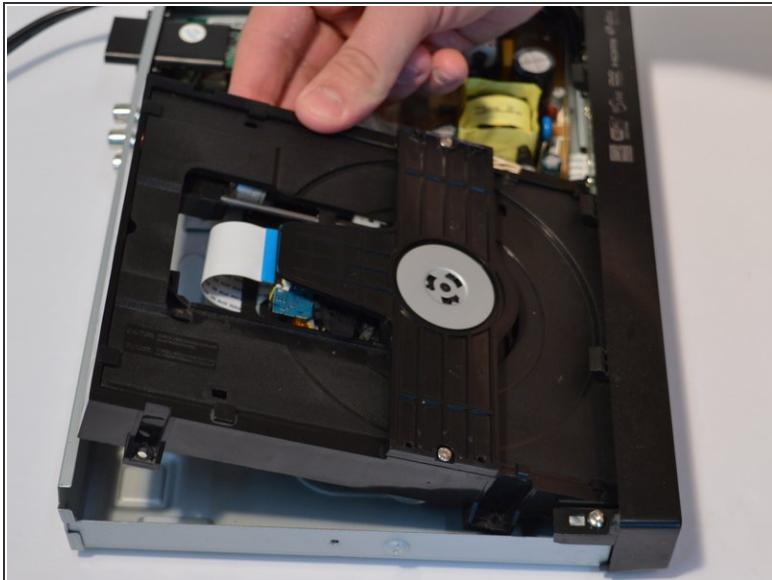

- Lift the disc drive up to a 45 degree angle and pull back out of the device shell

To reassemble your device, follow these instructions in reverse order.