




Dynex DX-WBRDVD1 Top Cover Replacement

How to open a Dynex DX-WBRDVD1 Blu-Ray player.

Written By: Caleigh Firth

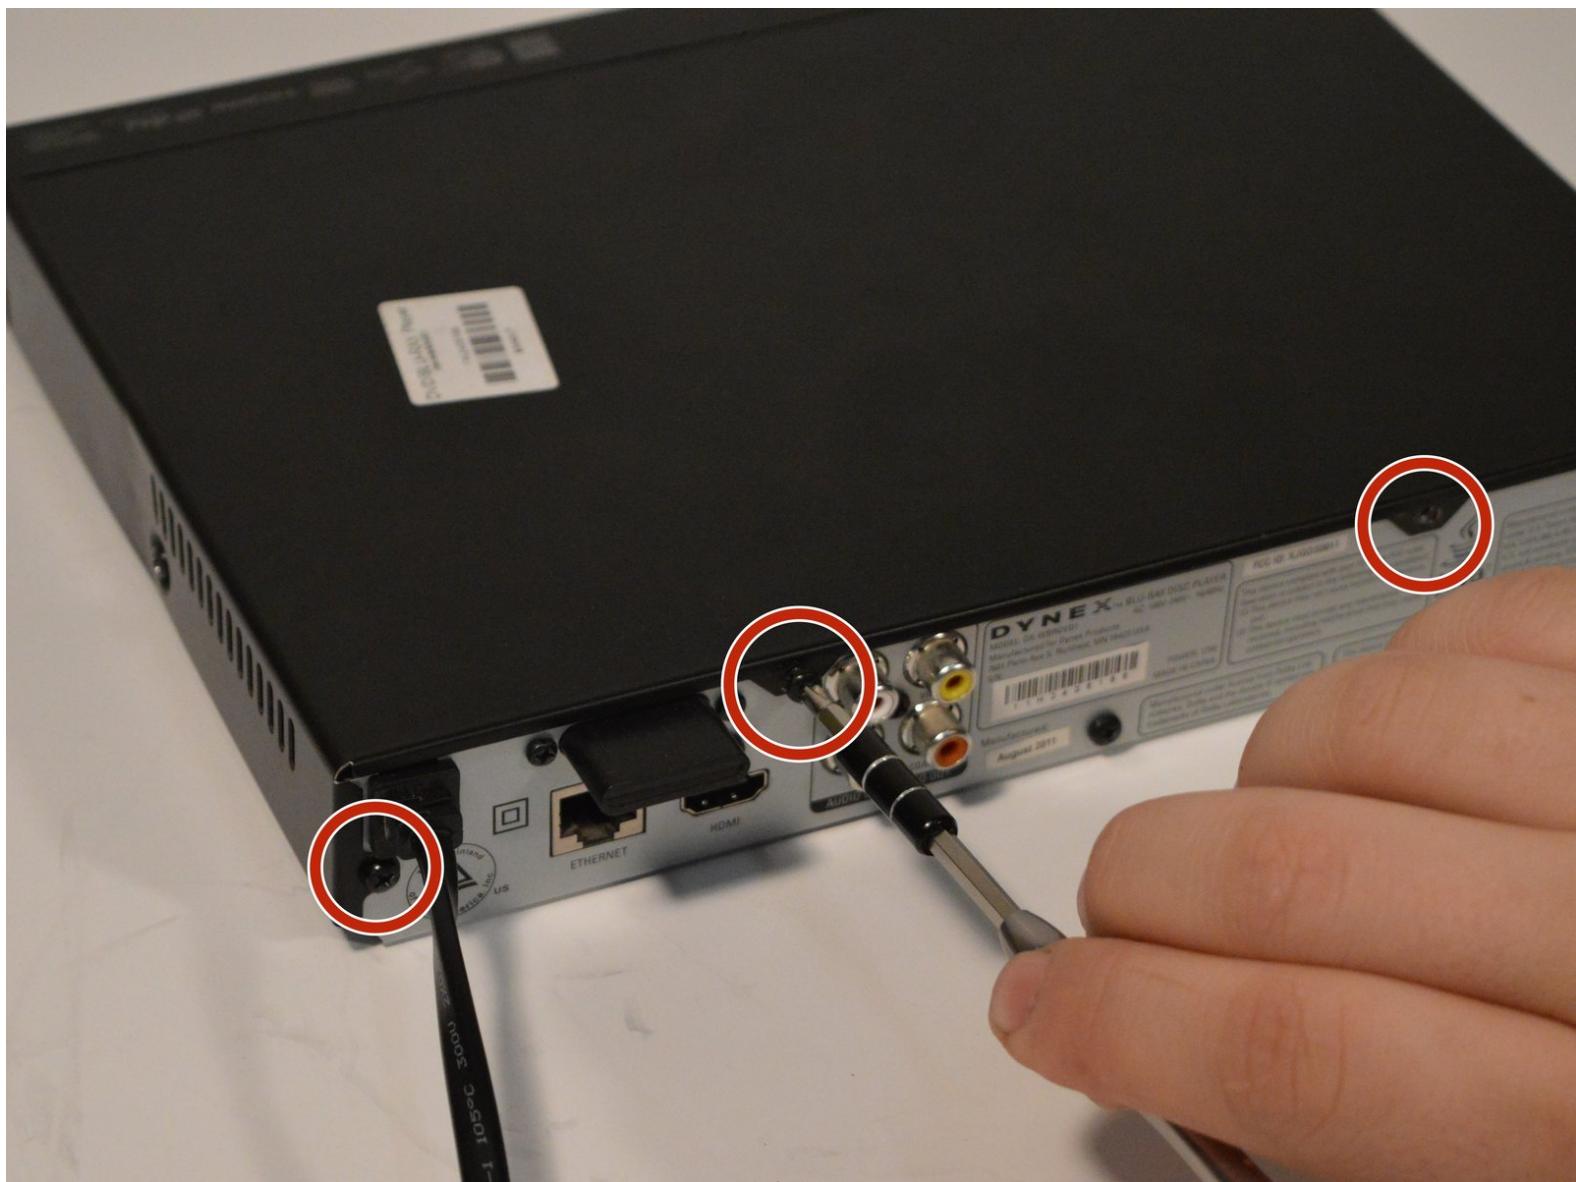



INTRODUCTION

This is the guide to crack into your device, almost every repair guide will need this completed first before being able to tear into the hardware below.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Top Cover

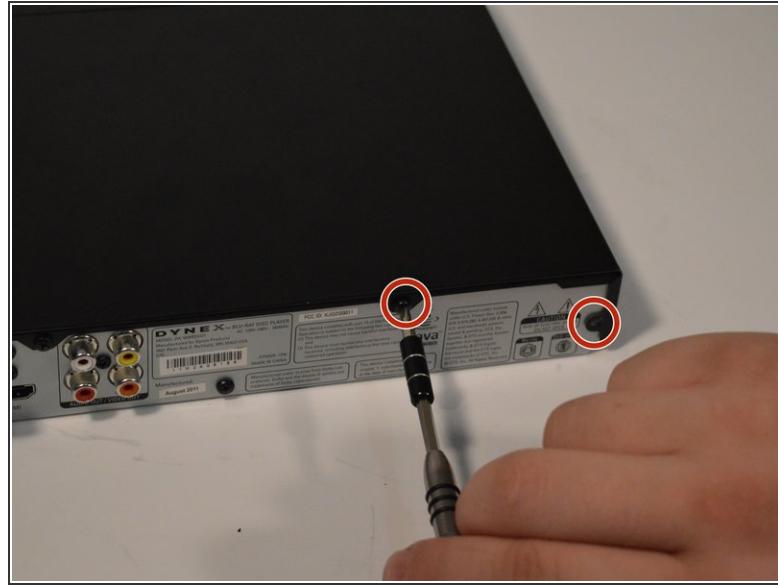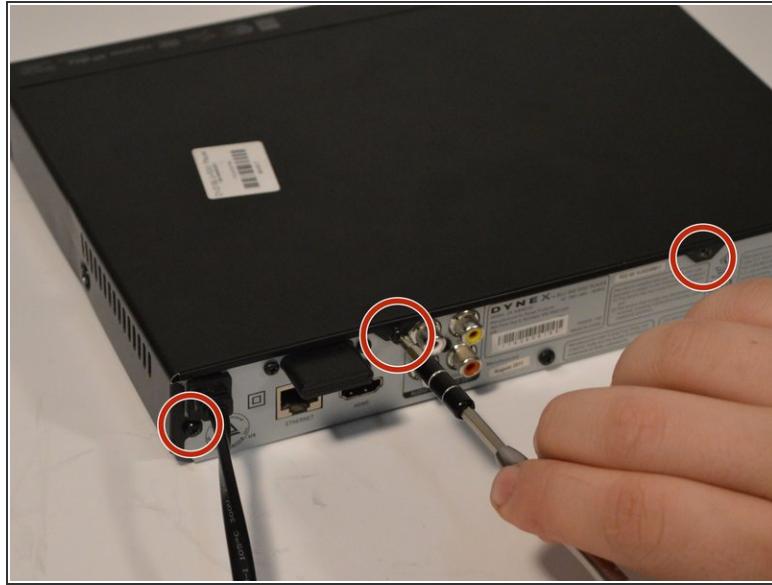

- Use a Phillips #1 screwdriver to remove the four 5mm screws that connect the black outer shell to the silver back of the device.


Step 2



- Use a Phillips #1 screwdriver to remove the two 5mm screws on the left and right side panels.

ⓘ There is one screw on each side that secures the cover to the body of the device.

Step 3

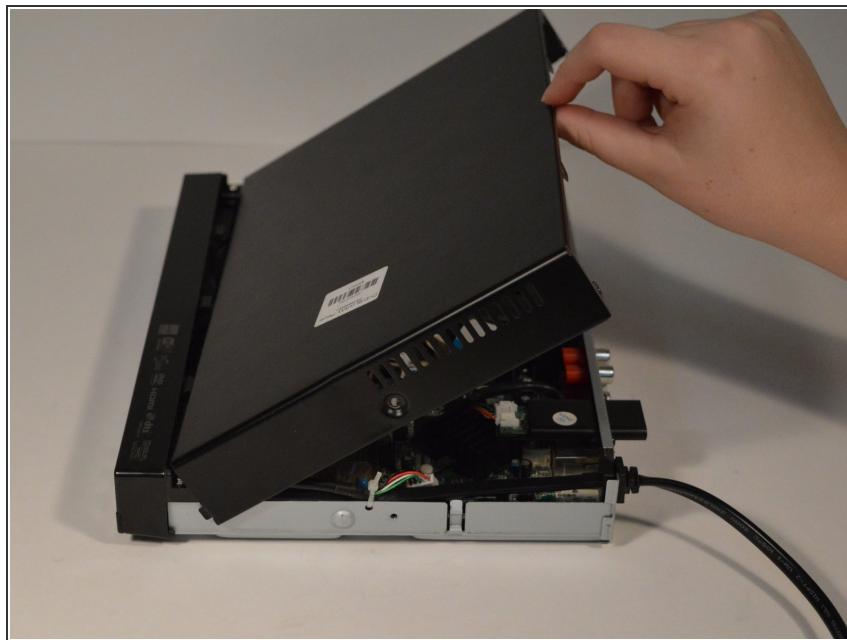

- Lift the black cover to a 45 degree angle from the rear of the device and pull away from the device.

⚠ Check that the power cord is not preventing the device from opening or closing.

To reassemble your device, follow these instructions in reverse order.