



Dyson Ball Animal Filters Replacement

How to remove canister and base filters for replacement or cleaning

Written By: Mitchell Klein



INTRODUCTION

This guide will demonstrate how to remove the filter in the cyclone canister and the base "ball." Filters may need to be replaced or cleaned periodically.

Step 1 — Filters



- Turn off and unplug the vacuum.

Step 2



- Press the red release button and pull the canister up and away.

Step 3




- Pull up on the top handle while lifting up on the filter release latch.

Step 4



- Pull the filter straight up to remove.

Step 5

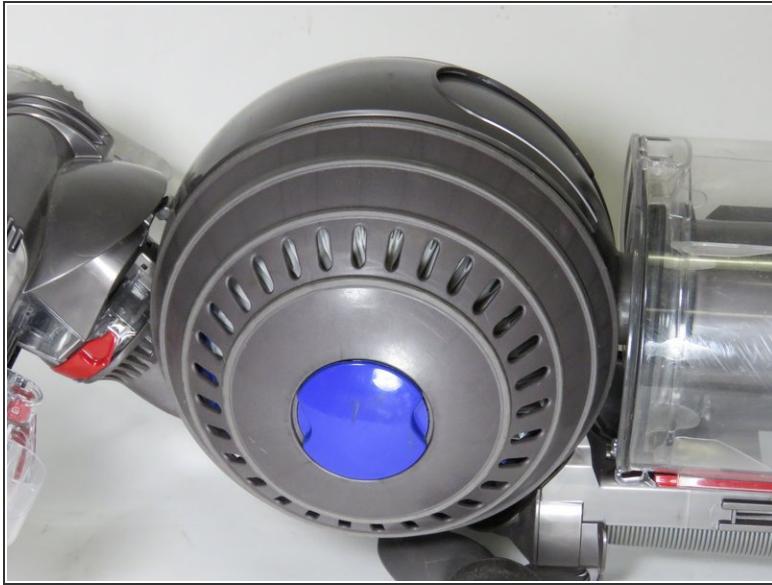

- Lie the vacuum on its back so the blue dial is facing you.

Step 6



- Grip the grooves on the blue dial and unscrew counterclockwise until the side housing is free.

Step 7



- Turn 1/4 turn counterclockwise to release filter, then pull off to remove.

To reassemble your device, follow these instructions in reverse order.