



# Dyson Cinetic Animal Canister Opening Mechanism Replacement

This guide will instruct you on how to replace the curved red plastic bar at the back of the canister.

Written By: Allison Turnbaugh



## INTRODUCTION

This piece allows you to open the canister and remove vacuumed debris. The canister opening mechanism is an important piece to keep your vacuum running smoothly.



## PARTS:

- [Dyson DC47 Cinetic Animal Opening Piece \(1\)](#)

## Step 1 — Dyson Cinetic Animal Disassembly



- Press the gray button to release the canister.

## Step 2



- Remove the canister by lifting it out.

## Step 3 — Canister Opening Mechanism



- Turn canister around to find red upside down "U" shaped bar.
- *i* If the red bar is broken, pull the pieces out.

To reassemble your device, simple put canister back onto the vacuum body.