



Dyson Cinetic Animal Canister Seal Replacement

Replacement of the seal that seals the vacuum body to the hinged door on the canister.

Written By: Alexandria Pompeii



INTRODUCTION

Remove the canister from the ball. Open the Canister to remove and replace the seal.



PARTS:

- [Dyson DC47 Cinetic Animal Canister Seal](#) (1)
-

Step 1 — Dyson Cinetic Animal Disassembly




- Press the gray button to release the canister.

Step 2




- Remove the canister by lifting it out.

Step 3 — Canister Seal

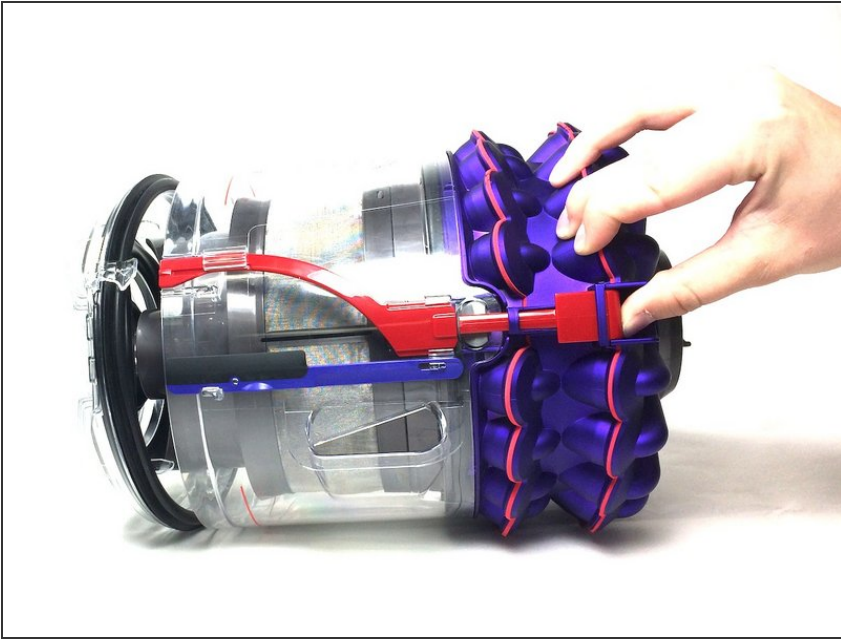

- Press on the red semi-circle shaped button on the canister so the hinged door pops open.

Step 4

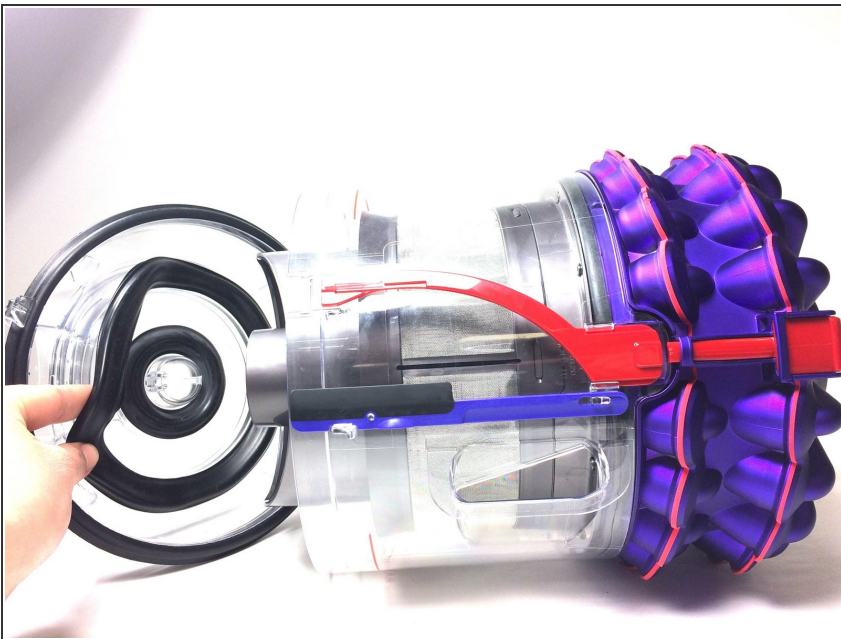

- Now remove the seal by pulling up on it.

To reassemble your device, follow these instructions in reverse order.