



Dyson Cinetic Animal Stabilizer Wheels Replacement

A guide to replacing the small plastic stabilizer wheels on a Dyson DC47 Cinetic Animal.

Written By: Jarod Kinney



INTRODUCTION

The small wheels on the bottom of the Dyson DC47 Cinetic Animal are important for helping the vacuum move. They are simple to replace.

TOOLS:

- T6 Torx Screwdriver (1)

PARTS:

- [Dyson DC47 Cinetic Animal Stabilizer Wheel Assembly. \(1\)](#)

Step 1 — Dyson Cinetic Animal Disassembly



- Press the gray button to release the canister.

Step 2



- Remove the canister by lifting it out.

Step 3 — Stabilizer Wheels



- Locate the small plastic stabilizer wheels on the vacuum.

Step 4



- Remove Stabilizer Wheel assembly by removing the 19 mm screw shown in the picture using a T15 Torx bit.

Step 5



- Remove small plastic piece holding wheel assembly together.

To reassemble your device, follow these instructions in reverse order.