




# Dyson DC14 Brush Bar Replacement

This guide will teach you how to replace the brush bar in a Dyson DC14 vacuum cleaner.

Written By: Donald Percivalle

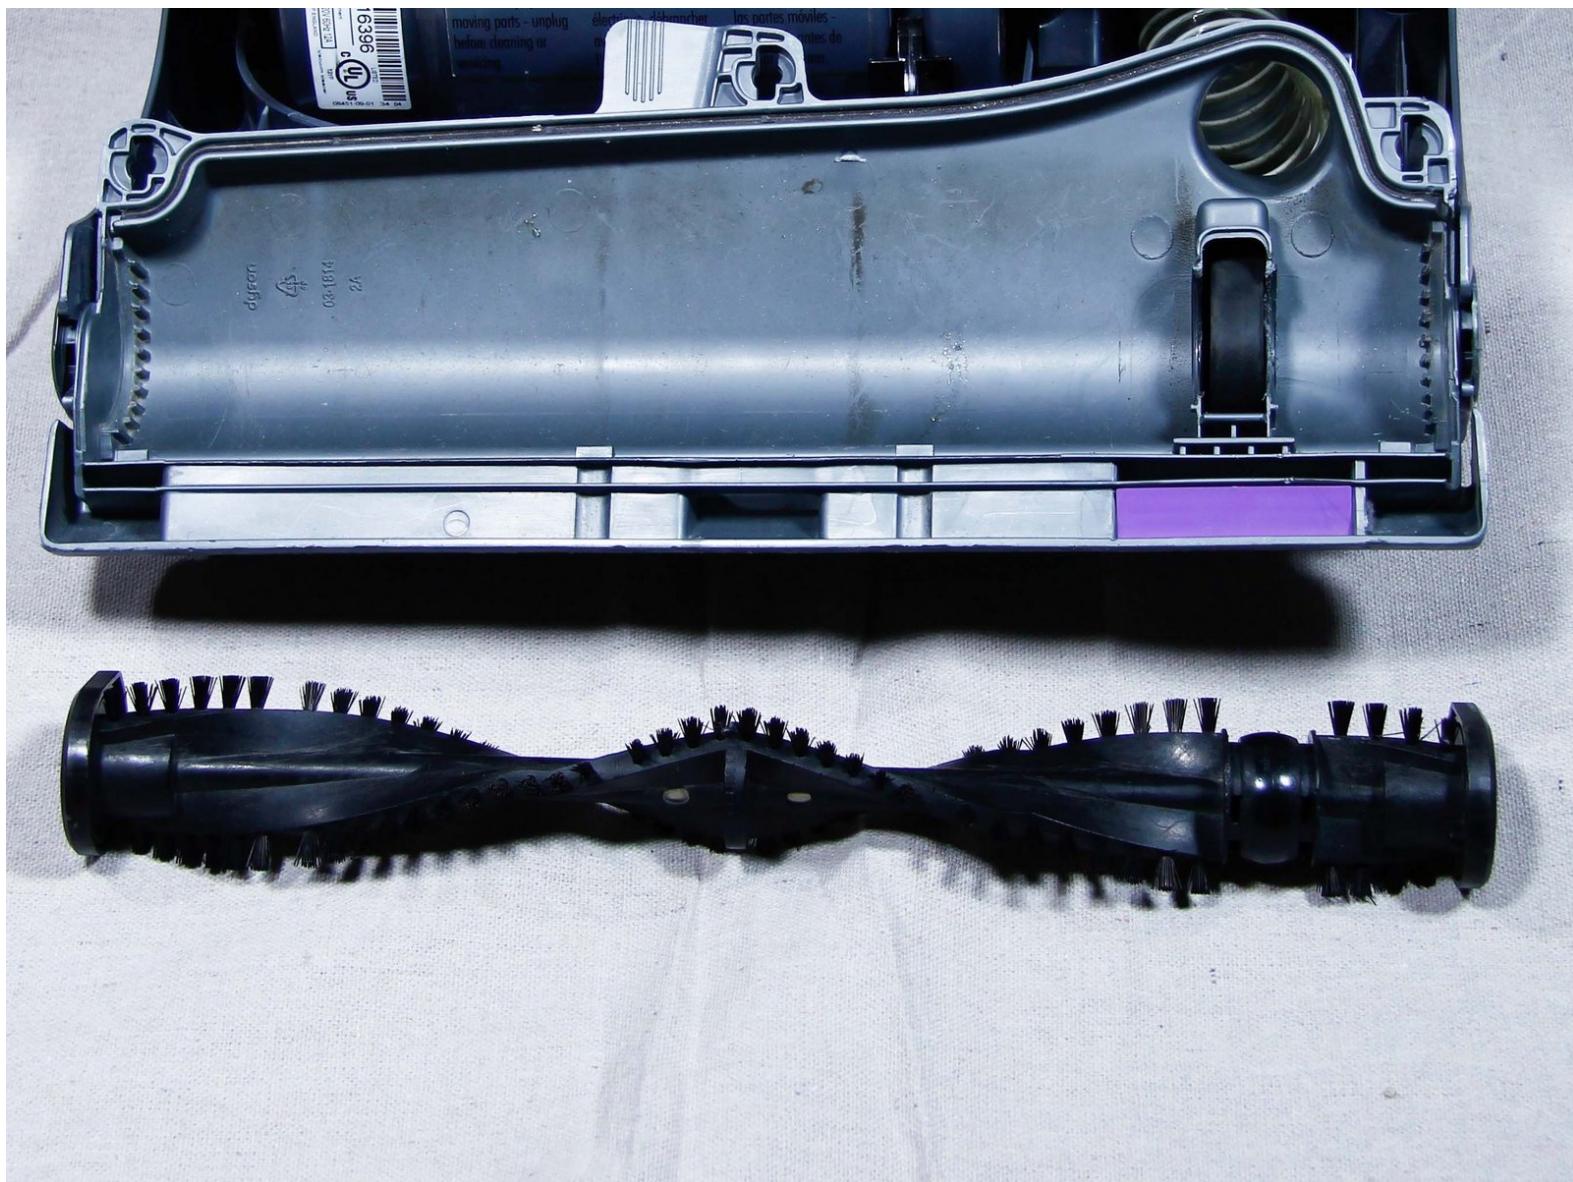

## INTRODUCTION

The brush bar on the vacuum can wear with use. If your brush is scratching your floor, or not cleaning as well as it used to, then you may want to replace your brush bar.


### TOOLS:

- [Coin \(1\)](#)
- [Flathead 3/32" or 2.5 mm Screwdriver \(1\)](#)

### PARTS:


- [Dyson DC14 Brush Bar \(1\)](#)

## Step 1 — Brush Bar

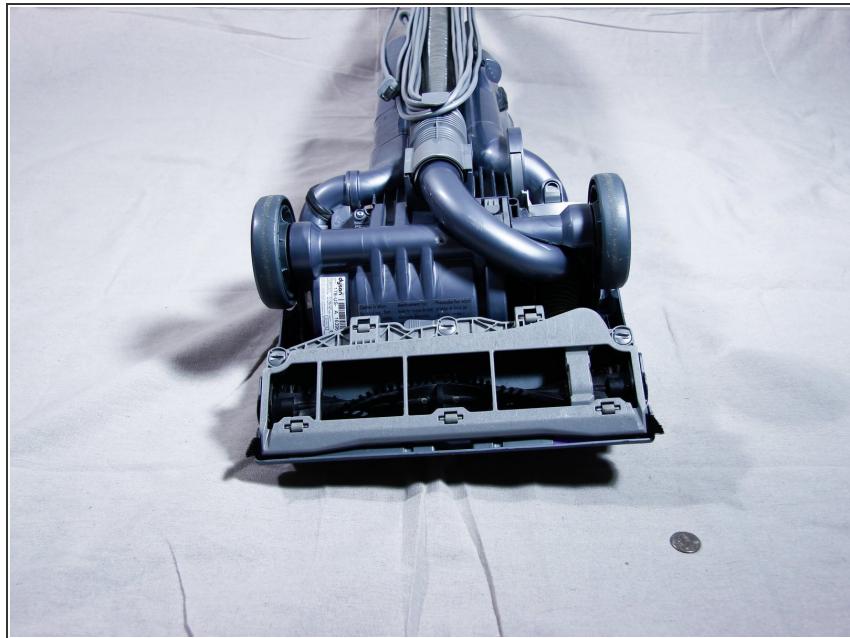



- Turn off the vacuum and unplug it from the outlet.
- Lay the vacuum on its top so that the brush bar faces you.

## Step 2

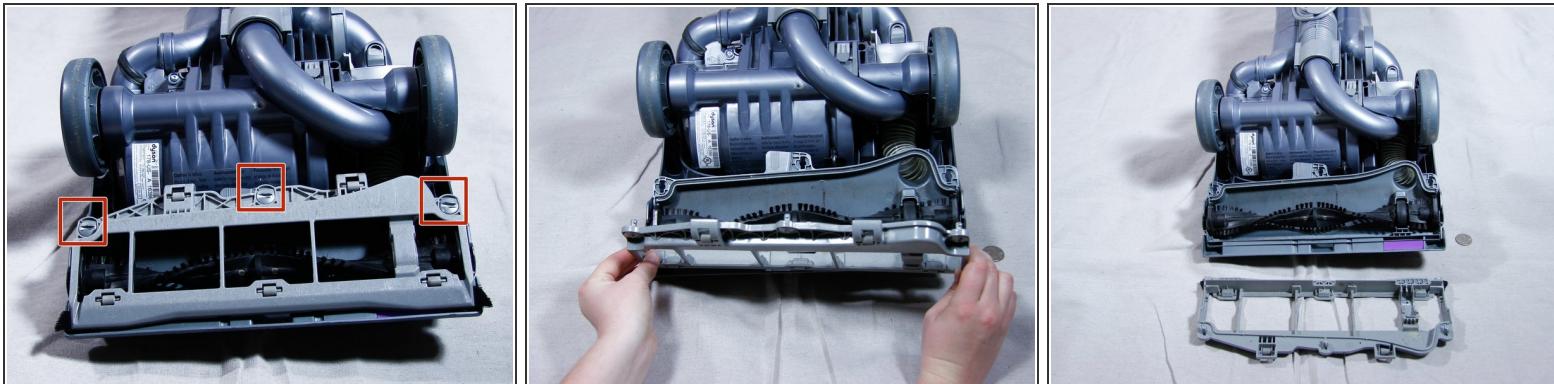

- Using a quarter, turn the three soleplate fasteners 90 degrees to the left.
- Holding the soleplate on both sides, tilt it down and away from the vacuum.
- Remove the soleplate from the vacuum.

## Step 3

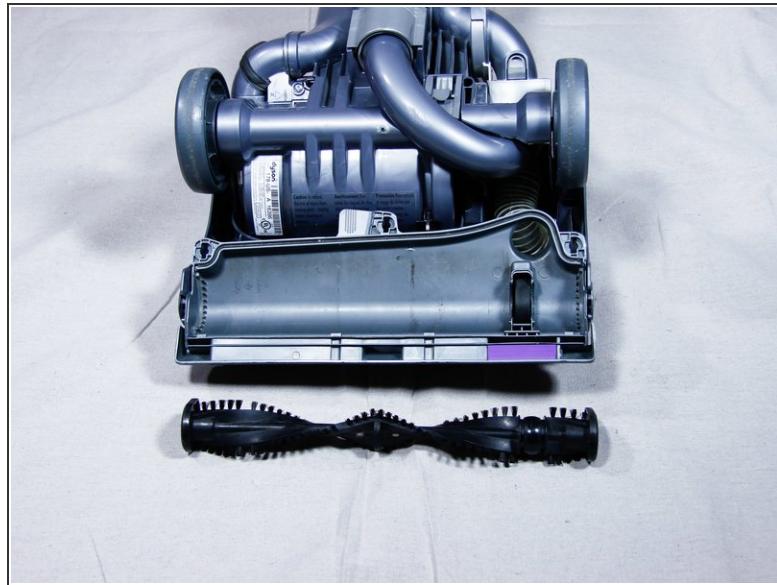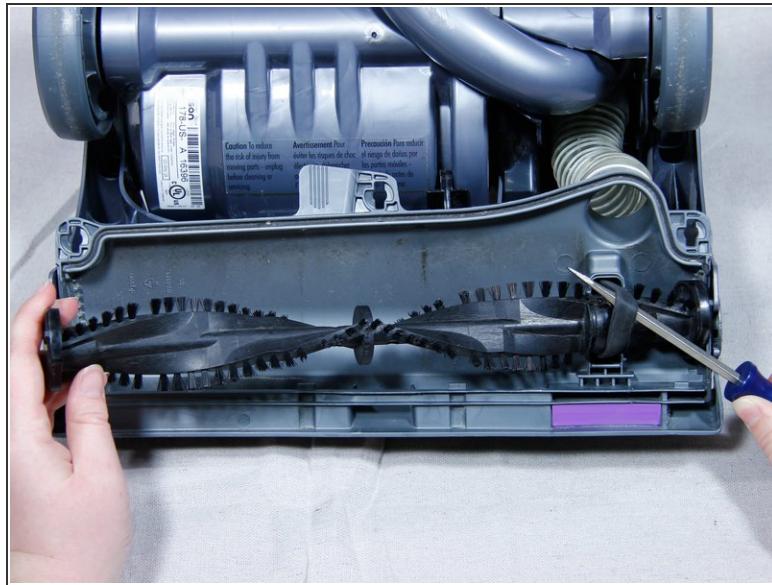

- Turn down the squared tabs on the brushbar so that they face outward.
- Use a screwdriver to pry the belt up from the brushbar.  
**⚠** Be careful not to cut the belt with the screwdriver.
- While holding the belt, pull the brushbar to the left and remove it from the vacuum.  
**ℹ** You can let go of the belt when it's free from the brushbar. The belt will not retract into the vacuum.
- ★** During reassembly, insert the brushbar with the tabs facing outward, then rotate the tabs up to lock the brushbar in place.

To reassemble your device, follow these instructions in reverse order.