



# Dyson DC28 Animal Nozzle/Handle Replacement

Use this guide to replace the nozzle or handle on your Dyson DC28 Animal.

Written By: Jerico Ducay



## INTRODUCTION

This guide will show you how to replace the nozzle and handle on a Dyson DC28 Animal.

## Step 1 — Nozzle/Handle



- Begin by completely unwinding the wire on the back.

## Step 2



- Place the vacuum either upright or on its back and lift the nozzle lid to access the nozzle.

## Step 3



- Pull the nozzle until it is completely out of its housing.

## Step 4



- With the vacuum placed upright, press firmly on the gray button, located on the back of the handle, and pull directly upwards until handle is completely removed from the rest of the vacuum

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-23 01:55:35 PM (MST).

