



Dyson DC43H Battery change

How to dismount the battery block to change it

Written By: Bossard Nicolas



 **TOOLS:**

- [New Item \(1\)](#)

Step 1 — Dyson DC43H Battery change



- Dismount your vacuum as usual to clean it.

Step 2



- Remove the screw surrounded by a red circle on the picture.

Step 3



- Return the vacuum
- Remove another screw, the one surrounded by a red circle on the picture.

Step 4



- Gently pull the battery block down.

In order to remount it, follow the instructions in the reverse order