



# Dyson DC56 Attachments Replacement

Replace the attachment port and connect different attachments to your Dyson DC56 for different cleaning options.

Written By: John Czerkawski



## INTRODUCTION

The attachment holder is important to keep the attachment steady while using the vacuum. Without a proper way to hold attachments the vacuum can become unusable.

### TOOLS:

- [T8 Torx Screwdriver](#) (1)
- [Metal Spudger](#) (1)

## Step 1 — Dust Bin



- Make sure the vacuum is unplugged.

 **Warning:** Avoid pressing the red trigger because it will turn on and begin suction.

## Step 2




- Locate the purple button at the top of the device.

## Step 3



- Separate the device with the purple button.

## Step 4

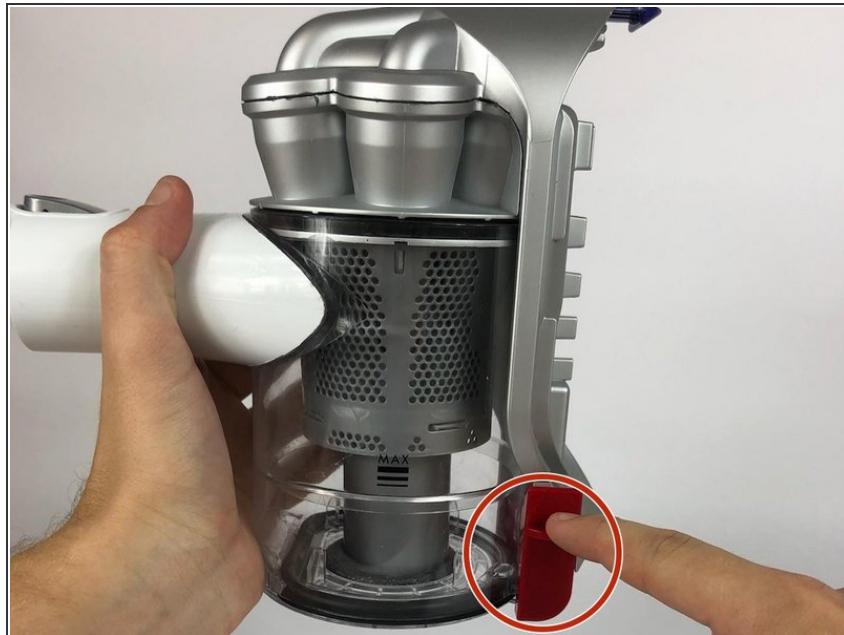


- Locate the dust bin's red release lever on the side of the device.
- ➡ Make sure if the dust bin is full you open the vacuum over a trash can.

## Step 5



- Push the red lever to release the dust bin lid.

## Step 6

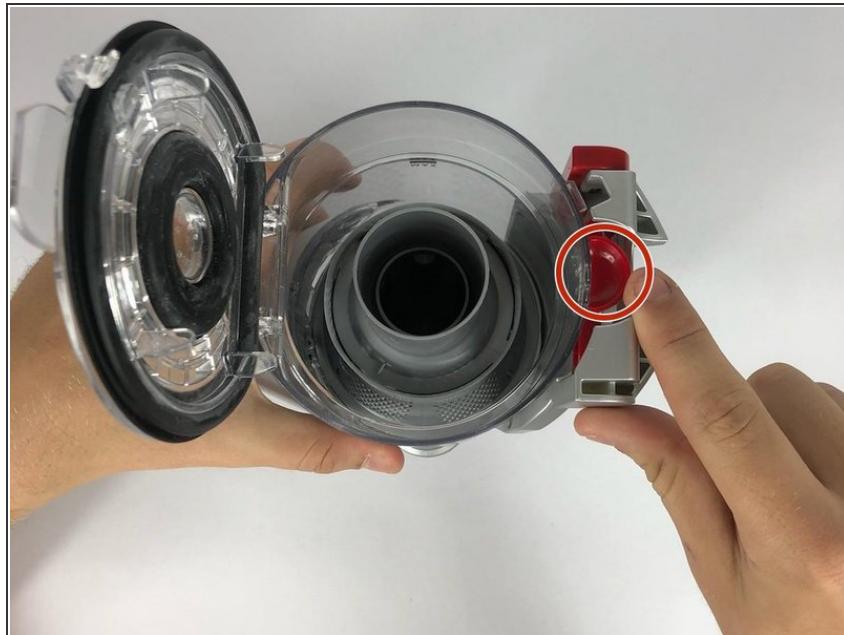


- Locate the red lever below the vacuum.

## Step 7




- Push the red lever, pull the back up and away from the dust bin to separate them.

## Step 8 — Attachments

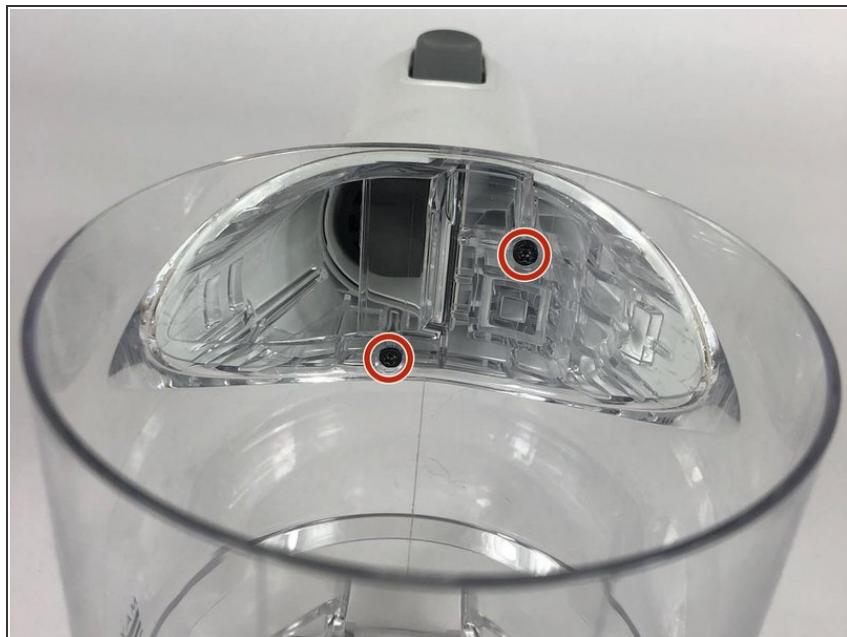

- Locate two screws at the back of the attachment holder.

## Step 9

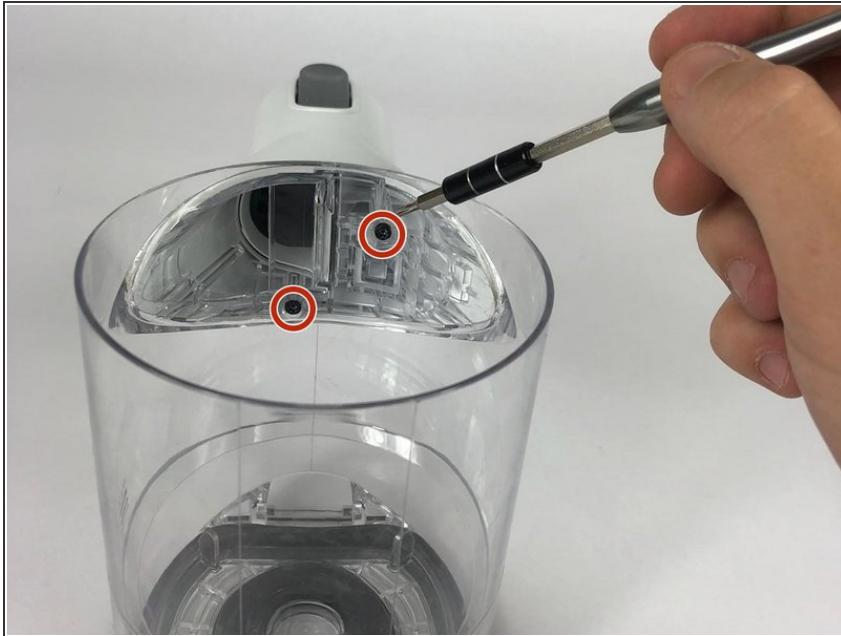


- Use a T8-Torque screwdriver to take out the two 26mm screws out.

## Step 10



- Loosen the attachment holder by using a metal spudger.

## Step 11

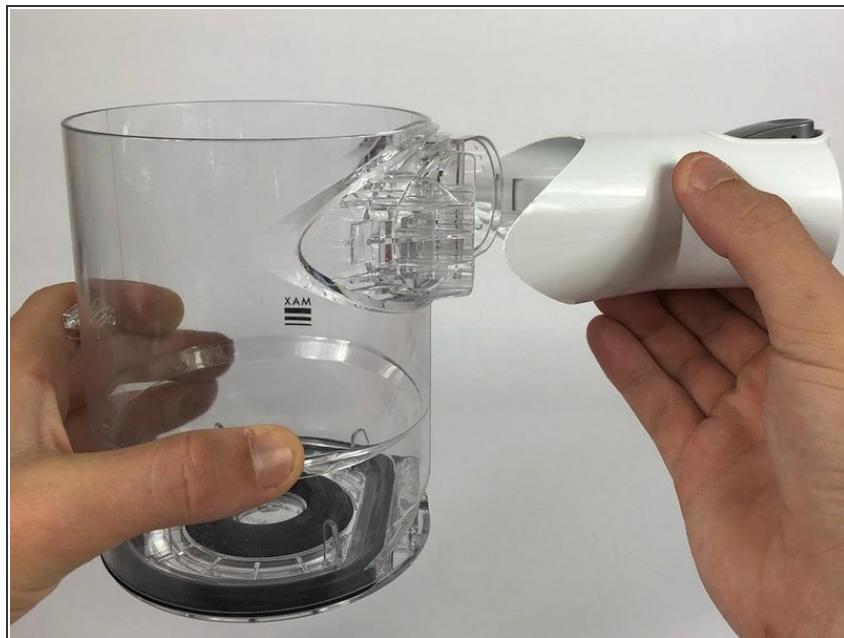

- Remove the attachment holder.

To reassemble your device, follow these instructions in reverse order.