



# Dyson DC56 Dust Bin Replacement

This guide will show how to remove the dust bin from a DC56 vacuum if it needs to be replaced.

Written By: John Czerkawski



## INTRODUCTION

The dust bin holds all the debris sucked up by the vacuum. It is important to keep it clean and replace a broken dust bin if needed.

## Step 1 — Dust Bin



- Make sure the vacuum is unplugged.

 **Warning:** Avoid pressing the red trigger because it will turn on and begin suction.

## Step 2




- Locate the purple button at the top of the device.

## Step 3



- Separate the device with the purple button.

## Step 4

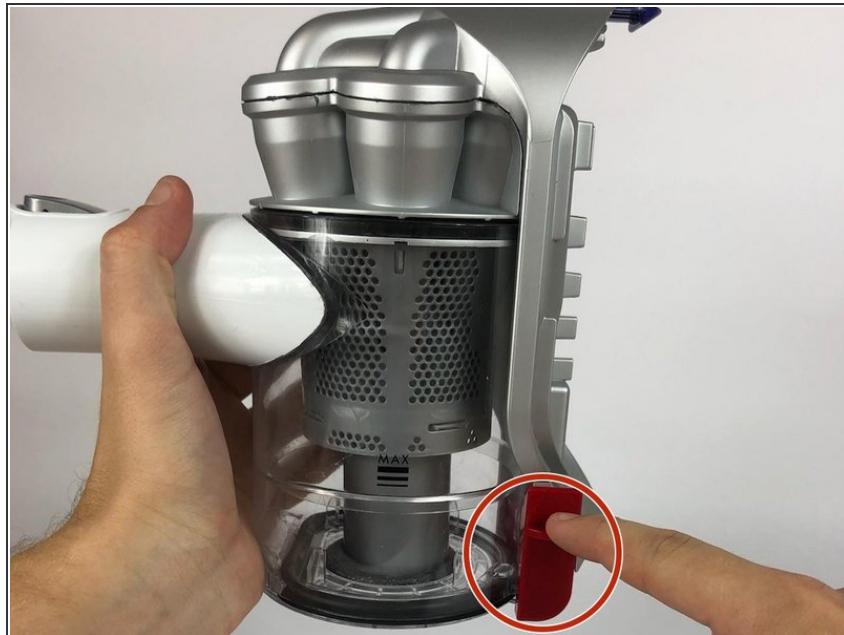


- Locate the dust bin's red release lever on the side of the device.
- ➡ Make sure if the dust bin is full you open the vacuum over a trash can.

## Step 5



- Push the red lever to release the dust bin lid.

## Step 6

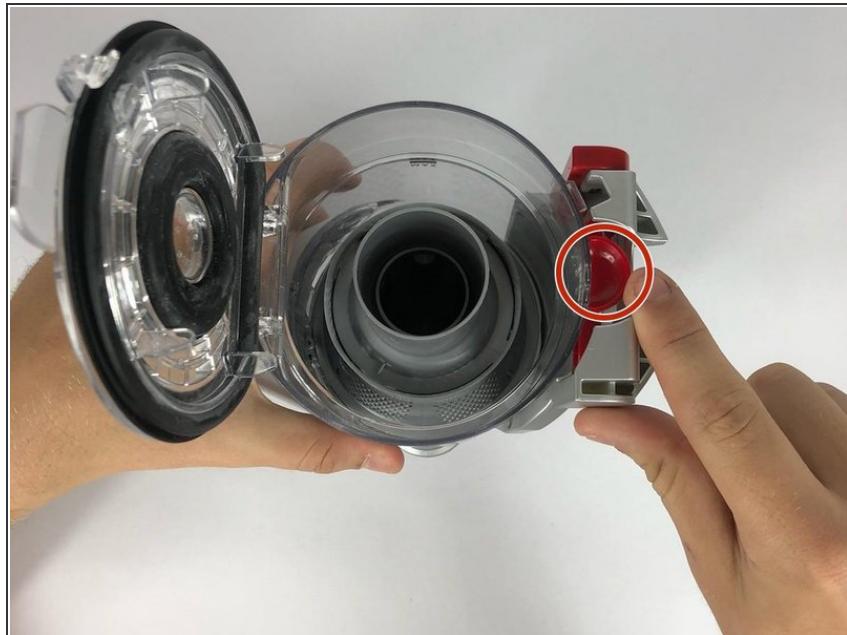

- Locate the red lever below the vacuum.

## Step 7



- Push the red lever, pull the back up and away from the dust bin to separate them.

To reassemble your device, follow these instructions in reverse order.