




Echo Power Pruner 254 cc PPT2620 2019

Control Handle Assembly Replacement

Remove the control handle assembly on an Echo Power Pruner 254 cc PPT2620 2019.

Written By: Adam O'Camb

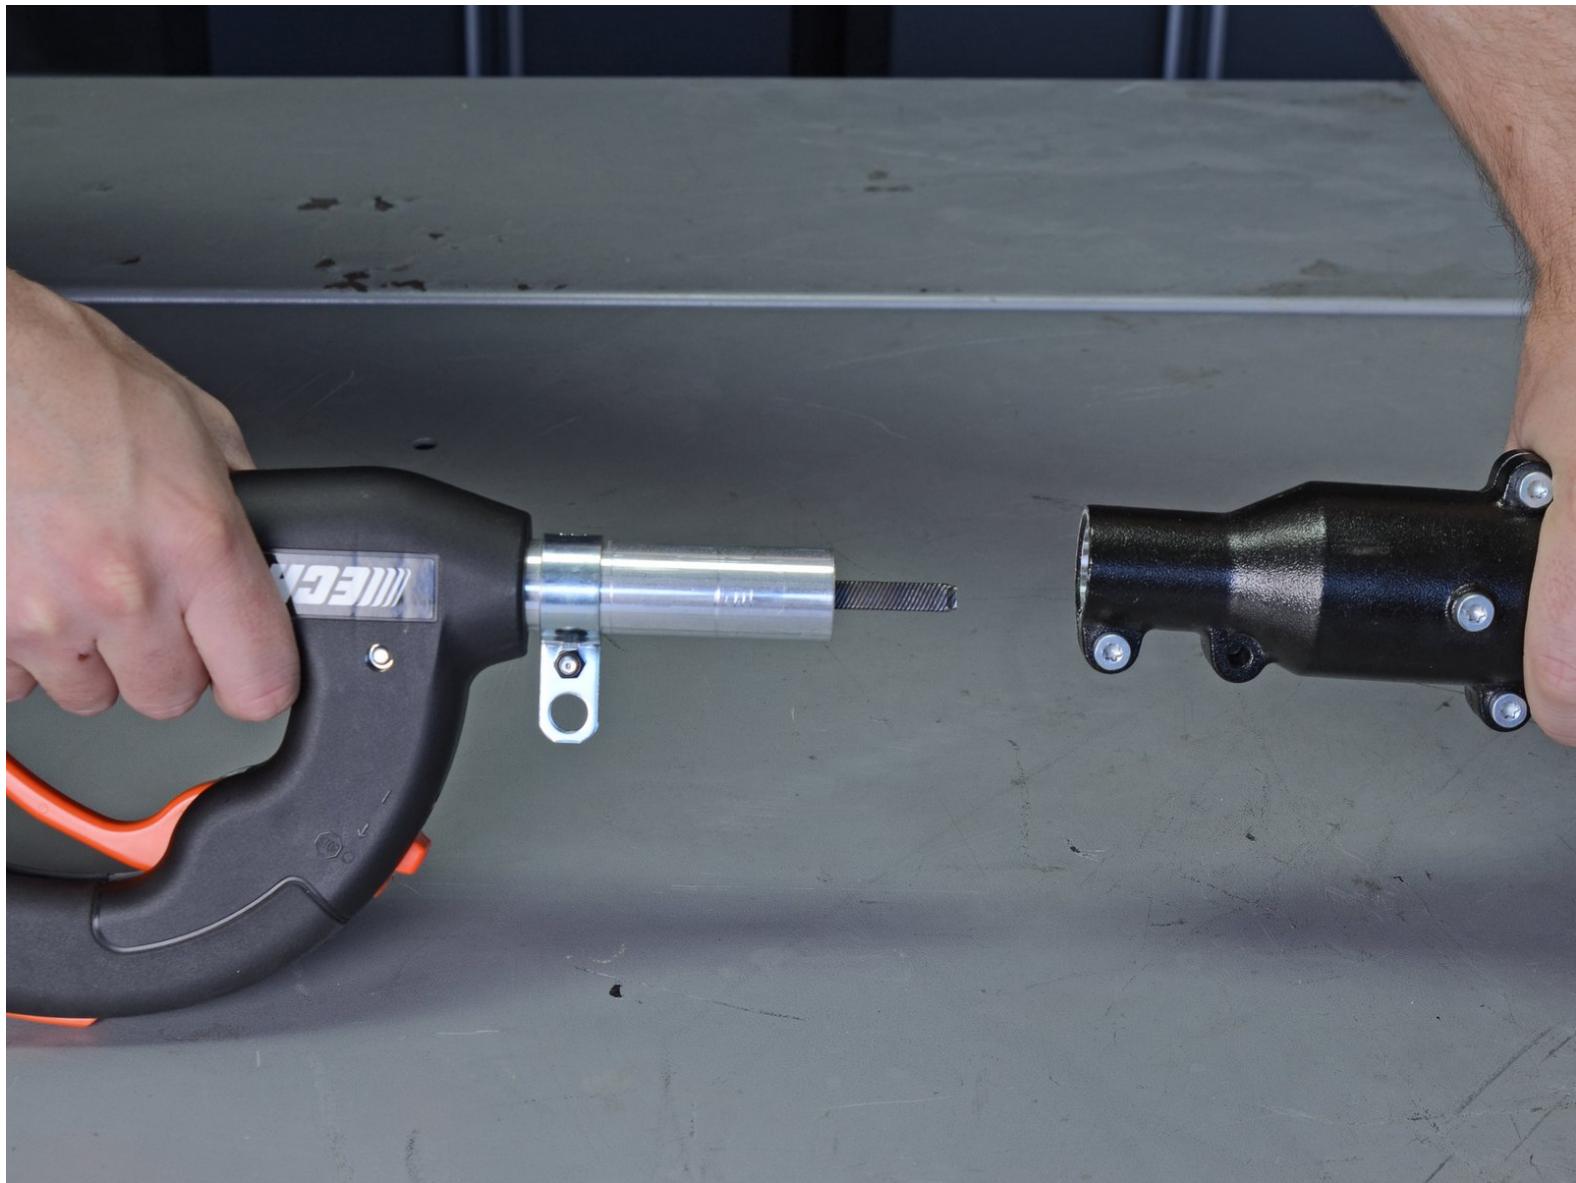

INTRODUCTION

Use this guide to remove the control handle assembly on an Echo Power Pruner 254 cc PPT2620 2019.

TOOLS:

- [T25 Torx Screwdriver \(1\)](#)

Step 1 — Disconnect the spark plug



 Move the stop switch into the "stop" position to turn the pruner off before attempting any repairs.

- Pull the spark plug cap straight off of the spark plug.

Step 2 — Remove the control handle assembly



- Use a T25 Torx screwdriver to loosen (but not remove) the two screws clamping the main pipe assembly to the control handle.

Step 3



- Remove the control handle from the main pipe assembly.

To reassemble your device, follow these instructions in reverse order.