



Echo Power Pruner 254 cc PPT2620 2019

Control Handle Disassembly

Prereq-only guide to take apart the control handle.

Written By: Adam O'Camb



INTRODUCTION

Prereq-only guide to take apart the control handle.

TOOLS:

- T25 Torx Screwdriver (1)

Step 1 — Disassemble the control handle



- Use a T25 Torx screwdriver to remove the seven screws holding the control handle together.

Step 2



- Lift the top half of the control handle straight up to remove it.

(i) The following step shows the throttle trigger and throttle lockout removed. These parts do not need to be removed for this guide.

To reassemble your device, follow these instructions in reverse order.