



Echo Power Pruner 254 cc PPT2620 2019

Spark Plug Disconnect

Prereq-only guide to disconnect the spark plug on an Echo Power Pruner 254 cc PPT2620 2019.

Written By: Adam O'Camb



INTRODUCTION

Prereq-only guide to disconnect the spark plug on an Echo Power Pruner 254 cc PPT2620 2019.

Step 1 — Disconnect the spark plug



⚠ Move the stop switch into the "stop" position to turn the pruner off before attempting any repairs.

- Pull the spark plug cap straight off of the spark plug.

To reassemble your device, follow these instructions in reverse order.