



Eclipse T180 MP3 remove casing & Belt Clip 3 Steps

To remove metal casing for and belt clip of 4Gb model with touchscreen, plays movies, FM radio receiver, Micro SD slot & usb charger port.

Written By: Eliza May



This document was generated on 2019-09-22 05:43:40 PM (MST).

INTRODUCTION

Basically there is a ****TINY**** screw just above the belt clip, which must come out. I actually used a flat-head watch screwdriver tilted because I didn't have a phillips screwdriver which is what you should use. Once I had the screw out it is a simple matter of pushing down vertically on the top portion of the player where all the buttons are - the metal casing will slide down and off. I actually took the belt clip off before I realized it didn't have screws hidden beneath it and I probably could have slid the case off without removing the clip. If you want to remove the clip, there is a small 1" metal pin that passes through the hinge and spring - if you still have your smallest watch screwdriver, you can push that pin out by pushing the screwdriver against that pin from right to left when the clip is facing towards you/looking from back. Once you push the pin so far so that it is extruding from the other side, you can grab the protruding end (it is crimped so you cannot push it from the left side) with pliers and pull it all the way through. This will release the clip and spring.

TOOLS:

- [Slip Joint Pliers](#) (1)
- [Phillips #00 Screwdriver](#) (1)

just basically the very smallest watch-type screwdriver

Step 1 — Removing the screw



- Basically there is a **TINY** screw just above the belt clip, which must come out (where that very small hole is at the top of the case, centre). I actually used a flat-head watch screwdriver tilted because I didn't have a phillips screwdriver which is what you should use.

Step 2 — Sliding off Casing



- Once I had the screw out it is a simple matter of pushing down vertically on the top portion of the player where all the buttons are - the metal casing will slide down and off. I actually took the belt clip off before I realized it didn't have screws hidden beneath it and I probably could have slid the case off without removing the clip.

Step 3 — Removing belt clip



- There is a 2.5 cm x 1mm pin that passes through the hinge & spring - use your screwdriver & push the pin out from right to left with clip facing towards you. Once the pin is extruding from the left, you can grab it (it is crimped so you cannot push it from the left side) with pliers and pull it all the way through, releasing the clip and spring.

To reassemble your device, follow these instructions in reverse order.