



Ehang GHOSTDRONE Aerial Plus 2.0 Compass Replacement

Replace the compass to bring back direction to your Ehang GHOSTDRONE Aerial Plus 2.0.

Written By: Edrees Nawabi



INTRODUCTION

Are you having issues with your compass? Follow this guide to replace the compass.

Step 1 — Compass



- Flip your GHOSTDRONE over and identify the compass.

Step 2



- Turn the Compass counter-clockwise until it comes off.

To reassemble your device, follow these instructions in reverse order.