



Ehang GHOSTDRONE Aerial Plus 2.0 Leg Replacement

Are you having problems landing your GHOSTDRONE? Follow this guide to replace the legs.

Written By: Edrees Nawabi



INTRODUCTION

In order to replace the legs, follow this guide.

TOOLS:

- Mako Driver Kit - 64 Precision Bits (1)

Step 1 — Leg



- Flip your Drone upside-down.
- Identify the screws attaching the legs to the Drone.

Step 2



- Using the Hex 2.0 attachment to the Magnetized Driver Handle, unscrew the 4 screws attaching the legs to the Drone.

To reassemble your device, follow these instructions in reverse order.