



Ehang GHOSTDRONE Aerial Plus 2.0 Propeller Replacement

Replace your propellers to keep your Ehang GHOSTDRONE Aerial Plus 2.0 flying.

Written By: Eleni



INTRODUCTION

Are you having trouble flying your GHOSTDRONE because of weak propellers? Follow this simple guide to replace the battery on your Ehang GHOSTDRONE Aerial Plus 2.0.

Step 1 — Propeller



- Turn the drone on its back and identify the propeller that needs replacing.

Step 2



- Pinch the circular base where the propeller is attached.
- Twist the silver-tipped propellers counter-clockwise to unscrew.
- Twist the black-tipped propellers clockwise.

To reassemble your device, follow these instructions in reverse order.