




# Element GC-1020 Headphone Jack Replacement

This guide will give step-by-step instructions on how to replace the headphone jack on the media device.

Written By: Lashaun Noel

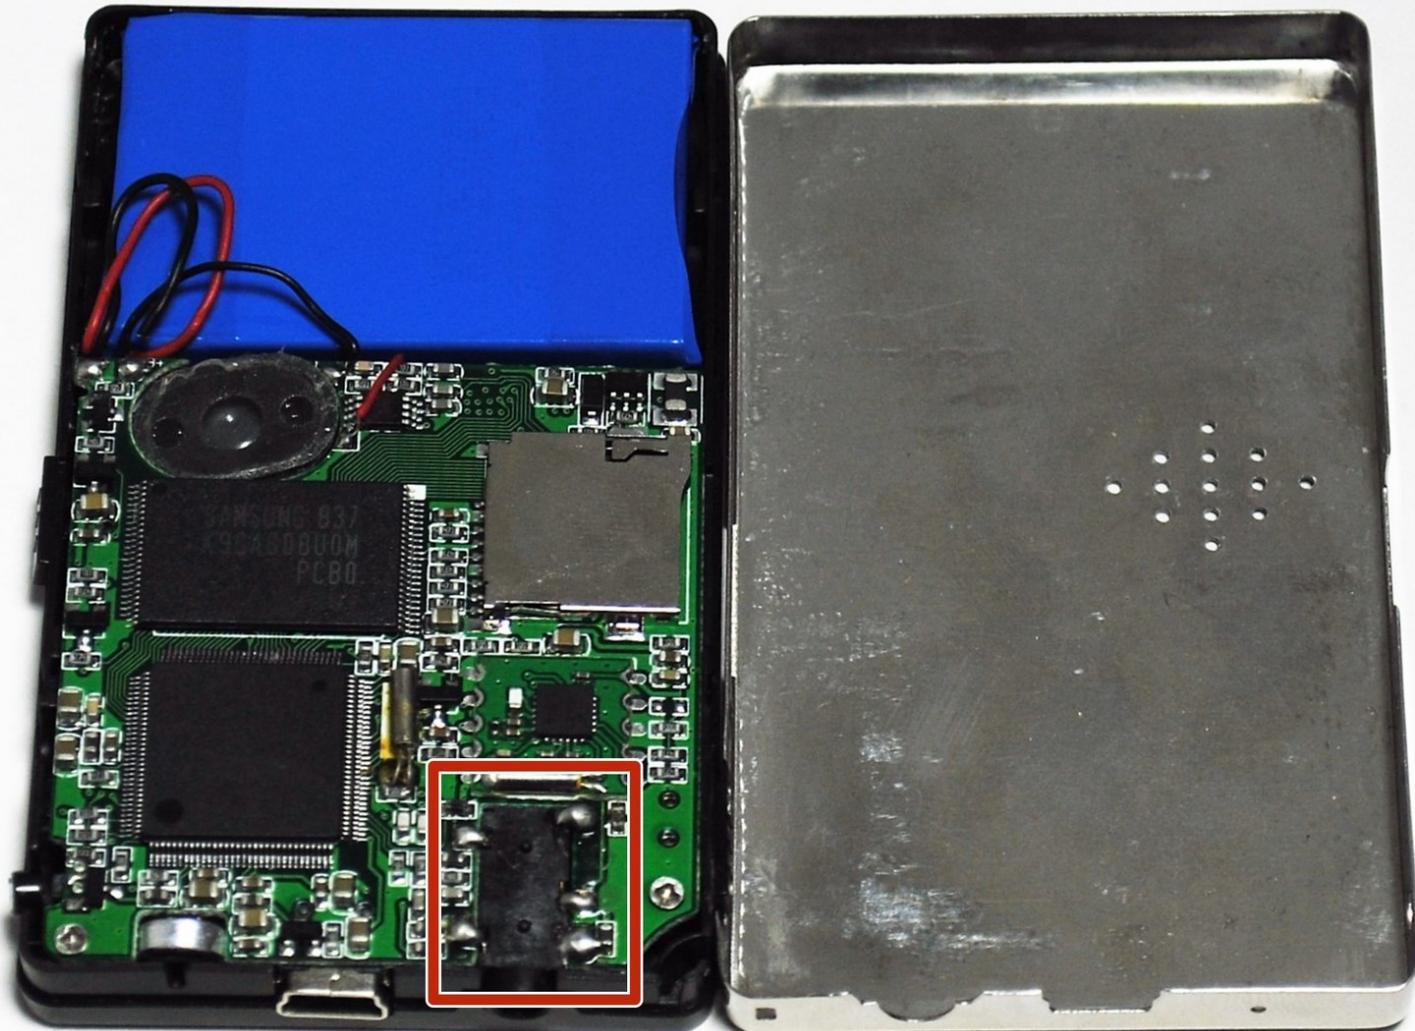


## INTRODUCTION

Use this guide to access the headphone jack and check soldered connections. If you are planning to follow this replacement guide, you should have identified the headphone jack as a source of a problem (or maybe you just want to see the guts of your Element GC-1020).

### TOOLS:


- **Phillips #0 Screwdriver** (1)
- **Soldering Iron** (1)
- **Tweezers** (1)

## Step 1 — Back Cover Replacement Guide

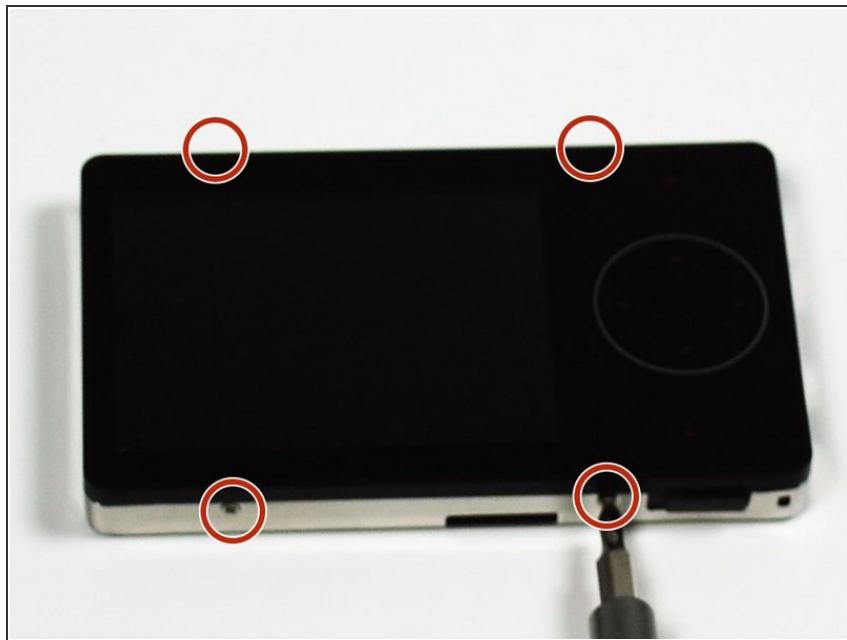

- Unscrew the four screws (size: 3.175mm) on the left and right side of the Element Electronics GC-1020 device using the PH#0 screwdriver.


## Step 2

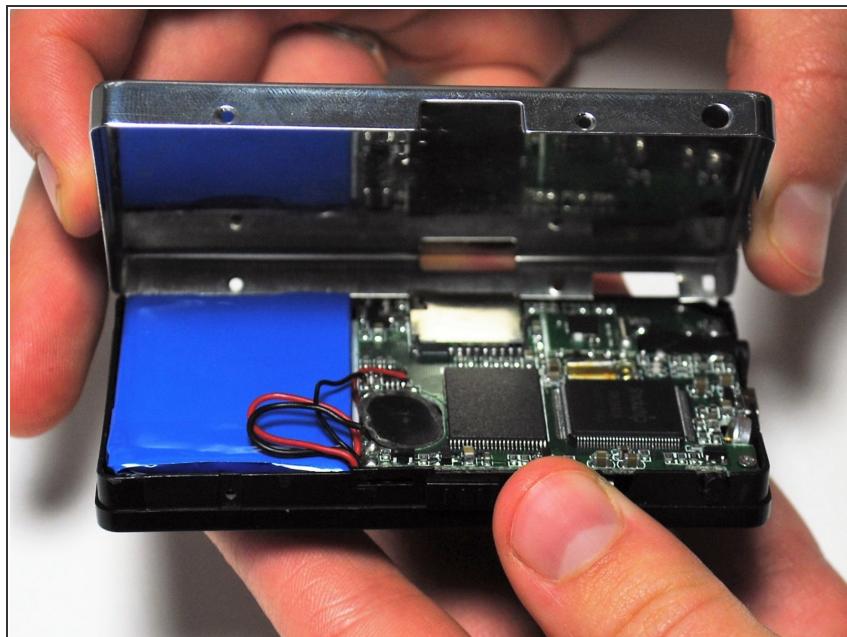

- Carefully pull the back of the device (the silver portion) apart from the rest of the device.

*(i)* If you pull back too forcefully the power button would move out of place.

## Step 3 — Headphone Jack

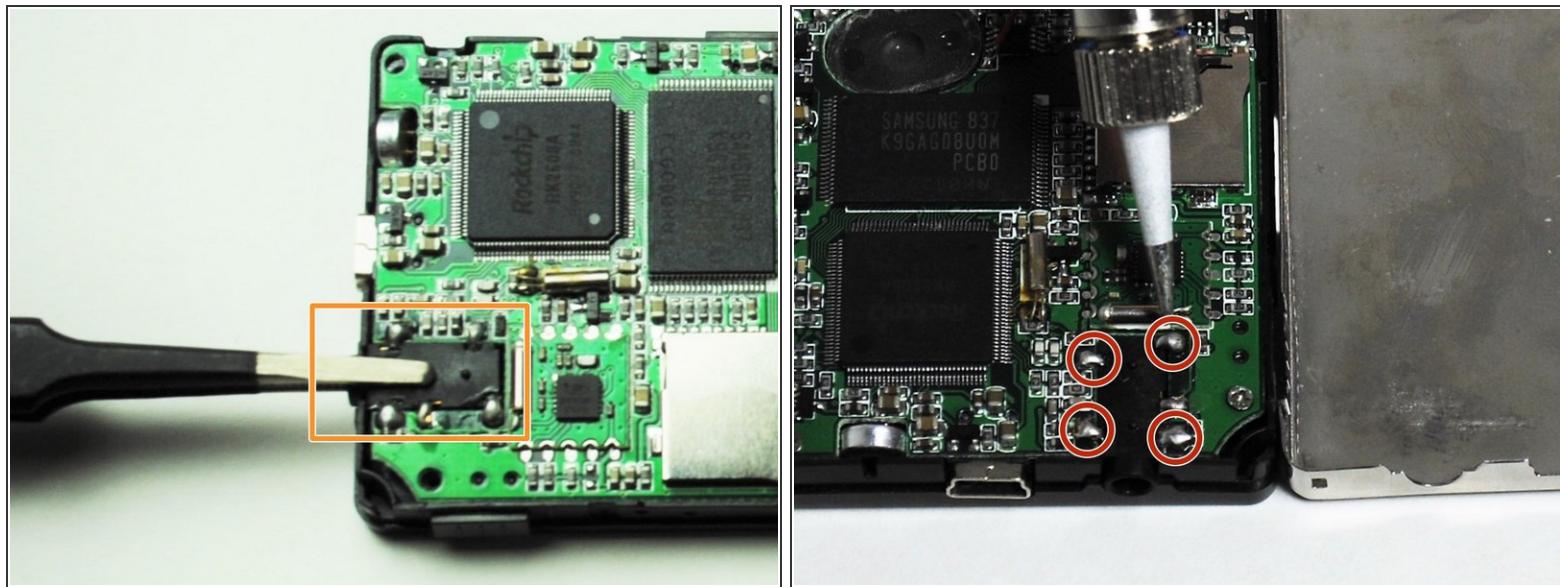

- Desolder the four points where it is soldered to the motherboard.
- When completed pull the headphone jack off using tweezers and replace.

To reassemble your device, follow these instructions in reverse order.