



# Ematic FunTab 3 Back Panel Replacement

Open or replace the case on your Ematic FunTab 3.

Written By: Harrison Lee



## INTRODUCTION

If you need to open your device or replace the back panel, this guide will show you how.

### TOOLS:

- [iFixit Opening Tools \(1\)](#)

## Step 1 — Back Panel



! Turn off the device before starting

! To prevent damage, open the device on the side without the buttons.

- Insert the hooked end of the plastic opening tool in the gap between the screen and the back panel on the edge of the device.
- Slide the plastic opening tool down the long side of the device.
- Insert tool again and slide it down the long slide of the case a second time.

## Step 2



- Pull the back panel away from the screen.

To reassemble your device, follow these instructions in reverse order.