



Ematic Model FTABMP2 Battery Replacement

This guide will show you how to replace the battery of the Ematic Model FTABMP2.

Written By: Timothy



INTRODUCTION

A guide on how to solder --> [How To Solder and Desolder Connections](#)

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)

Step 1 — Battery



- Use a spudger to pry open the case of your device to reveal the inside.

Step 2

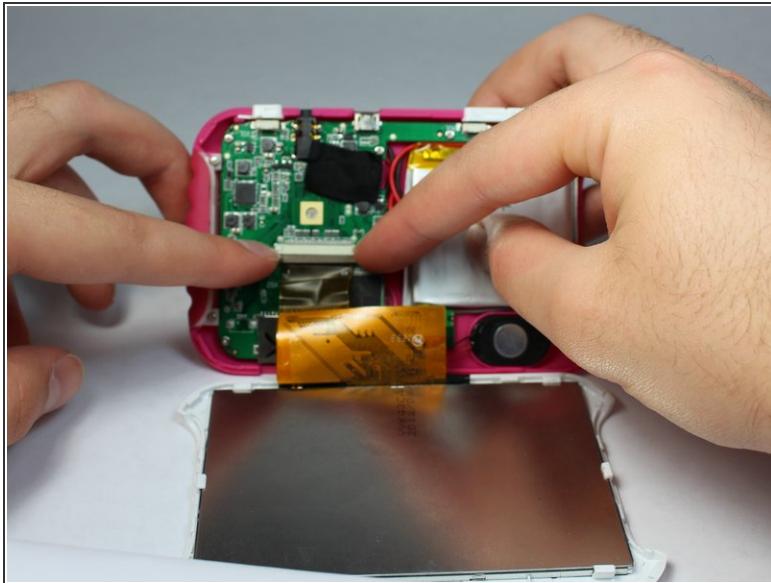


- Disconnect the LCD cable from the motherboard by pressing together the two sides of the clamp to separate the device into two.

Step 3



- Remove the screws holding down the motherboard. Remove the plastic power and volume buttons. remove the two side grips of the device. You can now remove the motherboard, speaker, and battery as one from the device.

Step 4

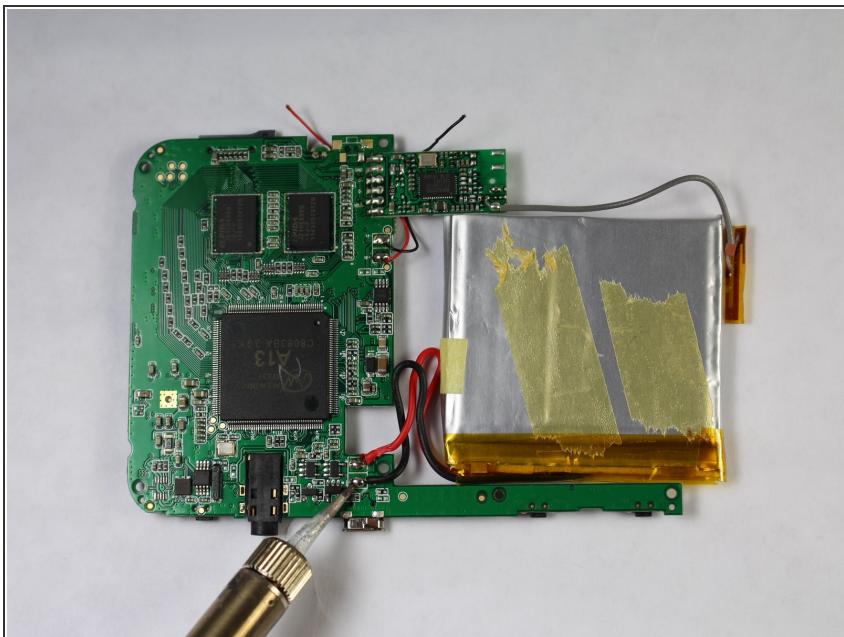

- Unsolder the gray, black, and red wires from the motherboard to release the battery.

To reassemble your device, follow these instructions in reverse order.