



# Ematic Model FTABMP2 Case Replacement

This guide will show you how to replace the case of the Ematic Model #FTABMP2.

Written By: Timothy



 **TOOLS:**


- iFixit Opening Tools (1)

## Step 1 — Case




- Use a spudger to pry open the case of your device to reveal the inside.

## Step 2

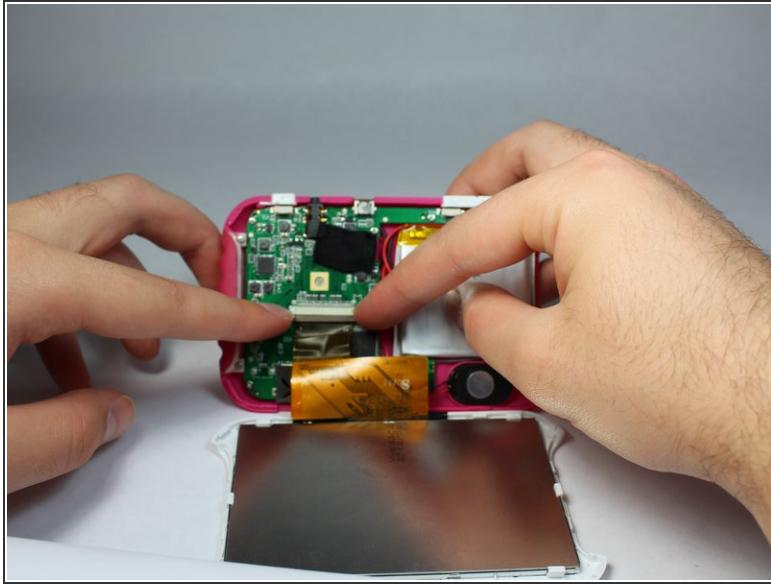

- Disconnect the LCD cable from the motherboard by pressing together the two sides of the clamp to separate the device into two.

## Step 3

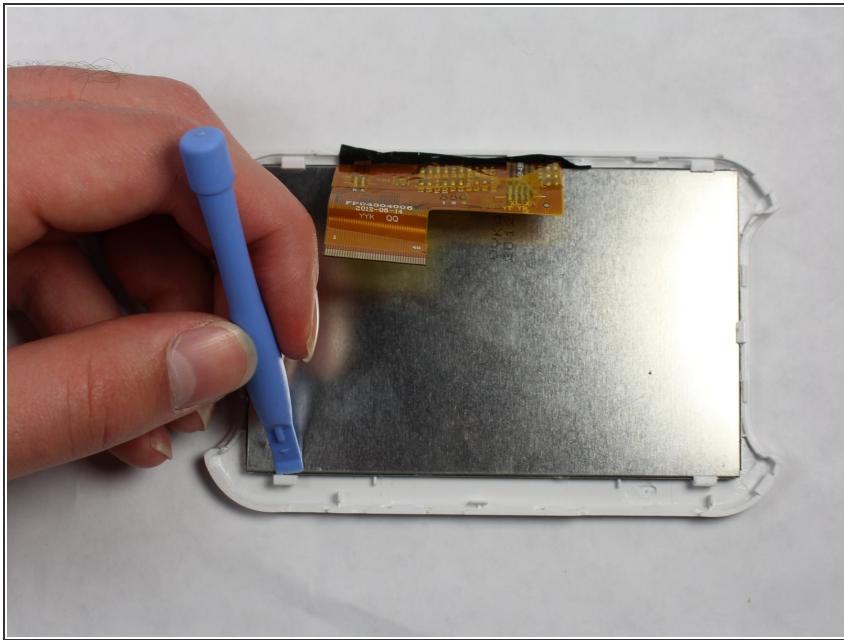



- Use the spudger to pry the LCD from the clamps holding it to the case.

## Step 4



- If you need to remove the back part of the casing, after disconnecting the LCD display from the motherboard, remove the screws holding down the motherboard. Remove the plastic power and volume buttons. remove the two side grips of the device.

## Step 5

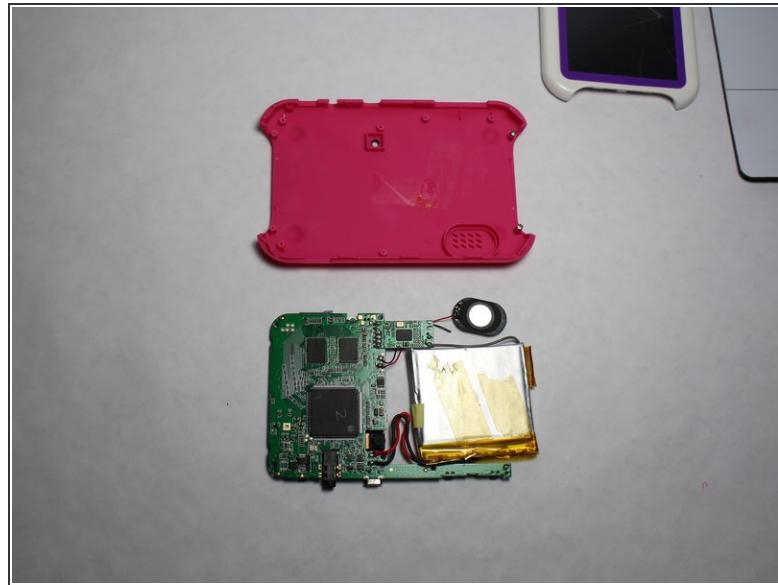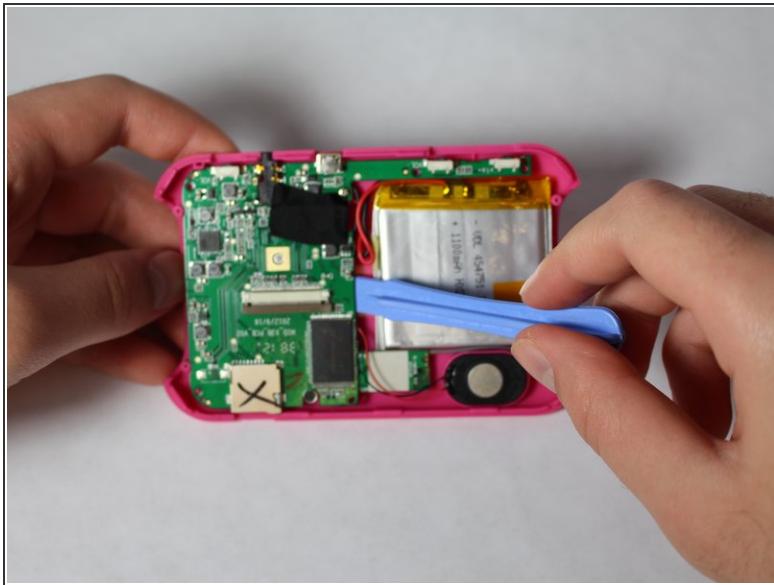

- Remove the motherboard, speaker, and battery as a whole, which leaves just the back casing of the device.

To reassemble your device, follow these instructions in reverse order.