



Ematic eGlide 4 Side Button Array Replacement

This guide will help you replace the side button array located on the right side of your Ematic eGlide 4.

Written By: Bailey Hughes



This document was generated on 2019-09-26 02:57:10 PM (MST).

INTRODUCTION

The side button array consists of the volume button, power button, M button and H button. The side button array is connected to the motherboard with a ribbon wire and to the front case with 3 screws. It is simple to remove and replace.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Rear Panel




- Remove the 4.6mm Phillips #00 screw at the base of the device.

Step 2




- Slide the rear panel away from the base parallel to the screen.

Step 3

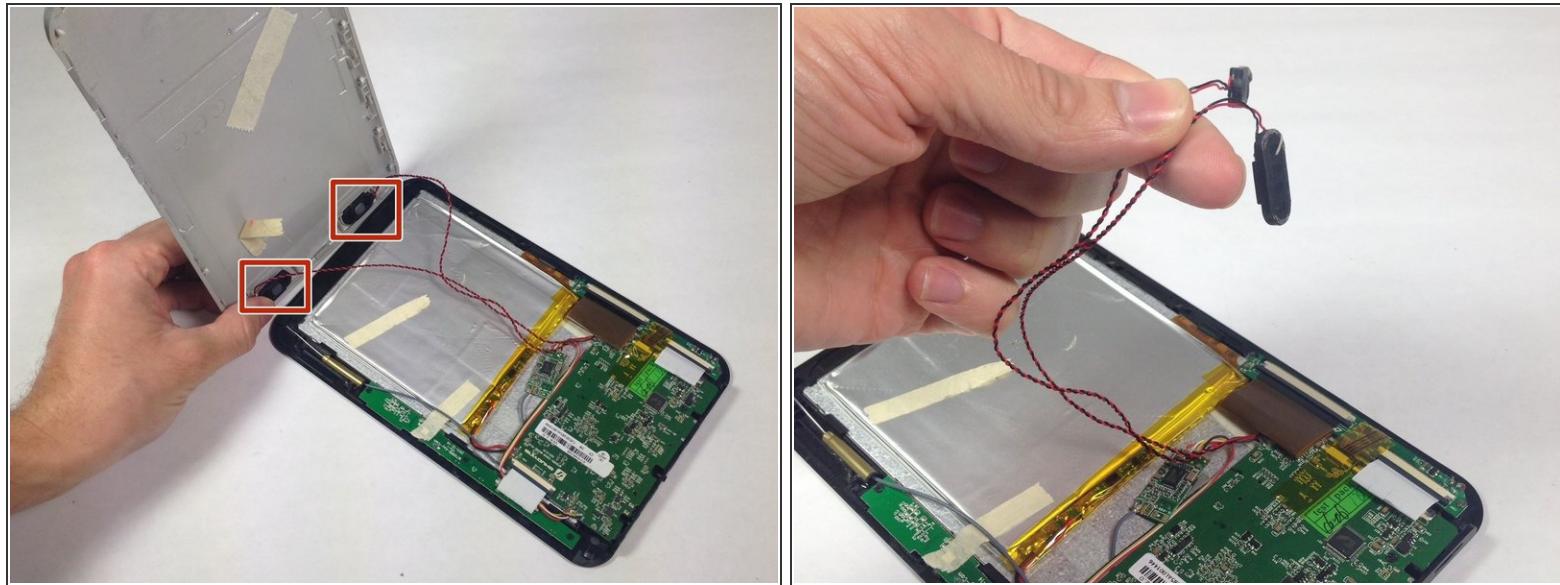



- Carefully remove the speakers from the rear panel.
- Pull the speakers off of the rear panel.

Step 4 — Side Button Array

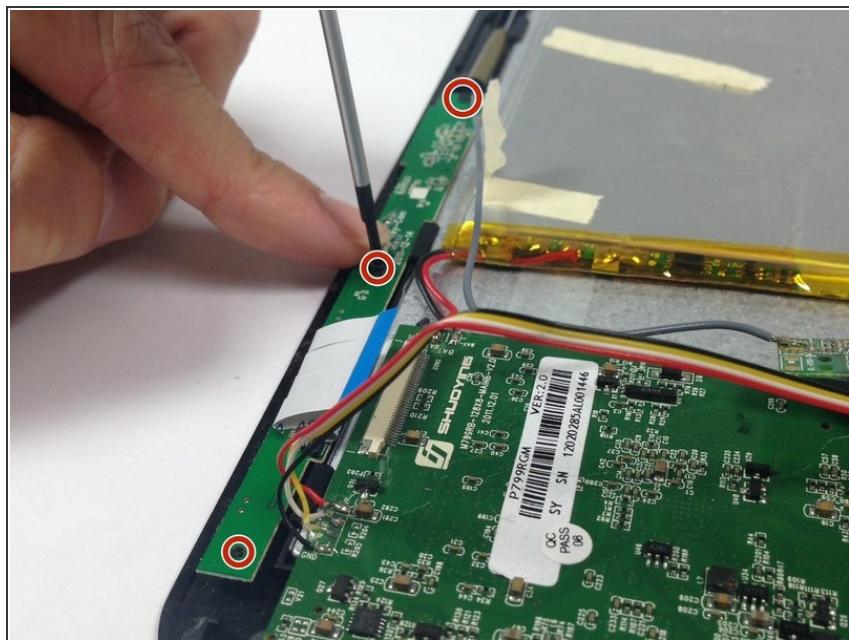


- Remove the 3 Phillips #00 4.5 mm screws from the side button array.

Step 5

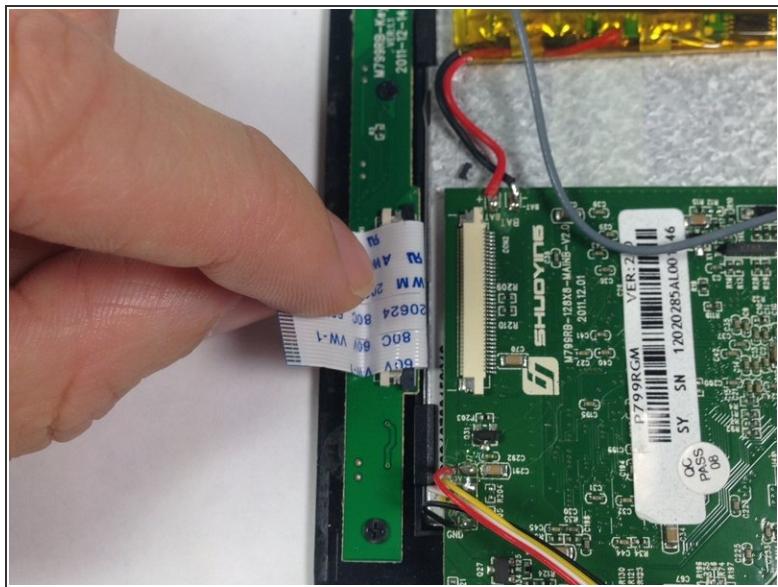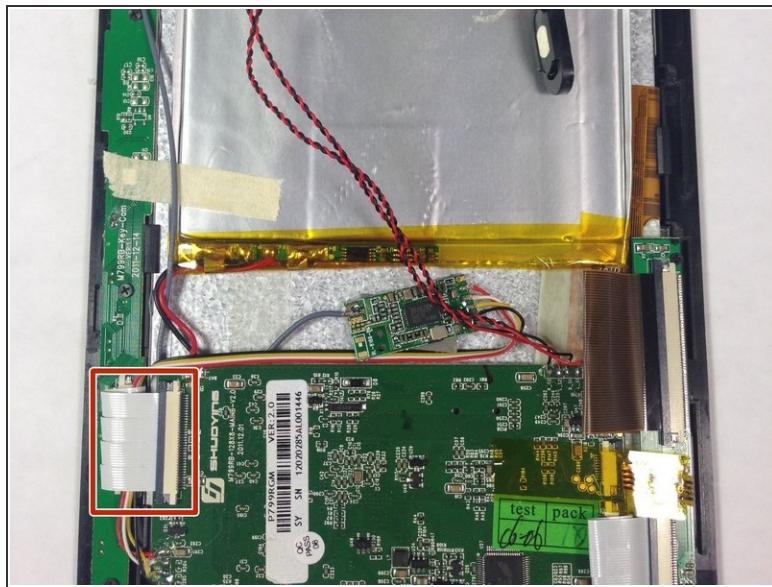

- Slide the grey ribbon wire connector clip away from the ribbon wire port on the motherboard using the pointed tip of a spudger. This process will unclip the wire from the motherboard to release connection.
- You do not need to fully disconnect the ribbon wire clip from the ribbon wire port: the clip will stay attached in a loose fit.
- Remove the ribbon wire from the ribbon wire port on the motherboard.

Step 6

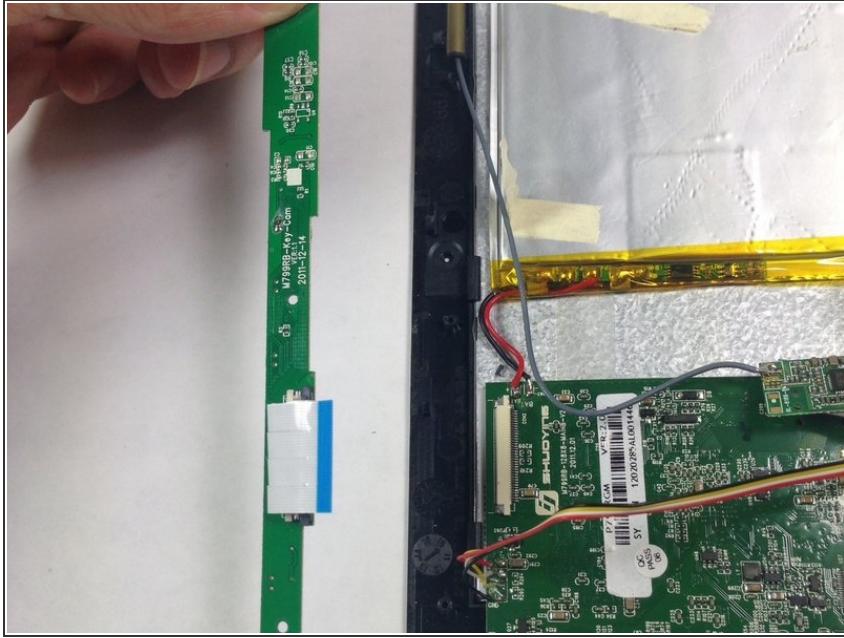

- Remove the side button array from the device.

To reassemble your device, follow these instructions in reverse order.