



Engine Cover

Remove the engine cover. Necessary for servicing the gas tank, flywheel, starting cord, and other parts.

Written By: Jacob Micallef



 **TOOLS:**

- 5/16" Socket (1)
- Phillips #2 Screwdriver (1)

Step 1 — Remove covers



- Remove 2 Phillips screws holding the plastic engine shroud. Pull the cover up and off the engine.
- Remove 3 bolts with a 5/16 socket, then pull the plastic cover off the engine

To reassemble your device, follow these instructions in reverse order.