



Envizen V100M Back Cover Replacement

This guide will show the removal process of the back cover. This will allow access to internal parts of the tablet.

Written By: nbach



INTRODUCTION


This step is used to open up the tablet so that all of the internals can be accessed.

WARNING: Use caution when removing the back cover the speakers are attached to both the back covers and the motherboard assembly

TOOLS:

- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Anti-Static Wrist Strap \(1\)](#)
- [64 Bit Driver Kit \(1\)](#)

Step 1 — Back Cover

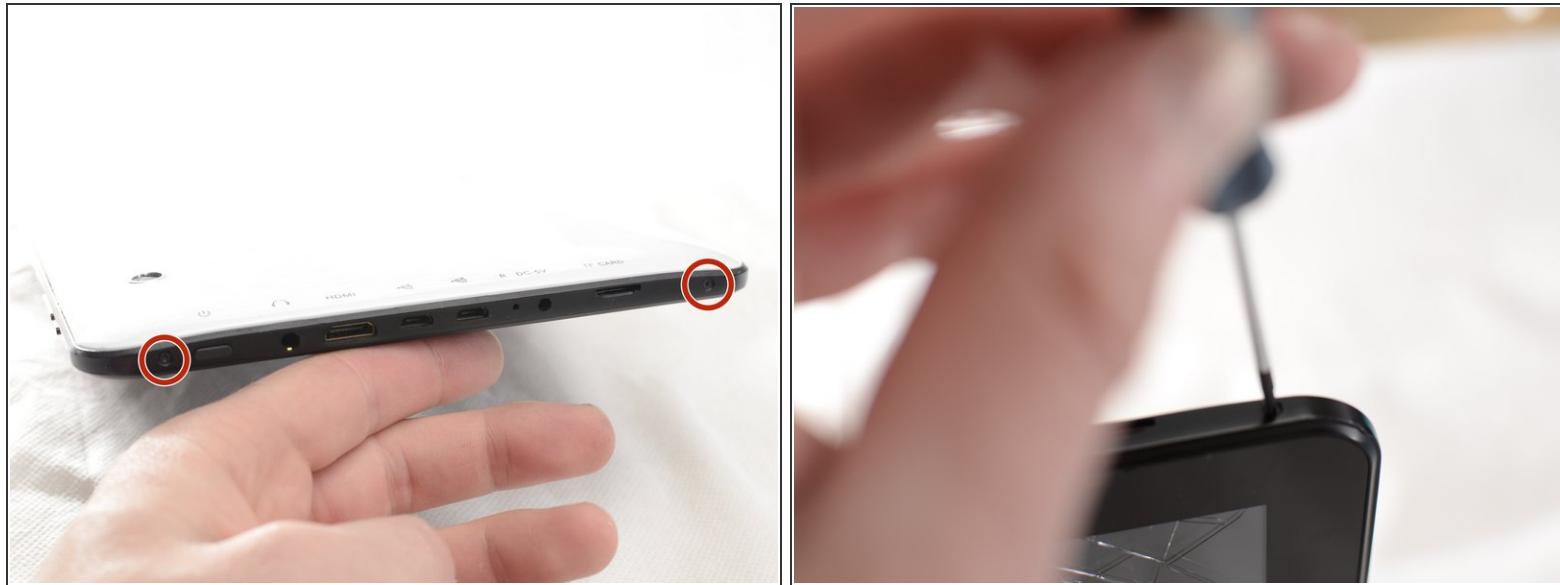

- Remove the two screws on the side of the tablet that hold the back cover in place using the iFixit PH00 screwdriver.
- The two screws for the back cover are: 1.5mm diameter x 3.5mm long

Step 2



- Pry along the edge of the device to separate the back cover from the device.

⚠ The speakers are attached to the back cover and motherboard assembly so remove carefully.

To reassemble your device, follow these instructions in reverse order.