



Eton FRX3 Case Assembly Replacement

Prerequisite only.

Written By: Kenneth Sills



INTRODUCTION

Prerequisite only.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [64 Bit Driver Kit](#) (1)

Step 1 — Rechargeable Battery Pack



- Pull the plastic tab on the battery compartment cover panel to loosen it, then pull the panel off.

Step 2



- Disconnect the battery pack wires from the device and remove the battery pack.

Step 3 — Case Assembly



- Use the T10 hexagonal tip from the iFixit Bit Driver Kit or comparable tool to remove the two 22 mm hexagonal screws on the front face of the device.

Step 4



- Remove the two 22 mm hexagonal screws on the upper rear of the device.

Step 5



- Use a long, slender screwdriver to reach and remove the two 10 mm Phillips #00 screws recessed deep in the body of the device.
- i* If you're using the 54-bit toolkit, the female hexagonal bit can be used to extend the reach of the Phillips #00 bit.

Step 6



- On the bottom of the device are two rubber feet. Using the blue plastic opening tool, pry them up and pull straight off.
- ↗* It's best to place these on their non-sticky side while you work, as you'll want them to keep as much tackiness as possible for reassembly.

Step 7



- Pull apart the two halves of the device at the seam.
- Three components from the back half will prevent you from fully opening the device, just unplug these connections as shown in the image.

To reassemble your device, follow these instructions in reverse order.