



# Eureka 1660SP Dust Cup Replacement

This guide will show you how to replace the dust cup filter of the Eureka 1660SP.

Written By: Nikhila Vijaybhaskar



## INTRODUCTION

Your vacuum's dust cup will fill up after prolonged use. For maximum vacuuming efficiency, replace your dust cup using this simple guide.

### **TOOLS:**

- **Phillips #00 Screwdriver (1)**

### **PARTS:**

- **Dust cup (1)**

## Step 1 — Dust Cup



- Press the black separator switch and lightly pull the bottom half away from the top.
- Unscrew the screws shown in the picture.

## Step 2



- You can now see the dust cup in the bottom half of your vacuum.

## Step 3



- Lift the dust cup up and out to remove it.

## Step 4



- Slot the new dust cup back into the cavity.

To reassemble your device, follow these instructions in reverse order.