



# Eureka AirSpeed Bagless Zuum Vacuum Cyclone Replacement

If heavy debris cracks or damages the cyclone, this guide outlines the replacement of the vacuum's main suction component.

Written By: Celina Burchett



This document was generated on 2019-09-23 08:47:59 AM (MST).

## INTRODUCTION

If you determine that your vacuum is no longer picking up debris, this guide will help you to replace a damaged cyclone to increase the suction.

### TOOLS:

- T15 Security Torx Screwdriver (1)

## Step 1 — Cyclone



- Press the grey dust cup release button and gently pull the dust cup towards you.

## Step 2



- Twist the large, black portion of the cyclone/dust cup to the right to unlock the black cover and cyclone from the clear dust cup.

## Step 3



- Twist the clear collar to release the wash screen and small circular collar exposing the cyclone attached to the black head.

## Step 4




- Lift the latch on the top of the black cyclone head to open. You can now see the foam filter inside the cyclone portion of the dust cup.

## Step 5



- Remove the white filter by lifting the gray foam filter handle, exposing the screws attaching cyclone to the black head.

## Step 6

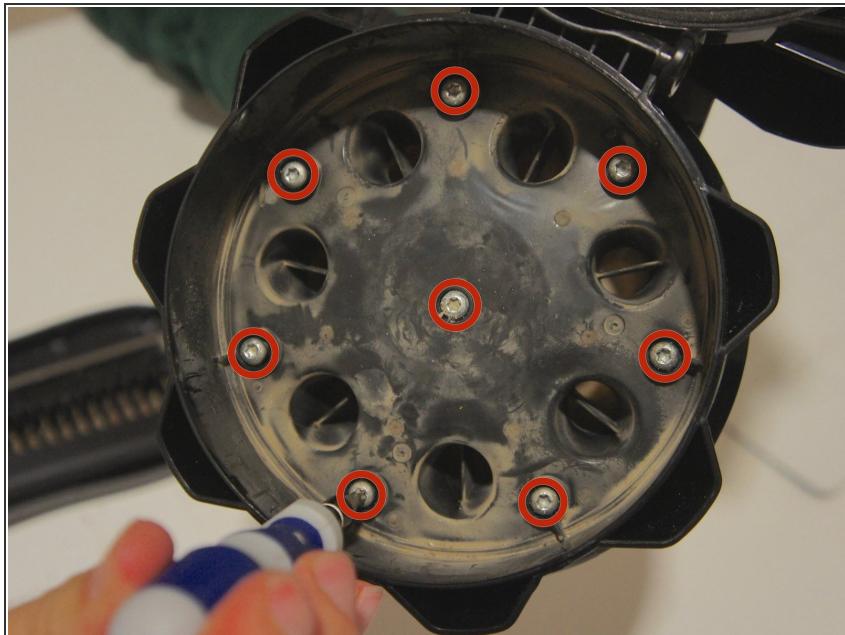

- Using a T15 Security Torx Screwdriver, remove the 8 screws.

## Step 7



- Upon removal of the screws, the cyclone and black head cover will come apart.

To reassemble your device, follow these instructions in reverse order.