



# Eureka AirSpeed Bagless Zuum Vacuum HEPA Filter HF16 Replacement

Every six months, the HEPA filter must be replaced to ensure maximum vacuum suction.

Written By: Celina Burchett



## INTRODUCTION

If you determine that your vacuum is no longer picking up debris or it has been six months since the last HEPA filter replacement, this guide will help you to replace the filter to increase the suction.

## Step 1 — HEPA Filter HF16




- Press the grey dust cup release button and gently pull the dust cup towards you.

## Step 2



- Twist the exposed, black HEPA filter cover, found underneath the removed dust cup, to the left (counterclockwise) until it releases.

## Step 3

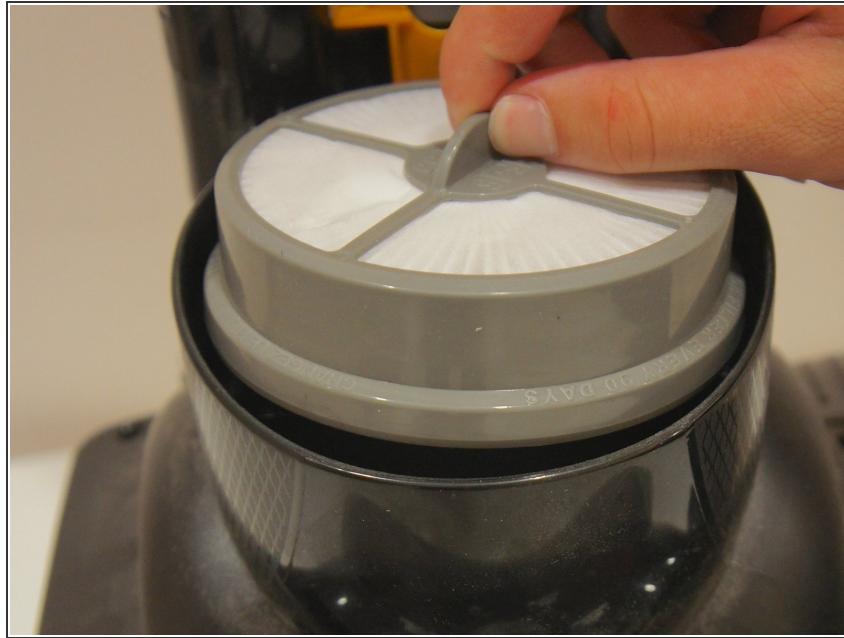

- Pull the grey handle on the HEPA filter to remove the used HEPA filter.

## Step 4



- Place new HEPA filter into holder.

To reassemble your device, follow these instructions in reverse order.