



Eureka AirSpeed Bagless Zuum Vacuum Wash Screen Replacement

If your wash screen becomes clogged or overloaded, this guide gives instruction on its cleaning and replacement.

Written By: Celina Burchett



This document was generated on 2019-09-23 08:11:14 AM (MST).

INTRODUCTION

If you determine that your vacuum is no longer picking up debris, this guide will help you to replace the wash screen to increase the suction.

Step 1 — Wash Screen



- Press the grey dust cup release button and gently pull the dust cup towards you.

Step 2



- Twist the large, black portion of the cyclone/dust cup to the right to unlock the black cyclone from the clear dust cup.

Step 3



- Twist the clear collar to release the wash screen and small circular collar.

Step 4



- If screen is beyond washing clean or is cracked, connect new screen to cyclone and collar.

To reassemble your device, follow these instructions in reverse order.