



# Eureka EasyClean 71C Bottom Cover Replacement

This guide covers how to remove the bottom cover of the device as a prerequisite to all the other replacement guides.

Written By: Tanner Durnil



This document was generated on 2019-09-22 06:31:19 AM (MST).

## INTRODUCTION

This guide serves as a prerequisite only. The steps covered in this guide are used in all the replacement guides.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #2 Screwdriver](#) (1)
- [Metal Spudger](#) (1)

## Step 1 — Bottom Cover



- Unscrew the two 18.1 mm PH2 Phillips head screws on the bottom of the vacuum.

## Step 2




- Pry off the Riser Visor using the plastic opening tool.

## Step 3



- Remove the screw cap using the metal spudger.
- *(i)* First-time removal of the screw cap can be difficult. The screw cap isn't vital, so don't worry about damaging the screw cap and just keep trying until it comes out.

## Step 4

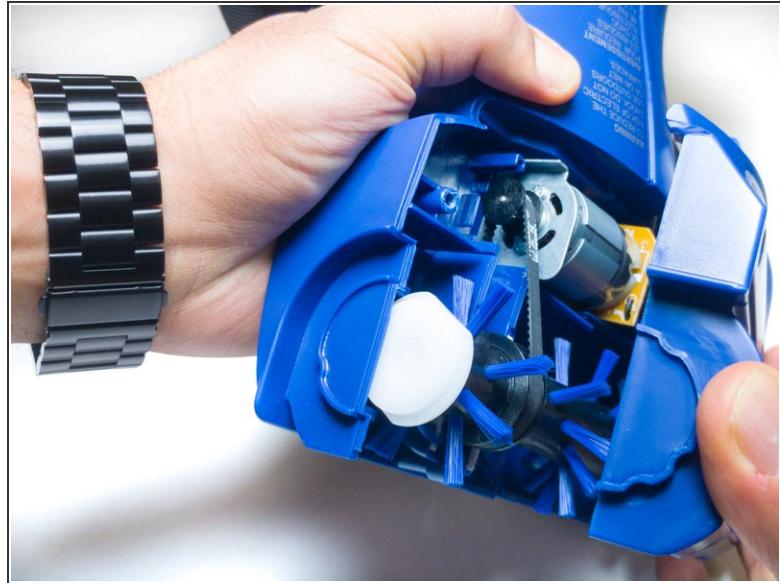

- Unscrew the 14mm PH2 Phillips head screw.
- Pull the bottom cover off of the rest of the casing.

To reassemble your device, follow these instructions in reverse order.