


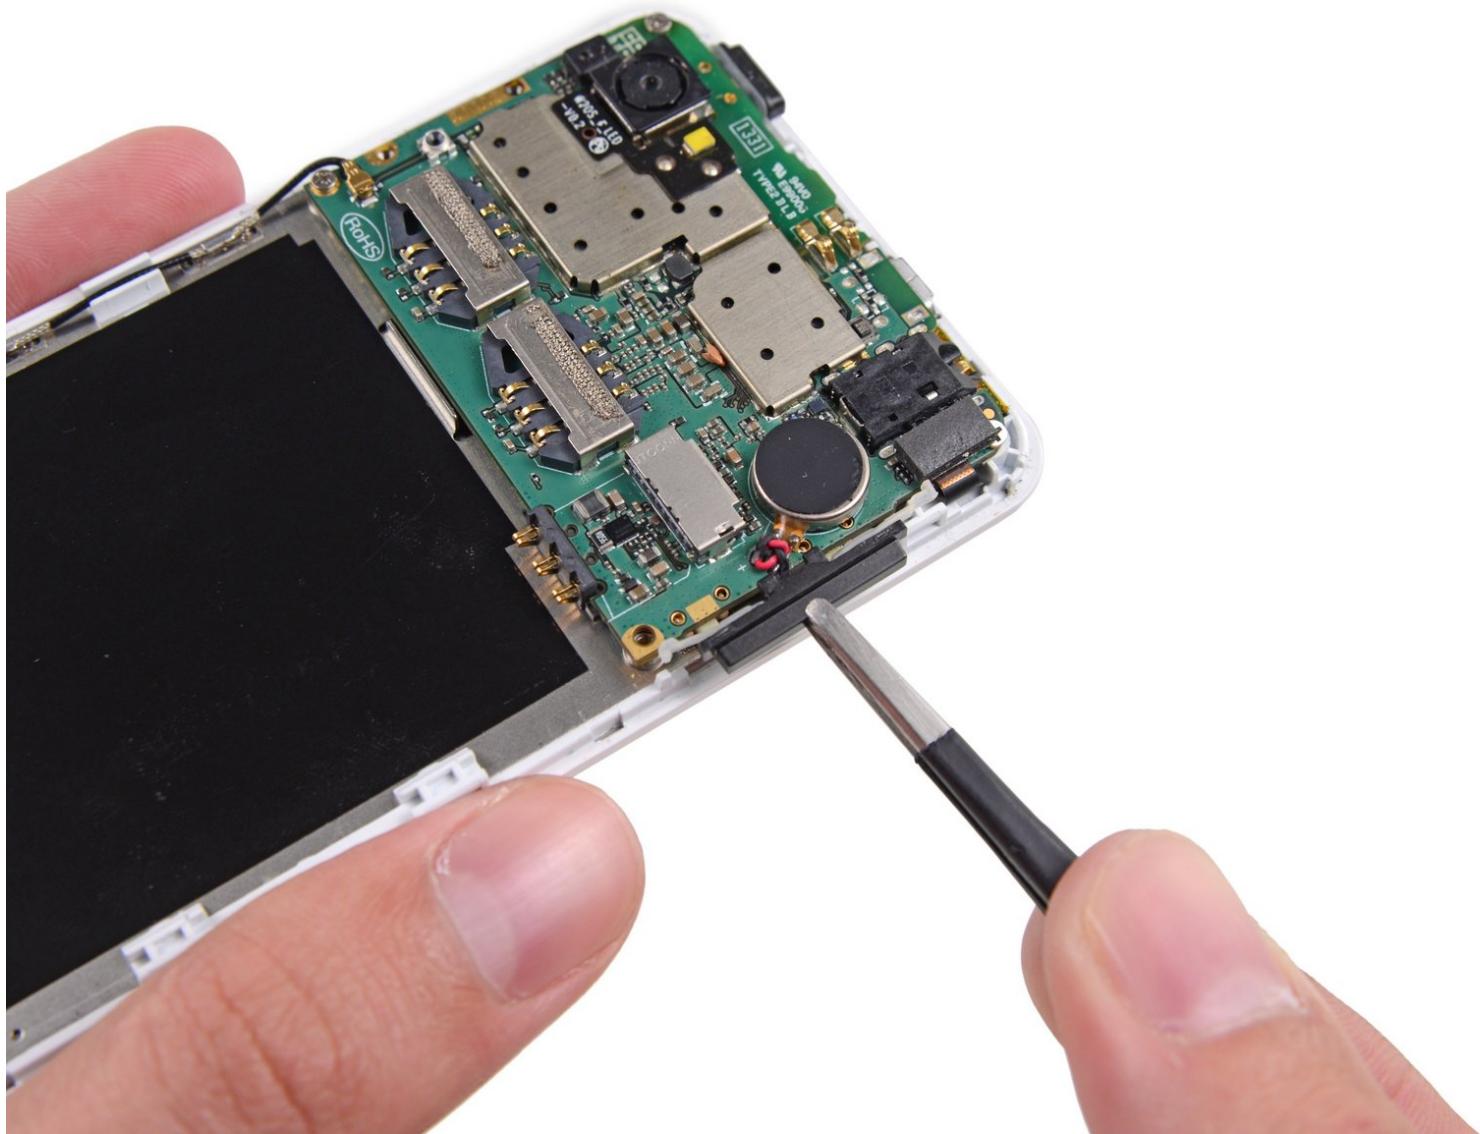

Fairphone 1 Motherboard Assembly Replacement

Prerequisite guide to remove the motherboard. Used for motherboard, camera, and display assembly guides.

Written By: Andrew Optimus Goldheart



This document was generated on 2019-09-28 11:23:45 AM (MST).

INTRODUCTION

Prerequisite guide to remove the motherboard. Used for motherboard, camera, and display assembly guides.

TOOLS:


- [Tweezers](#) (1)
- [Spudger](#) (1)

Step 1 — Motherboard Assembly



- Use tweezers to remove the volume rocker and power buttons from the display assembly.
- During reassembly make sure the orientation of the buttons is correct. The rubber backings must fit into the channels in the assembly.


Step 2

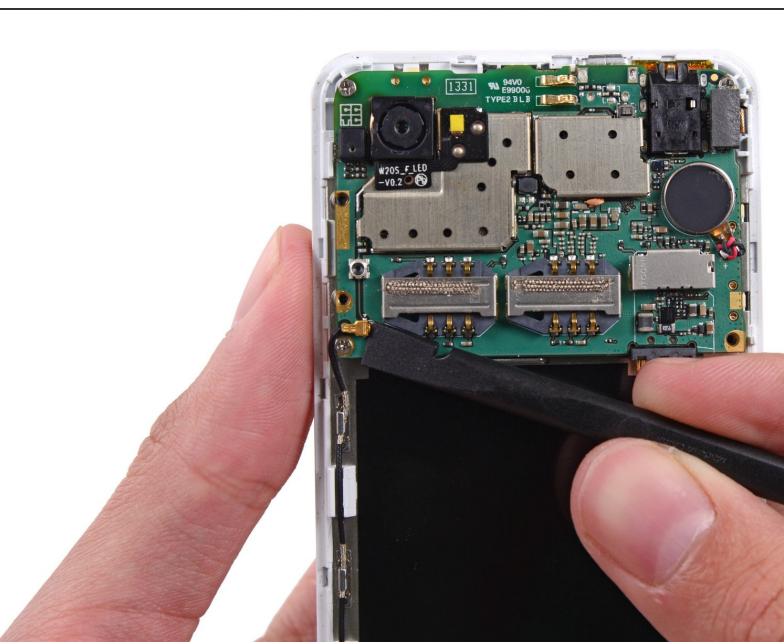

- Use the flat end of a spudger to disconnect the antenna cable connector.


⚠ Make sure to only disconnect the connector from its socket, and **not** the entire socket from the board.

Step 3

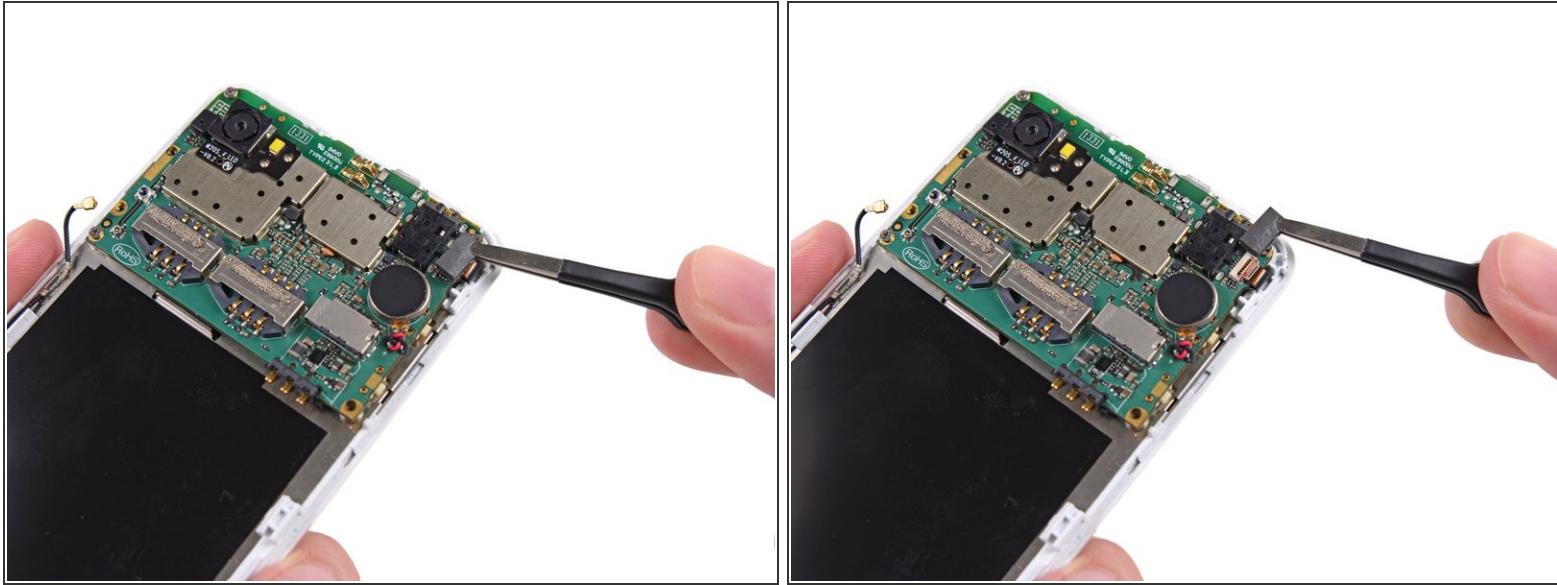


- Use tweezers to remove the adhesive foam tape from the top of the digitizer cable ZIF socket.

Step 4

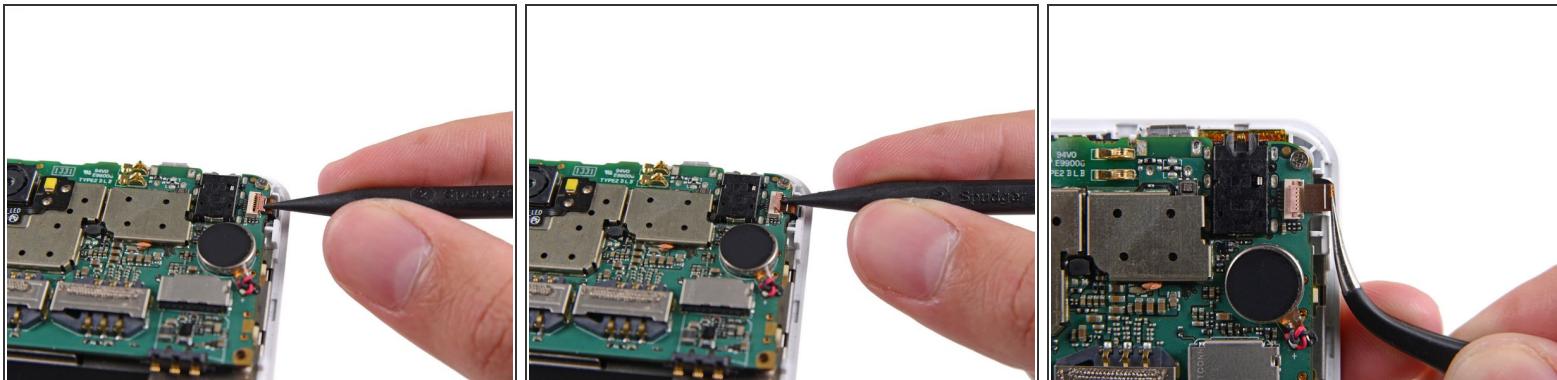


- Use the tip of a spudger to flip open the tab on the digitizer ZIF connector.
- Use tweezers to pull the digitizer cable away from its socket on the motherboard.

Step 5

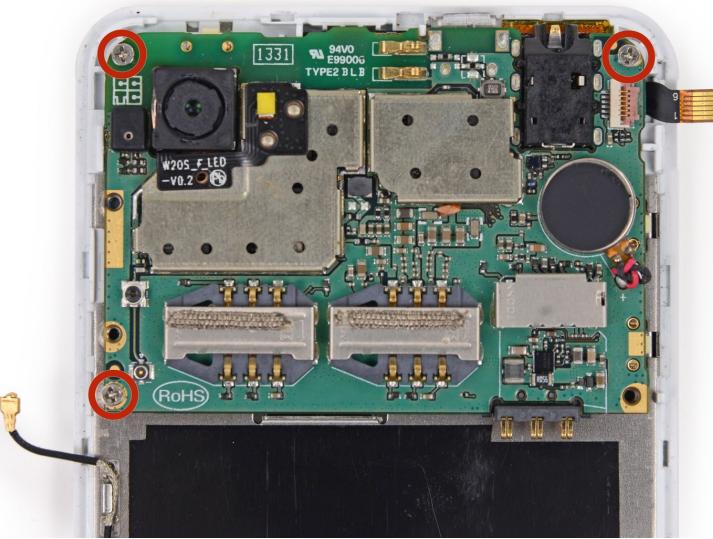

- Remove the three 2.5 mm Phillips #000 screws securing the motherboard to the display assembly.


Step 6

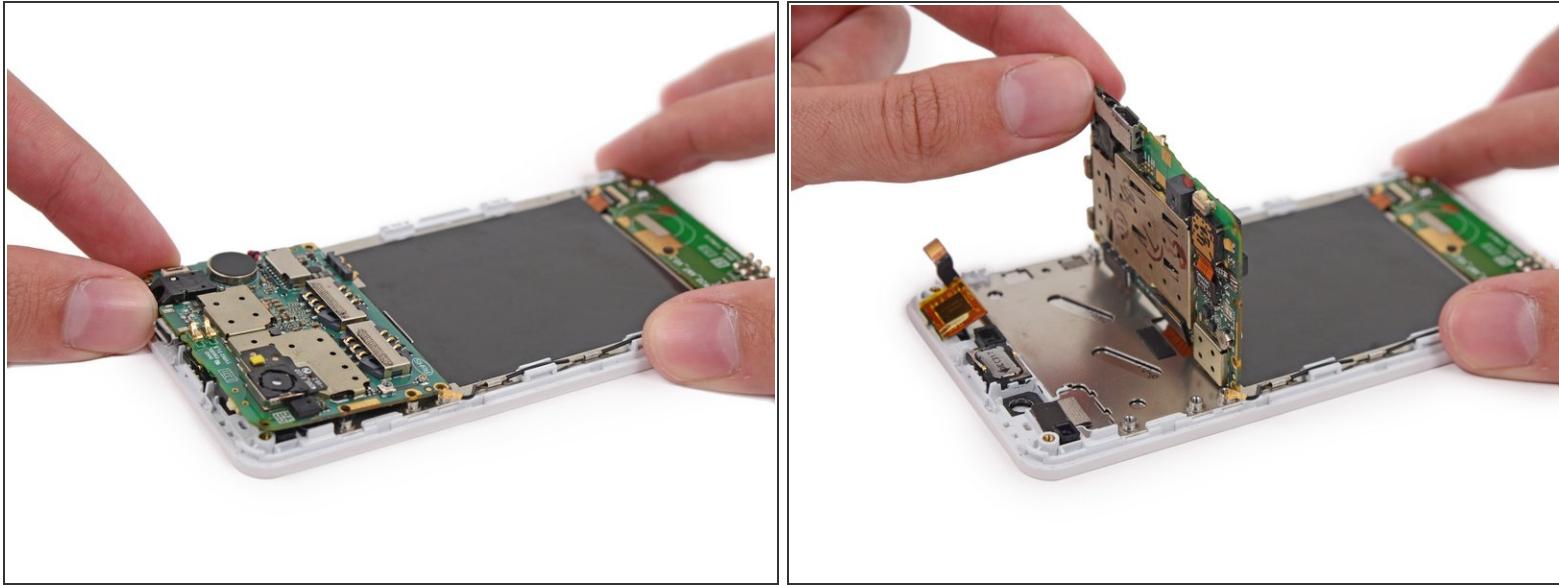

⚠ Do **not** try to remove the motherboard just yet, as it is still connected to the display assembly by the display data cable.

- Gently lift the top end of the motherboard up to expose the display data cable.
- **(i)** The rear-facing camera may be adhered to the display assembly. Try to pry it and the motherboard up together.

Step 7

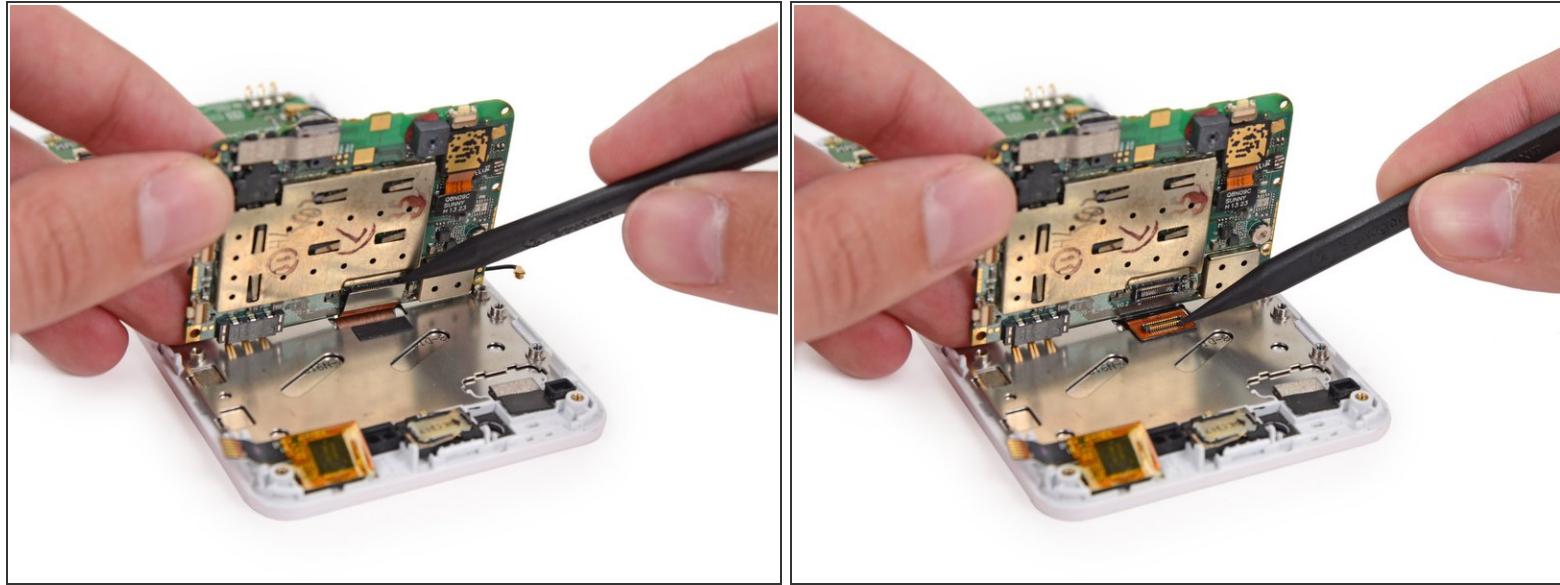

- Use the tip of a spudger to disconnect the display data cable from the back of the motherboard.

Step 8



- Remove the motherboard from the display assembly.

To reassemble your device, follow these instructions in reverse order.